 


# RC QUADCOPTER MANUAL

Please read the instructions before operating the product.

8+  
YEARS

 
2.4GHZ

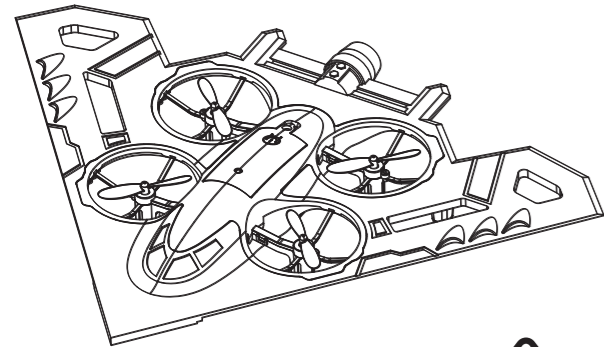


K: 43-698-219 | T: 72-465-134

**Attention:** The included rechargeable battery is not fully charged prior to shipment and must be charged before the first use.

## DRONE

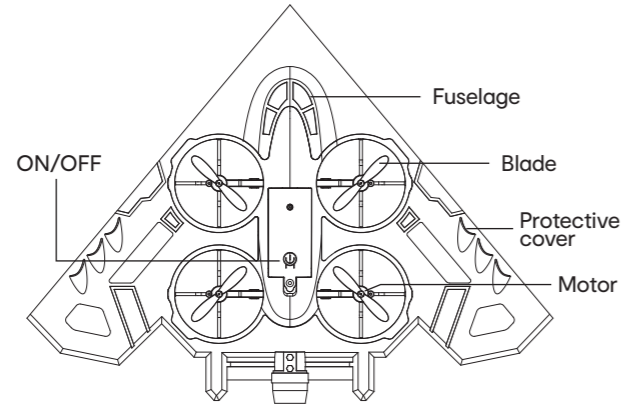

## REMOTE CONTROL

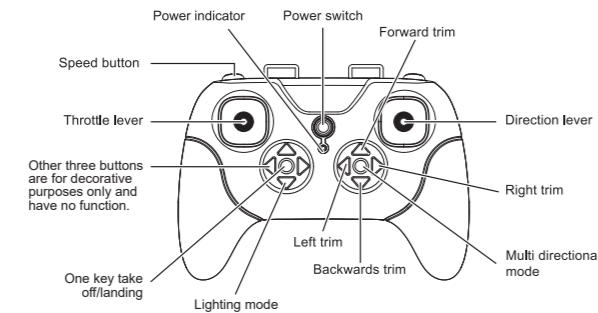 


1

## BATTERY INSTALLATION

 - Unscrew to open battery cover, insert 4 x 1.5V AA batteries, (see Diagram 1)
- Replace battery cover.

Attention: Remove batteries after you have finished using your product.

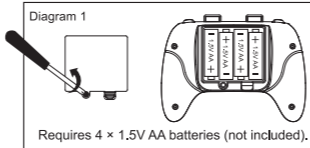


## LITHIUM BATTERY CHARGE INSTRUCTIONS

**Attention:** Do not charge battery immediately after each play, let the battery cool down .

- Turn off drone.
- Connect USB charging cable plug with drone charging interface. (see Diagram 2)
- Plug the large end of USB cable into a 5Vd.c 2A charger (not supplied) or USB port only.

The USB indicator light up when it has started charging.

 - Once the indicator light turns off, the drone is fully charged. Unplug the USB charging cable from computer USB interface and disconnect with drone.

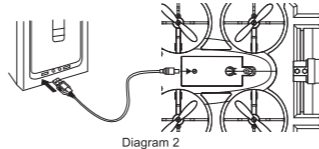

## CONTROL METHOD

Attention: Select a large, wide-open area for flying, and make sure that there are no obstructions, animals, people or overhead powerlines nearby. Do not operate the drone in strong wind, rain or snow etc.

- Press and hold the power switch about 3 seconds to turn on the drone and place on the flat ground, the LED lights on the drone will be flashing. Ensure you are least 2 metres away from the back of the drone.
- Press the power switch to turn on the remote control.
- Push the throttle lever up, you will hear one beep sound. Then push it down and you will hear a beep sound again. If the power indicator on the remote control stops flashing, the pairing is successful. If pairing is not successful, please repeat steps 1-3.
- The drone's gyroscope needs to be calibrated after pairing. Pull the throttle lever and direction lever to the lower right at the same time (see Diagram 3). You will hear one beep sound and

2

the LED light on drone will change from flashing to soft colour transition. This means that the calibrating is successful.

- There are two ways to fly / launch the drone:

Normal mode: Pull the throttle lever to the lower left and the direction lever to the lower right at the same time (see Diagram 4), the drone will unlock while the propeller starts to work.

Altitude hold mode: No need to unlock the drone, press the one key take off / landing button after pairing the drone. The drone will automatically rise to a height of about 1.5 metres. Now you can operate your drone.



## HOW TO CONTROL THE DRONE

		<p>ascend</p> <p>descend</p> <p>Push the throttle lever up slowly, the drone will ascend.</p> <p>Pull the throttle lever down slowly, the drone will descend.</p>
		<p>Move the throttle lever to left, the drone will rotate anticlockwise.</p> <p>Move the throttle lever to right, the drone will rotate clockwise.</p>
		<p>forwards</p> <p>backwards</p> <p>fly to the left</p> <p>fly to the right</p> <p>Push the direction lever up, the drone will fly forward.</p> <p>Pull the direction lever down, the drone will fly backwards.</p>
		<p>Move the direction lever to left, the drone will fly to the left.</p> <p>Move the direction lever to right, the drone will fly to the right.</p>

**Tip:** The LED light will flash red slowly when the drone is low in battery. Please recharge the battery when the light is flashing.

3

## MULTI DIRECTIONAL MODE

In multi directional mode, any side of the drone can be treated as the front of the drone.

How to transfer normal state to multi directional mode:

- You can enter multi directional mode during stable flying or before flying.
- Press the multi directional mode button, you will hear a beep sound, that means the drone has entered multi directional mode. You can play the drone under multi directional mode now.
- Press the multi directional mode button again, you will hear a beep sound, the drone will turn back to the normal flying mode.

 
## HOW TO CHANGE THE SPEED MODE

- Low speed mode: It is the default speed mode of drone.
- Medium speed mode: Press the speed button, the drone will be in the medium speed mode when you hear two beep sounds.
- High speed mode: Press the speed button again, the drone will be in the high speed mode when you hear three beep sounds. Press the speed button again, the drone will go back to the low speed mode when you hear a beep sound.

## HOW TO TRIM THE DRONE


Slowly raise the throttle stick and let the drone lift-off the ground, you can use the trim to correct the action if the drone leans to the wrong direction.

- If the drone drifts forward, press the backwards trim button as shown in Diagram 5 to trim it backwards until it stops drifting. If the drone drifts backwards, press the forward trim button as shown in Diagram 5 to trim it forward until it stops drifting.

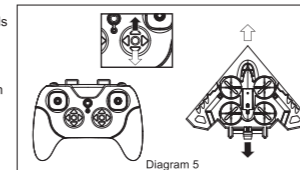

4

 - If the drone drifts to left, press the right trim button as shown in Diagram 6 to trim it to right until it stops drifting. If the drone drifts to right, press the left trim button as shown in Diagram 6 to trim it to left until it stops drifting.

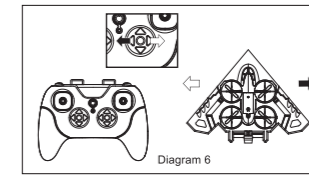

## HOW TO LAND THE DRONE

There are two ways to land the drone.

- Press the one key take off / landing button to land the drone.
- Hold the throttle lever down until the drone lands on the ground.

5

## WARNING

- Please follow the instructions for correct installation and use. Some parts require assembly by an adult.
- This product contains small parts and is a choking hazard.
- Do not touch the hot motor and batteries.
- Do not touch working propellers.
- Do not fly towards yourself or other people.
- Adult supervision is required.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix old and new batteries or batteries of different types.
- Do not short circuit the battery or put the battery in fire.
- Do not leave the toy unattended while charging it.
- When the battery is low, please return the drone and recharge it.
- Charge the toy on non-flammable surfaces and keep it away from flammable items.
- Turn the charger off when the toy's battery is charged, and always unplug it from the toy.
- If the toy has been damaged, immediately stop use, unplug, and safely move the toy away from flammable materials.
- Follow the manufacturer's instructions for charging the toy. Do not charge longer than recommended.
- Do not use the product for a long time, Remove the battery after use.
- To avoid injury, do not touch the rotating parts.
- Do not impact or drop the drone or remote control.
- Please use a clean soft cloth to clean the product.
- The user is responsible for ensuring that the product will not cause harm to themselves or others.
- The manufacturers and dealers accept no responsibility for injuries or damage to property caused by improper use.
- The packaging and instructions contain important information of products, please keep for future reference.
- Only fly during the day and keep your drone within visual line-of-sight. This means being able to see the drone with your own eyes (rather than through a device) at all times.
- Do not fly your drone higher than 120 metres (400ft) above the ground.
- Keep your drone at least 30 metres away from other people.
- Do not fly your drone over or near an area affecting public safety or where emergency operations are underway (without prior approval). This could include situations such as a car crash, police operations, a fire and associated firefighting efforts, and search and rescue.
- Only fly one drone at a time.
- Do not fly over or above people. This could include beaches, parks, events, or sport ovals where there is a game in progress.
- Keep at least 5.5km away from controlled aerodromes if your drone weights more than 100g. Flying within 5.5km of a non-controlled aerodrome or drone landing site (HLS) is possible, but only if no manned aircraft are operating to or from the aerodrome. If you become aware of manned aircraft operating to or from the aerodrome/HLS, you must manoeuvre away from the aircraft and land as soon as safely possible.
- Do not operate your drone in a way that creates a hazard to another aircraft, person or property.
- Respect personal privacy, do not record or photograph people without their consent—this may breach state laws.

6