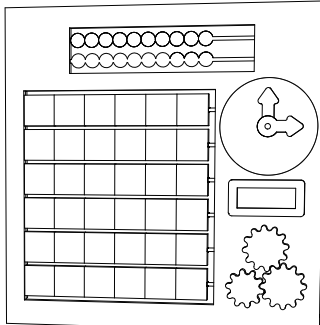
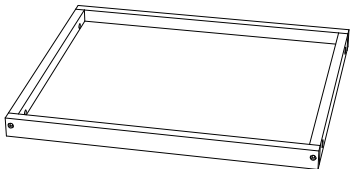
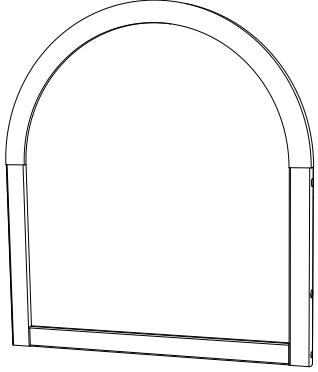
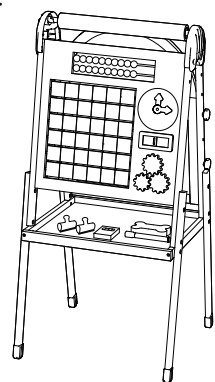
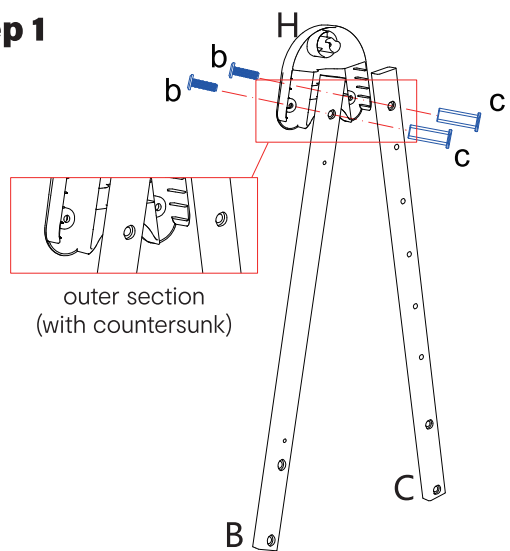


Activity Arch Easel

Assembly Instruction


3+ years

K: 43-698-943 | T: 72-439-234


HARDWARE	PARTS LIST
     a x 12 D = 6 mm L = 22,5 mm b x 4 D = 6 mm L = 14 mm c x 12 D = 6 mm L = 17,5 mm d x 4 D = 4 mm L = 34 mm e x 4 Tools Required  Cross screwdriver (Not Included)	       A x 4 B x 2 C x 2 D x 1 paper roll x 1 E x 1 G x 1       H x 2 plastic holders I x 4 anti-slip base cover J x 1 eraser K x 1 marker L x 1 chalk set M x 2 plastic clips
WARNING: CHOKING HAZARD- SMALL PARTS, NOT SUITABLE FOR CHILDREN UNDER 3 YRS. CAUTION: ADULT ASSEMBLY AND SUPERVISION REQUIRED. WARNING: UNASSEMBLED PARTS CONTAIN SCREWS AND WITH FUNCTIONAL SHARP POINTS. PLEASE KEEP UNASSEMBLED PARTS AWAY FROM SMALL CHILDREN. CAUTION: PLEASE CHECK CONDITION OF ITEM REGULARLY, AS SCREWS MAY LOOSEN WITH USE OVER TIME. TIGHTEN SCREW FITTINGS IF NECESSARY. ATTENTION: ALL ART MATERIALS LIKE CHALK AND MARKER, MAY CAUSE STAINS. ALWAYS PROTECT CLOTHES, CARPET, WORK SURFACE, FURNITURE AND OTHER OBJECTS. ALWAYS USE A PROTECTIVE COVER TO PREVENT STAINS. WARNING: DO NOT STAND OR SIT ON THE PRODUCT. DO NOT USE THE PRODUCT AS A STEP LADDER. DO NOT USE THE PRODUCT UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. WARNING: FOR SAFETY REASONS, REMOVE ALL TAG, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD. MADE IN CHINA Read and follow instructions carefully and keep for future reference. 	ASSEMBLY Step 1  outer section (with countersunk)

ASSEMBLY


Step 2

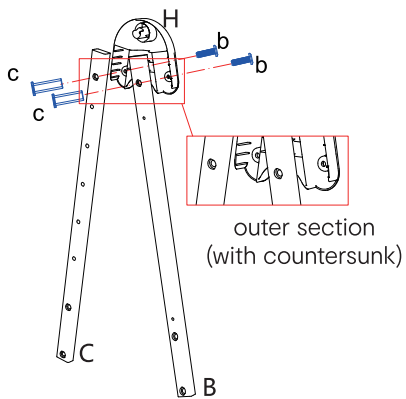


Step 3

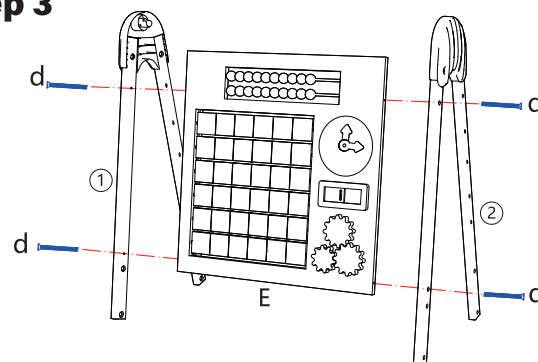


Step 4

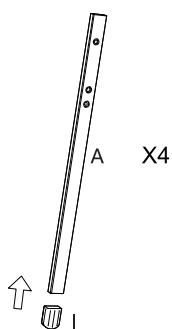


Step 5

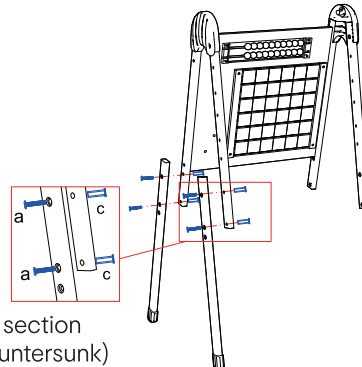


Step 6

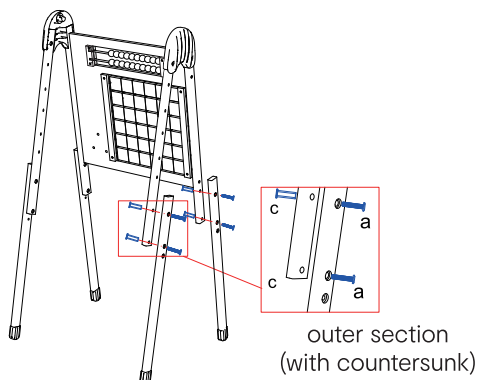


Step 7

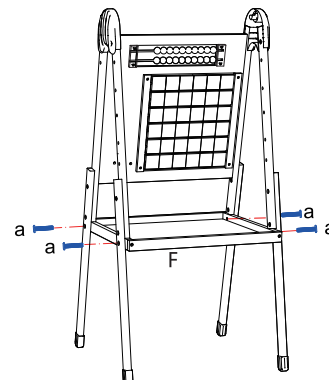

Step 8

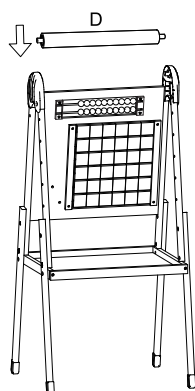

Step 9

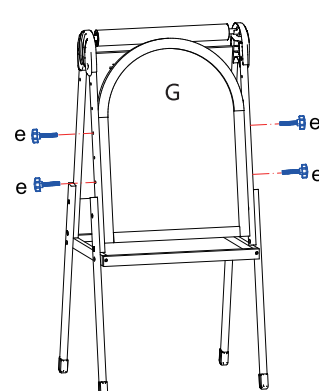

Adjustable height:

