

 
95mmx135mm

anko
4K Flip Screen Camera
Instruction Manual
K: 43-699-339 | T: 72-415-788
Model No. ZB2025091604

- Accessories:
- › 1 x Camera
 - › 1 x Lanyard
 - › 1 x Camera bag
 - › 1 x Lens cleaning cloth
 - › 1 x Charge & data cable
 - › 1 x Instruction manual



Micro SD Card NOT included

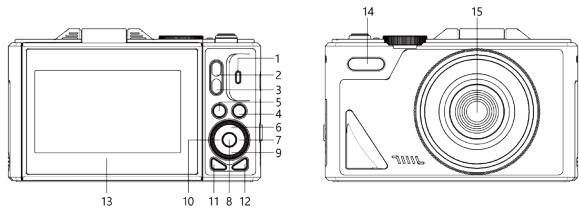

1. Charging/working indicator light

2. Digital zoom in

3. Digital zoom out

4. Delete button

5. Playback button

6. Up button/shortcut button for fill light

7. Right button

8. OK button
9. Down button

10. Left button

 
11. DISP button

12. Menu button

13. Display screen

14. Fill light

15. Lens

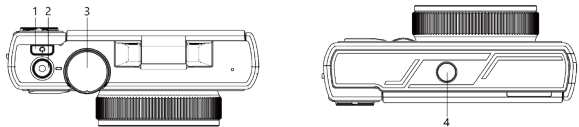

1. POWER button

2. Photo button

3. Mode Dial
4. Tripod hole



1. Memory card slot

2. Type-C USB interface
3. Battery compartment

- Product Specifications:**
1. Product dimensions: 115 X 54 X 70mm
 2. Display size: 3.0" HD IPS
 3. APP: HDV CAM
 4. WIFI: 2.4G
 5. Input: 5V DC 1A
 6. Battery capacity: 1150mAh
 7. Optimal Shooting Distance: 3-5m


Operating Instructions
After the camera is turned on, it defaults to video shooting mode.



Rotate the mode dial to select the desired mode

Icon	Mode	Illustrate
	Photo	Take a single photo normally
	Auto	Automatically cycle take photos after a specified number of seconds
	Timer	Take a single photo after a specified number of seconds
	Burst	Take a specified number of photos in succession
	Video	Normal recording mode
	Slowly	Slow motion shooting
	Lapse	Compress time to record video
	Loop	Recording infinite loop
	Video+Photo	During the recording video, you can capture according to the set capture interval single photo

 Power On/Off The Camera
Press the power button, the camera will turn on automatically.



To turn off the camera, press and hold the power button for 3 seconds.

Note: When you turn on the camera for the first time, you need to press and hold the power button to turn it on. When there is no battery in the battery compartment, you need to press and hold the power button to turn on the camera after you put the battery in.

 
Set The Camera
You can make custom settings of the camera. After the camera is turned on, press the menu button to open the menu settings.

Menu Settings

1. Sub-menu for current mode

2. System settings


Insert And Format The Memory Card
A class 10 or higher speed memory card is recommended to normal use.
1. Insert the memory card into the memory card slot until you hear a "click".

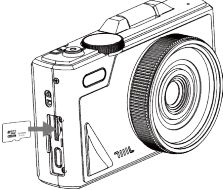

Insert the memory card in the direction shown in the diagram, paying attention to the edges and corners.

2. To remove the memory card: Push the memory card in and it will automatically pop out.

 Format The Memory Card
It is recommended to format the memory card before the first use. To format the memory card, press the menu button to open the menu system. Then press the left or right button to switch to system settings. Press Up or Down to find "Format" and press OK to get the sub-menu. Select "Format" to format the memory card.

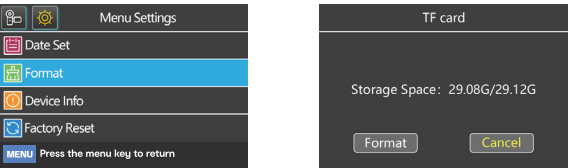

Note: If the memory card is not native format, the screen will pop-up a prompt: "Unsupported file system, do you want to format?" please format the memory card as above operation. Formatting the memory card will erase all the data stored on it and the data will be irrecoverable. Save your important data on PC before formatting.

Focus Function
This function includes 3 focus modes: automatic focus/manual focus mode/fixed focus. Press menu button Open the menu, then press the left/right button to switch to system settings, press the up/down button to find "Video Focus Mode", press OK button to enter focus mode. Select the mode you need.

Fully Automatic Focus
In this mode, you only need to keep the camera steady when taking pictures or videos, and the camera will automatically focus. Once done, press the capture button.

Manual Focus
In this mode, when taking a photo or recording a video, half-press the photo button and the focus frame will appear on the display until the camera focuses clearly. Then press the photo button all the way down to take the clearest photo or start recording with the clearest image.

Fixed Focus
In this mode, you need to press the shooting button to taking pictures or videos, and the screen will clearly show the image of the object being shot, and then press the shooting button to the end. If you release the capture button to take pictures or record videos, the pictures and videos will not be clear.

Fill Light
In video mode, pressing the up button can quickly turn on or off the fill light. In photo mode, the fill light has three flash modes and pressing the up button can quickly switch between the three modes.

	No flash
	Auto flash
	Mandatory flash

Note: When the fill light is in automatic flash mode, it will only flash when taking photos in a relatively dark environment. When switched to forced flash mode, the fill light will always be on.

Playback
Press the playback button to enter the media library. Select the video or photo file you want to view, then press the OK button to enter the corresponding file to view the video and image stored in the camera memory card.


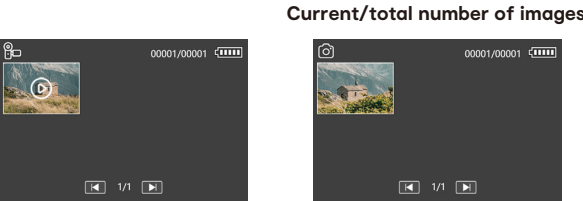 



Figure 1: Video playback

 Figure 2: Photo playback

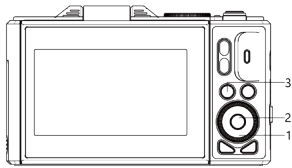


1. Press the delete button to delete a photo/video. Note: Once deleted, it cannot be recovered.
2. Press the OK button to play/pause the video.
3. Press the playback button to exit video/photo playback.

 Connect To Computer
1. Connect the Type-C USB port of the camera and the USB port of the computer with supplied USB cable.

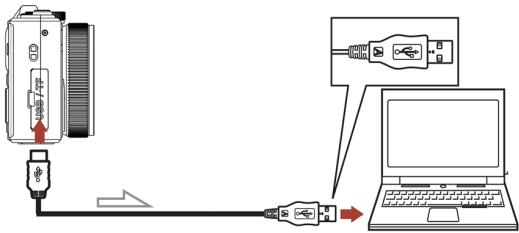

 2. Power on the camera manually, and the screen will display the available options. Press the Up/Down button to select the desired option, then press the OK button to confirm the option.

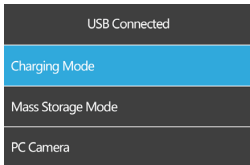

Charging Mode
Select the charging mode, the camera supports the function of recording normally. Power off the camera would be fully charged faster then keep powering on.

Mass Storage Mode
Select "Mass Storage Mode" and the computer will display the camera's memory card drive. You can transfer files from the storage to the computer on the computer.

PC Camera
Select the "PC Camera" mode, the camera can be used as a webcam, live streaming, etc.

Note: When the camera is used as a webcam, only the digital zoom button can be operated on the camera and other functions cannot be used.

WIFI APP User Guide
Press the MENU button to enter the menu, press the left/right button to enter the system settings, then press the up/down button to find the "APP Usage Guide" submenu bar, and finally press OK to scan and view the tutorial. To download WIFI APP, you can scan the QR code on the right below.

 


WIFI APP User Guide QR Code




WIFI APP Download QR Code

Charging The Battery
1. Power off your camera, open the battery cover, and insert the battery in the direction shown in the following picture, then close the battery cover.

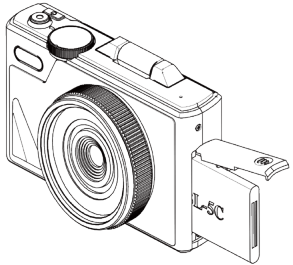

 2. You can use supplied USB cable to charge your camera via an adapter (5V/1A~5V/2A)

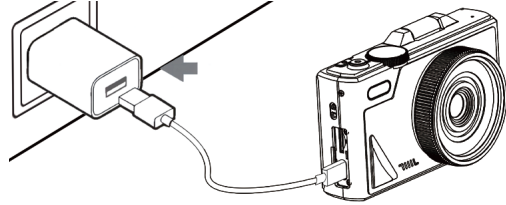

- * The charging indicator will be turned on in red when the battery is in charging.
 - * The charging indicator will be turned off automatically when the battery is fully charged.
- Normally it takes around 2 hours to full charging of the battery. When the battery is fully charged, the battery life is around 60 minutes for recording.

- BATTERY WARNING!**
1. REPLACEMENT OF A BATTERY WITH AN INCORRECT TYPE THAT CAN DEFEAT A SAFEGUARD.
 2. DISPOSAL OF A BATTERY INTO FIRE OR A HOT OVEN, OR MECHANICALLY CRUSHING OR CUTTING OF A BATTERY, THAT CAN RESULT IN AN EXPLOSION.
 3. LEAVING A BATTERY IN AN EXTREMELY HIGH TEMPERATURE SURROUNDING ENVIRONMENT THAT CAN RESULT IN AN EXPLOSION OR THE LEAKAGE OF FLAMMABLE LIQUID OR GAS.
 4. A BATTERY SUBJECTED TO EXTREMELY LOW AIR PRESSURE THAT MAY RESULT IN AN EXPLOSION OR THE LEAKAGE OF FLAMMABLE LIQUID OR GAS.

- WARNING!**
- IMPORTANT INFORMATION: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE USE AS IT CONTAINS IMPORTANT INFORMATION.
1. THIS PRODUCT IS NOT A TOY.
 2. DO NOT CONNECT TO POWER EXCEEDING THE RECOMMENDED VALUE (5V DC 1A).
 3. THIS CAMERA CONTAINS BATTERIES THAT ARE NON-REPLACEABLE.
 4. MEMORY CARD IS SMALL PART WHICH MAY BE A CHOKING HAZARD DO NOT PUT INTO THE MOUTH.
 5. THIS PRODUCT IS NOT WATERPROOF. KEEP IT AWAY FROM WATER AND MOISTURE.
 6. THE CAMERA SHOULD BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, ENCLOSURE, OR OTHER PARTS. IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED. (PLEASE CONTACT THE SERVICE PROVIDER FOR REPLACEMENT; DO NOT REPLACE IT BY YOURSELF).
 7. THIS CAMERA CANNOT BE OPERATED DURING CHARGING BATTERY. ADULT SUPERVISION REQUIRED AT ALL TIMES.
 8. DO NOT PLACE THE DEVICE NEAR STRONG MAGNETIC OBJECTS SUCH AS MAGNETS AND MOTORS.
 9. PLEASE AVOID GETTING CLOSE TO ANY OBJECT THAT EMITS STRONG RADIO WAVES, AS HIGH MAGNETIC FIELDS MAY CAUSE DEVICE MALFUNCTION OR DAMAGE TO IMAGES AND SOUNDS.
 10. IT IS RECOMMENDED TO USE HIGH-QUALITY MEMORY CARDS TO SAVE HIGH-QUALITY VIDEO FILES.

12 Month Warranty
Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation. We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product.

Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you have any cybersecurity-related concerns or queries, please contact us online via our 'Contact Us' page at <https://www.kmart.com.au/contact-us/> or reach us by phone using the numbers listed below.

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567