



Electric Grill Brush

HK059

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

 
1. This appliance must only be supplied by safety certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
2. After charging, when unplugging the plug, please grab by the plug when pulling it out. Do not pull from the wire.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Cleaning and user maintenance shall not be done by children without supervision.
6. Stay away from flammable and explosive substances at any time.
7. Keep hair, loose clothing, and all parts of the body away from moving parts.
8. To protect against a fire, electric shock or personal injury, do not immerse the main unit or the USB cable in water or other liquids.
9. Do not touch the USB cable or the appliance with wet hands.
10. Use of accessories not supplied with the product may cause fire, electric shock or personal injury.
11. The wire brush is sharp, wear protective gloves when detaching the brush head to avoid injuries.
12. Do not leave the appliance unattended when powered ON.
13. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed of.
14. This appliance must always be used in accordance with the user instructions supplied with the product and must not be used for other purposes.
15. Misuse may cause serious injury.
16. Switch OFF the appliance before changing accessories.
17. Before using the product, please check if the brush is fixed in place.
18. Do not operate without the charging port cover in place.
19. Do not use it in front of people to avoid the brush hitting others if it is dropped.
20. This appliance contains batteries that are non-replaceable.
21. Always wear eye protection when using the brush with irritating substances. Rubber gloves are also recommended.
22. For cleaning, please refer to CLEANING AND STORAGE section.

CAUTION!


23. The product has a built-in lithium-ion batteries. Pay attention to the following:
 - a) Only use and store the product in an environment where the temperature is between -5°C and $+35^{\circ}\text{C}$.
 - b) If not used for a long time, recharge every three months to prevent battery damage.
 - c) Charging time may be longer when the room temperature is below 10°C .
 - d) Charge the battery when the battery power goes low, avoid allowing the battery to go flat.
24. DO NOT squeeze, puncture, or short circuit the product or put it into water, fire or use in an environment where the temperature is higher than 60°C .
25. This product is for household use only and not designed for commercial use.
26. Do not expose the product to high temperatures (above $+35^{\circ}\text{C}$), strong magnetic fields, near flammable and explosive gasses (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation or fire.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

KNOW YOUR ELECTRIC GRILL BRUSH

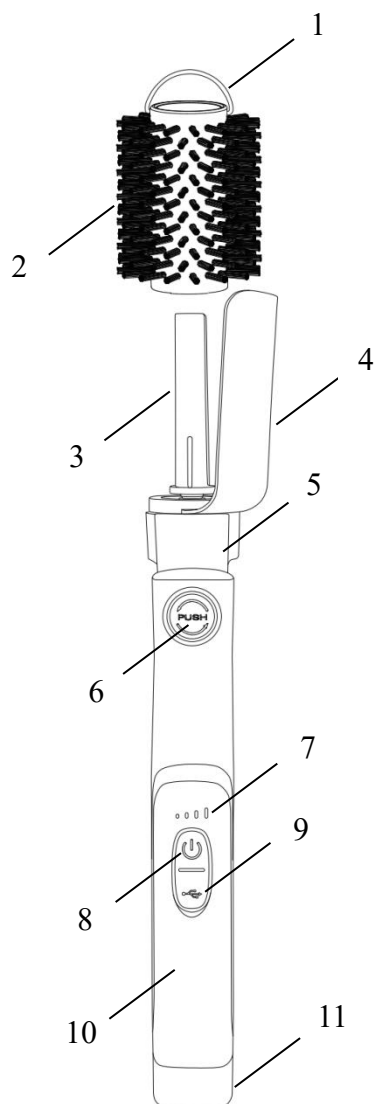

 1. Pull ring
2. Wire brush
3. Drive shaft
4. Rotatable splash guard
5. Main unit
6. Swivel lock
7. Battery indicator light
8. On/Off/Speed button
9. Charging port with cover
10. Handle
11. Hanging loop
12. USB cable

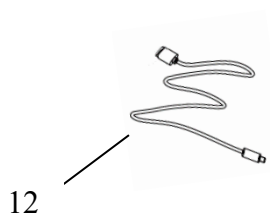

IMPORTANT!

- Please make sure that your appliance is received with the right components shown above. Check everything carefully before using. If any parts are missing or damaged, return the product to the place of purchase for replacement .
- When using the appliance for the first time, carefully remove all internal and external packaging and dispose of them responsibly.

BEFORE FIRST USE

- Fully charge the appliance before first use.
- The supplied USB charging cable should be inserted into a standard USB power source rated at 5V DC 2A specification.

WARNING! Use only the supplied USB charging cable to charge the appliance.


- The charging time is approx. 3.5 hours.
- The indicator lights will show battery level when charging:

Battery indicator light	Battery level
1 light flashes	1%~25%
1 light illuminate, 1 light flashes	26%~50%
2 lights illuminate, 1 light flashes	51%~75%
3 lights illuminate, 1 light flashes	76%~99%
4 lights illuminate	100%

- After being fully charged, the product can work up to approx. 1.5 hours.

USING YOUR ELECTRIC GRILL BRUSH

 1. Make sure the charging port is properly sealed by the cover.
2. Push the Swivel lock to adjust the angle of the handle and rotate the splash guard to best fit your cleaning scenario.
3. Press and hold the On/Off/Speed button to turn ON the appliance, the battery indicator light will illuminate, the appliance starts working at low speed (green button), the button lights up in green. Press the On/Off/Speed button a second time to select high speed (blue button), the button lights up in blue.
4. Press and hold the On/Off/Speed button to turn OFF the appliance, the indicator light will go out.

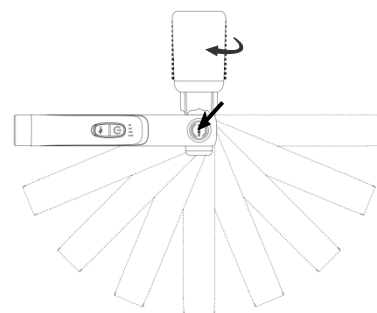

WARNING! Always follow the cleaning instructions of the product you are cleaning.

CAUTION! The wire brush is sharp, wear protective gloves when detaching the brush head to avoid injuries.

Tips for better performance:

- Make sure the appliance is fully charged before use.
- A red battery indicator light will flash then goes out when the battery is exhausted.
- Power off the appliance before removing it from the cleaning surface to avoid spraying from the rotating brush.
- If excessive force is applied, the motor may be blocked, and the appliance will turn off automatically. Reduce the applied force and turn ON the appliance again to continue.

CLEANING AND STORAGE

- Clean the product after use to maintain and prolong the life of the product.
1. Turn off the appliance and make sure the USB cable is disconnected, and ensure the charging port cover in place before cleaning.

WARNING!

- Do not immerse the main unit or USB cable in water or any other liquid to clean.
 - Do not use abrasive material to clean the appliance.
 - Do not place any parts in extremely hot water.
2. Pull the ring straightly to take off the brush.

CAUTION! The wire brush is sharp, wear protective gloves when detaching the brush head to avoid injuries.

3. The outer enclosure of main unit and handle can be wiped with mild detergent and a soft sponge, dry thoroughly.
 4. Soak the brushes in soapy water, then rinse, dry thoroughly.
 5. Ensure the product is clean and dry before storage.
 6. Store the appliance in a clean and dry location. The appliance can be hung up with the hook supplied.
- This product contains a Li-ion battery. It should be stored in a clean, dry, ventilated room with an ambient temperature range of -5°C to + 35°C and a relative humidity of 25% to 75%.

TECHNICAL SPECIFICATION

Input: 5Vd.c 2A

Battery: Li-ion 3.7V 2000mAh

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product.

Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us