

anko

Instruction Manual

K: 43700486 | T: 72417874

Model: JLR-82049

A3 Laminator



Please read this manual carefully before using the product and retain for future reference.

Package contents:

- 1 x Laminator
- 1 x Instruction manual

Product Specifications:

Input rating: 220-240V ~ 50Hz, 1.88A
Rated Power: 450W
Entry width: 322mm
Pouch size: Up to A3
Pouch thickness: 80/100/125 microns
Lamination speed: Approx. 330mm/min
Warm up time: Approx. 4 minutes
Cable length: 1.5m

Laminating Pouch Sizes:

A3: 426 x 303mm
A4: 303 x 216mm
A5: 216 x 154mm
A6: 154 x 110mm
A7: 110 x 80mm
ID Card: 90 x 60mm
Credit Card: 90 x 60mm

Important Safety Information

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock or injury, including the following:

- This appliance is not intended for use by children or by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Remove all paper clips, staples and other metal fasteners before laminating.
- Only use the appliance for laminating paper or card with pre-sealed laminating pouches. Do not laminate unusual or unsuitable materials.
- Do not spray liquids, aerosol cleaners or lubricants into the appliance.
- The marking is located on the bottom of the appliance.
- Always unplug the appliance from the power socket when not in use, before cleaning, or when not operating correctly.
- To protect against the risk of electric shock, do not immerse the power cord, plug or appliance in water or any other liquid, and do not use the appliance near water.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance has malfunctioned or been damaged in any manner.
- If the power cord is damaged, it must be replaced by a qualified service technician in order to avoid a hazard.
- The appliance should be installed near a socket-outlet that is easily accessible.
- The main plug on the power supply cord is used as the disconnect device; the socket-outlet shall remain readily accessible.




CAUTION HOT!

Important! - Burn and Injury Hazard

- The laminator becomes hot during operation. Do not touch hot surfaces during or immediately after use.
- Allow sufficient time for the appliance to cool down before handling, moving or storing.
- Do not place any items on top of the machine at any time.
- Keep hands, hair, clothing and jewellery away from the entry slot and rollers.
- Never insert fingers, metal objects or other foreign objects into the appliance.

Product diagram

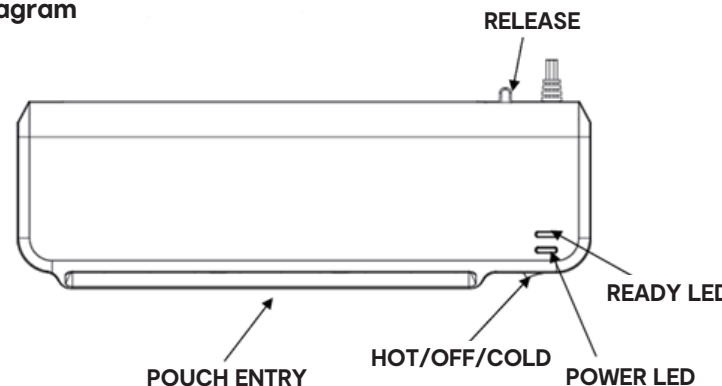

Setup

Place the laminator on a flat, stable and heat-resistant surface. Ensure there is sufficient clear space at the rear of the machine to allow the laminating pouch to exit freely.

This laminator is designed for use with pre-sealed laminating pouches **with a thickness of 80, 100 or 125 microns, suitable for sizes from credit card to A3.**

Operating Instructions

The laminator is operated using a rocker switch located on the right-hand side of the appliance. The switch has three positions: COLD (I), OFF (O) and HOT (II).

1. Plug the power cord into a suitable mains power socket.
2. This laminator supports both cold and hot lamination:

• Cold Lamination:

Set the switch to the COLD (I) position. The POWER indicator will illuminate red and the READY indicator will illuminate green, indicating that the machine is ready for cold lamination. **Cold lamination requires the use of self-adhesive laminating pouches and does not require heat.**

• Hot Lamination:

Set the switch to the HOT (II) position. The POWER indicator will illuminate red while the machine heats up. After **approximately 4 minutes**, the READY indicator will illuminate green, indicating that the correct operating temperature has been reached and the machine is ready for use.


3. Prepare the laminating pouch by placing the document centrally inside the pouch, close to the sealed edge. Do not use laminating pouches **thicker than 125 microns per side (total thickness 250 microns)**.
4. When the machine has reached operating temperature, insert the pouch sealed edge first into the entry slot until it is engaged by the rollers. Never insert a pouch open edge first into the machine.
5. The pouch will automatically pass through the machine and exit from the rear.
6. After use, set the switch to the OFF (O) position.
7. Unplug the laminator from the power socket when not in use.

Notes:

- During operation, the READY indicator may turn off temporarily as heat is absorbed by the laminating pouch. This is normal.
- For continuous operation, allow the laminator to rest periodically. When laminating 80 micron pouches, allow the machine to rest for approximately 2 minutes after laminating 5 pouches. When laminating 125 micron pouches, allow the machine to rest for 2-3 minutes after laminating 2 pouches.
- A slight odour may be noticed during lamination. This is normal.
- Do not laminate thermal paper, such as concert tickets, as the print may turn black.

How to load a Laminating Pouch:

- The laminating pouch is sealed along one side. Open the pouch and place the document centrally inside the pouch, as close to the sealed edge as possible.
- Ensure there is an even border around the document (for example, an A4 sheet should have approximately a 3mm border on all sides).
- Insert the pouch into the laminator with the sealed edge entering the machine first to start the lamination process.
- Always observe the pouch during the lamination process to ensure it exits the machine correctly.
- If the pouch is not placed squarely and centrally in the entry slot, it may wrap around the rollers. Refer to the illustration below.
- In the unlikely event that a laminating pouch becomes jammed inside the laminator, switch off and unplug the appliance. Do not attempt to open the appliance. Only a qualified service technician should carry out repairs.

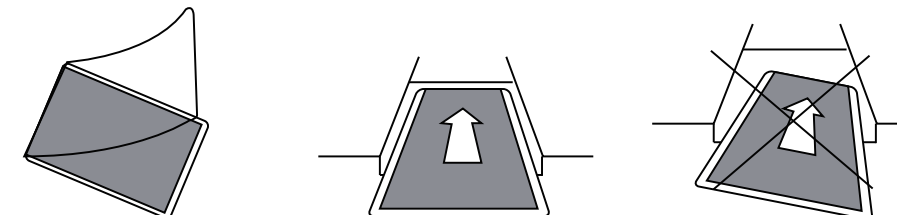

Pouch Thickness:

Laminating pouches are available in various thicknesses measured in microns. For best results, use laminating pouches with a **thickness between 80 and 125 microns**.

Troubleshooting

If the laminator does not operate normally, please check the following:

- Ensure the appliance is plugged in and switched on, and that the fuse in the plug is functioning correctly.
 - Check that the laminator is not jammed with a laminating pouch.
- If a laminating pouch becomes jammed, switch off the appliance, unplug it from the power socket and allow it to cool down completely. Once cooled, hold the release button as indicated on the appliance to carefully remove the pouch. Do not use excessive force.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



MADE IN CHINA

CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

148.0 mm

210.0 mm