

90 mm

anko

5-in-1 Wireless Charger

Operating Instructions

This 5-in-1 Qi wireless charger is designed for charging compatible mobile phones, wireless earphones, and smart watches. Please read this manual carefully before using and retain it for future reference.

Includes:
1× Wireless charger
1× Magnetic night light
1× USB-C to USB-C charging cable
1× Instruction manual



K: 43700714 | T: 72418437
Model: JLR-81736


Product Specifications:

Input rating: 5V=3A, 9V=3A
Output:
7.5W for iPhone (Max.)
15W for Android (Max.)
10W for Samsung (Max.)
Earphone Output: 5W (Max.)
Watch Output: 2W (Max.)
Night light Power: up to 2W
Clock display power: up to 2W
Total Maximum Output: Up to 26W
Charging time: Charging time may vary depending on the device, battery condition, and charging environment

Important Safety Information

- › Please read and follow the instructions below to reduce the risk of injury, fire, electric shock, or damage to the product.
- › Do not apply excessive force, crush, or subject the product to impact.
- › Do not disassemble, modify, or attempt to repair this product. There are no user-serviceable parts inside.
- › Do not expose the product to fire, water, or other liquids.
- › Do not use the wireless charger in high-temperature, humid, or corrosive environments.
- › Keep the wireless charger away from magnetic stripe cards or chip cards (such as ID cards or bank cards), as magnetic fields may cause data loss.
- › Maintain a minimum distance of 20 cm between the wireless charger and any implanted medical devices (such as pacemakers or cochlear implants) to avoid potential interference.
- › This product is not a toy. Keep out of reach of children to prevent accidental injury.
- › If the product becomes damaged, stop using it immediately and contact the manufacturer or an authorized service center.
- › Disconnect the wireless charger from the power supply when not in use.
- › Use only with a compliant USB power adaptor.

Product Diagram

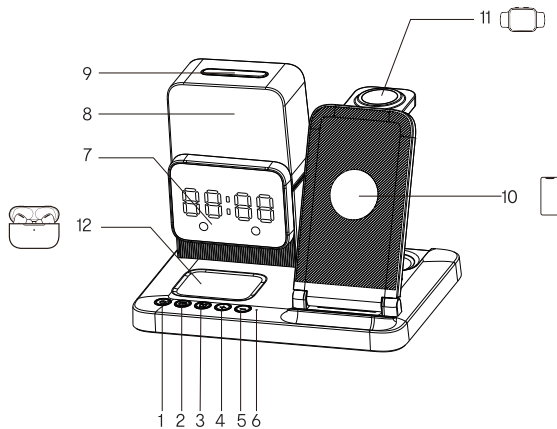

- | | |
|--------------------------------|--------------------------------|
| 1. Clock display button | 7. Clock display |
| 2. Clock setting/format button | 8. Magnetic night light |
| 3. Alarm button | 9. Night light touch button |
| 4. "+" button | 10. Mobile phone charging area |
| 5. "-" button | 11. Watch charging area |
| 6. LED indicator | 12. Earphone charging area |

OPERATING INSTRUCTIONS

1. How to charge

- 1). Connect the supplied USB-C to USB-C charging cable to the USB-C power input port of the product.
- 2). Connect the other end of the cable to a suitable USB power adaptor (not included).

- 3). Plug the power adaptor into a wall socket.
- 4). Place a compatible wireless charging device on the designated charging area to begin charging.

2. Button Functions

- 1). Clock Display Button
The clock display is set to bright mode by default.

Short press to adjust the display brightness.
There are four brightness levels: High, Medium, Low, and Off.
The brightness levels cycle in sequence.

2). Clock Setting / Format Button

Setting the Time:

- Short press to enter time setting mode. The clock icon will flash.
- Use the "+" and "-" buttons to adjust the hour.
- Short press again to switch to minute adjustment.
- After setting the minutes, short press to save and exit.
- If no operation is performed for 10 seconds, the device will exit setting mode automatically.

Setting the Time Format:

- Long press to enter time format setting mode.
- Use the "+" and "-" buttons to select between 12-hour and 24-hour format.
- Short press to confirm.

3. Alarm Button

- 1). Setting the Alarm
 - Long press to enter alarm setting mode. The alarm icon will flash.
 - Use the "+" and "-" buttons to adjust the hour.
 - Short press to switch to minute adjustment.
 - After setting the minutes, short press to save and exit.
 - If no operation is performed for 10 seconds, the device will exit setting mode automatically.

2). Turning the Alarm On or Off

- Short press to turn the alarm on. The alarm icon will appear on the display.
- Short press again to turn the alarm off.

3). Alarm Operation

- The alarm repeats daily once activated.
- The alarm will sound for up to 5 minutes.
- Press any button to stop the alarm.

4. "+" and "-" Buttons

When in time or alarm setting mode:

- Short press to increase or decrease the value by one unit.
- Long press for rapid adjustment.

5. Night Light Touch Button

Press once: Warm light
Press twice: White light
Press three times: Warm white light
Press four times: Night light turns off

The lighting modes cycle in sequence.

6. LED Indicator

- 1). When the charger is powered on, the LED indicator will illuminate for approximately one second and then turn off.
- 2). The LED indicator will turn on when mobile phone charging begins and will turn off once the phone is removed.
- 3). If a foreign object (such as metal objects) is detected:
 - The LED indicator will flash.
 - Charging will stop automatically.

Remove the foreign object to resume normal charging.

Note: The earphone and watch charging areas do not provide a visual FOD indicator.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

