


anko

Hair Straightener with Hot Air Styling INSTRUCTION MANUAL

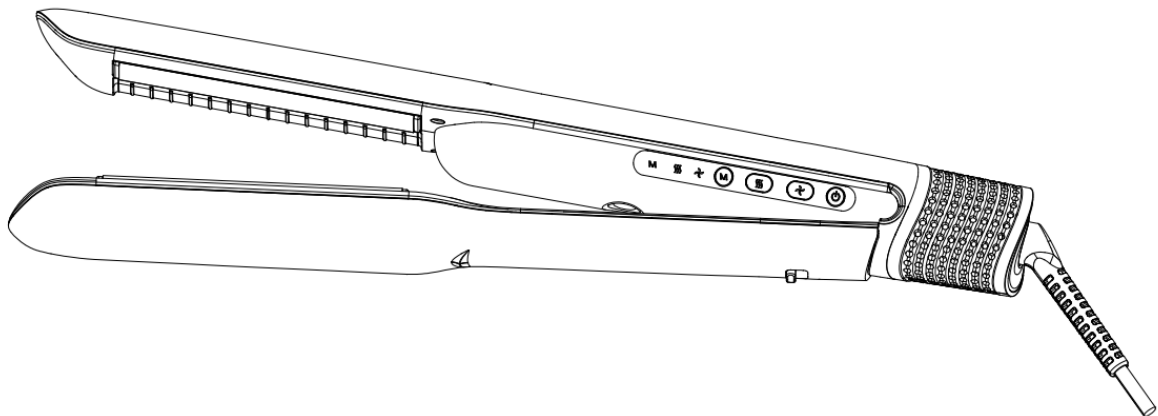

Model No.: BY-839

Please read this instruction manual before using your product and keep it in a safe place for future reference. If you pass the appliance on to anyone else, please include this manual.

INTRODUCTION

Use this appliance to style human hair only. Do not use this appliance on artificial hair or animals.

IMPORTANT! The appliance may have different results depending on the hair type and colour. Therefore, we recommend to trial at a hidden area of hair before first use. The Air Styler is not recommended for damaged or bleached hair.

SAFETY PRECAUTIONS

- Carefully read all instructions before operation and retain for future reference.
- Do not place air styler near the edge of a bench or table during operation
- Ensure the surface is dry, level, clean and free of liquid and other substances.
- Burn hazard. Keep appliances out of reach from young children, particularly during use and when cooling down.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
- Do not leave the appliance unattended when in use. Always ensure the appliance is turned OFF by switching OFF and unplugging the appliance from mains power when not in use, if left unattended and before cleaning and storing.
- Always keep the appliance clean.
- Fully unwind the cord before use.
- To protect against electric shock, do not immerse the power cord, plug or appliance in water or any other liquid.
- Do not allow the cord to hang over the edge of the table or bench, touch hot surfaces or become knotted.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with this appliance.
- If the supply cord shows any signs of damage, DO NOT use. For electrical safety, any repairs to the product must be carried out by qualified electrical person only or the product must be disposed to avoid a hazard.
- This product is intended for household use only. Do not use it outdoors. Not for commercial purposes.
- NEVER grasp the appliance, power cable or power plug with wet hands.
- Always remove the power cable from the socket by pulling on the plug; do not pull on the cable itself. Do not hold or carry the appliance with the power cord.
- Do not fold or crush the power cable. Ensure that the power cable does not run over sharp edges.
- Please do not attempt to dismantle the appliance. This appliance has no user-serviceable parts inside.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents an electrical safety hazard even when the appliance is switched OFF.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- **DANGER OF ELECTRIC SHOCK!** Do not insert any foreign objects into the appliance.

- For additional protection, the installation of a residual current device (RCD/ Safety switch) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the power outlet socket in the bathroom. If unsure, check with an electrician.
- Do not use any accessories not supplied with this product.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- **IMPORTANT!** Always keep the hair away from the Air inlet grille of the appliance. Hair may be sucked into the rear of the appliance causing a blockage.
- Never cover or block the Air inlet grille of the appliance. This may lead to overheating. If the Air inlet grille becomes blocked, stop using the appliance immediately and clear the blockage.
- Ensure the air outlet opening is free to blockages. Unrestricted airflow is required for correct operation and to prevent overheating.
- For user maintenance, please refer to “Cleaning and Maintenance” section.

RISK OF FIRE

- Do not leave the appliance unattended when in use.
- To avoid a build-up of heat, NEVER cover the appliance. Do not use the appliance under a blanket or at other poorly ventilated locations
- Avoid the addition of heat from other sources, e.g., from direct sunlight, heating appliances, other devices, etc.
- Do not use an extension cable. In the event of danger, the power cord plug must be quickly and easily accessible.

ELECTRICAL REQUIREMENT

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be 220V-240V AC.

IMPORTANT

- The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if connected into a ‘live’ power outlet socket.
- If the supply cord is damaged, DO NOT use. Any repairs to the product must be carried out by qualified electrical person only or the product must be disposed of.



Danger of suffocation! Keep all packaging material away from children. Dispose of the packaging materials in an appropriate way. Contact your local authorities about collection points or waste separation.



Caution Risk of Burning! The appliance gets very hot! Take care to avoid contact between the hot surfaces of the unit and skin, paying particular attention to the face, neck, chest and hands.




WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



Class II Appliance

The Straightener is for household use only. Not designed for commercial use.

PARTS

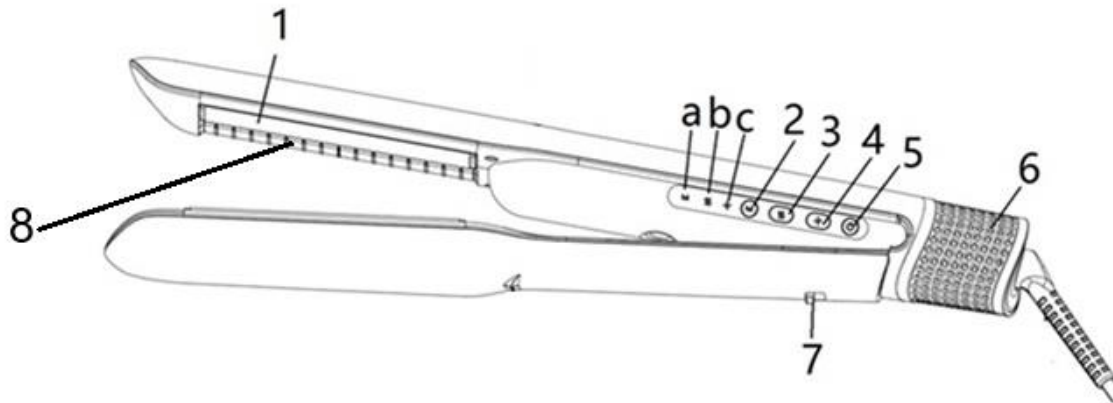

- | | |
|--------------------------|---------------------------|
| 1. Heating plate | 6. Air inlet grille |
| 2. Mode selection button | 7. Plate lock |
| 3. Heat setting button | 8. Air outlet |
| 4. Fan setting button | a. Heat plate indicator |
| 5. On/Off button | b. Heat setting indicator |
| | c. Fan setting indicator |



BEFORE FIRST USE

- After unpacking the appliance, check for transport damage and that all the parts mentioned in this manual are present. In the event of damaged or missing parts, return the product back to place of purchase for replacement.
- Do not discard the original box. It can be used for storage and dispatch to avoid transport damage.
- Clean the appliance as described under the section “Cleaning and Maintenance”. For your safety make particular attention to the safety instructions supplied in the user manual.

SPECIAL FEATURE

- **Mode 1: Heat plate function only**
Heating plate in half section for straightening hair with direct heat. Only “Heat plate” indicator will be ON. 2 heat settings available: RED – High; PINK – Low
- **Mode 2: Hot air function only**
Temperature and speed setting can be adjusted in this model to enhance hair drying.
“Heat setting” and “Fan setting” indicator will be ON.
- **Mode 3: Heat plate with Hot Air function**
Enable hair styling and drying at the same time. All 3 light indicators will be ON. “Heat plate” and “Heat setting” indicator will appear in same colour in this Mode.



Light indicator reference:

Heat Setting Button  (3 settings)	Fan Speed Setting Button  (2 settings)
GREEN – Cool Air	BLUE – low speed
PINK – Low heat	RED – High speed
RED – High heat	

OPERATION

IMPORTANT! Hair should be clean and completely dry before using the straightener. This hair straightener is not recommended for use on wet or damaged or bleached hair.

ATTENTION! The heating plates cool down slower than they heat up.

- Fully unwind the supply cord.
- Place the appliance on a smooth, flat, dry surface.
- Connect the power plug to a mains power outlet socket.
- Press and hold the ON/OFF button  to turn the hair straightener ON.
- Default operation mode is Mode 3. Press Mode Selection Button to select operation mode.
- Whenever Heat plate function is activated, the Heat Plate indicator will keep flashing while heating up. The indicator becomes steady when the hair straightener has reached its target temperature.
- Whenever Hot Air function is activated, hot air blows in selected the speed when the heating plates are closed. Fan speed will reduce to lowest speed when the plates are opened.
- When finished, press and hold the ON/OFF button  to turn OFF the unit.
- Unplug the unit. Allow the straightener to cool down before storage.

ATTENTION! The heating plates heat up very fast. It takes approx. 3 minutes to reach max. temperature.

CAUTION! Allow to cool before putting it down or storing away.

CAUTION! Always unplug the appliance immediately after use in case of malfunction or before cleaning.

IMPORTANT! The appliance may provide different results depending on the hair type. Therefore, we recommend doing a trial on a hidden area of your hair before first use.

DRYING HAIR

- Towel-dry your hair until it is no longer dripping.
- Adjust heat and fan level before drying hair.
- Select Mode 2 or 3 for drying hair. Keep the air outlet opening facing downwards.

Step 1: Take a section of hair no more than 4 to 5cm wide. Place the hair strand between the plates, as close as you can, near the scalp. Clamp the handles together to hold hair in-between the plates.

Step 2: Glide the straightener downward while blow-drying.

Step 3: Repeat the process until hair is fully dry.

STRAIGHTENING HAIR

- Select Mode 1 or 3 for straightening hair. Keep the air outlet opening facing downwards when using Mode 3.
- Ensure your hair is around 60-70% dry before straightening.
- **CAUTION! Do not hold the hair between the plates for more than a couple of seconds as this may damage your hair.**

Step 1: Repeat step 1-2 as stated in "DRYING HAIR".

Step 2: When you have finished one section, move to another area of hair and repeat the process.
Allow the hair to cool before combing through

HAIR STYLING

- Select Mode 3 for hair styling. Hot air can help curling the hair and cool air can help to set the hair style.
- Keep the air outlet opening facing downwards.

Step 1: Take a section of no more than 4 to 5cm wide strand of hair, place the end of hair strand on the heating plate. Clamp the handles together to hold hair in-between the plates.

Step 2: Slightly rotate the handle so that the strand of hair is rolled up to the roots. Maintain sufficient distance between the scalp and barrel.

Step 3: Hold the Straightener in position for 10-15 seconds to create gentle hair waves.

Step 4: Continue styling the remaining sections of hair.

AUTO SHUT-OFF

The Hair Straightener has an automatic shut-off feature. If the Hair Straightener is not used for more than 30 minutes, it will automatically switch OFF. If you wish to continue using the Hair Straightener after auto shut-off, simply press and hold the ON/OFF switch to turn it ON.

UNBLOCKING THE AIR INLET GRILLE

- If during use, the air inlet grille becomes clogged or blocked with dust or dirt, clean the grille.
- Disconnect the Hair Straightener from mains power.
- Rotate to unlock the grille. Use a lint-free cloth or soft brush to clean the dust and hair on the grille. After cleaning, refit the air inlet grille. Make sure its locked in place.



- The grille should be cleaned at least once a month
- Clean the appliance unit with a soft, slightly damp cloth. Make sure that no moisture has entered the Hair Straightener during cleaning.

CLEANING AND MAINTENANCE

- **Attention!** Turn OFF the Hair Straightener before cleaning by disconnecting the supply cord plug from the mains power outlet socket.
- **Attention!** Do not use any alcohol, acetone, gasoline, abrasive cleaning agents, etc. to clean the plastic components. Do not use hard brushes or metal objects for cleaning.
- Risk of burning! Do not clean the appliance while still hot.
- Wipe the Hair Straightener with a dry cloth.

- Never submerge the Hair Straightener in water or let water run over the heating plates.
- Clean the air inlet opening from time to time with a fine brush.

STORAGE

- Store the Hair Straightener in a cool, dry location, away from children and pets.
- If the Hair Straightener is not used for an extended period, store it preferably in its original packaging.
- After use do not wrap the cord around the Hair Straightener as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance during storage.

DISPOSAL

- Do not dispose this Hair Straightener with normal household waste collection. If unsure, contact the local council waste management service for proper disposal facilities available for your area.

TECHNICAL DATA

Model: BY-839

Voltage: 220-240V

Frequency: 50-60Hz

Power: 500W

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us