


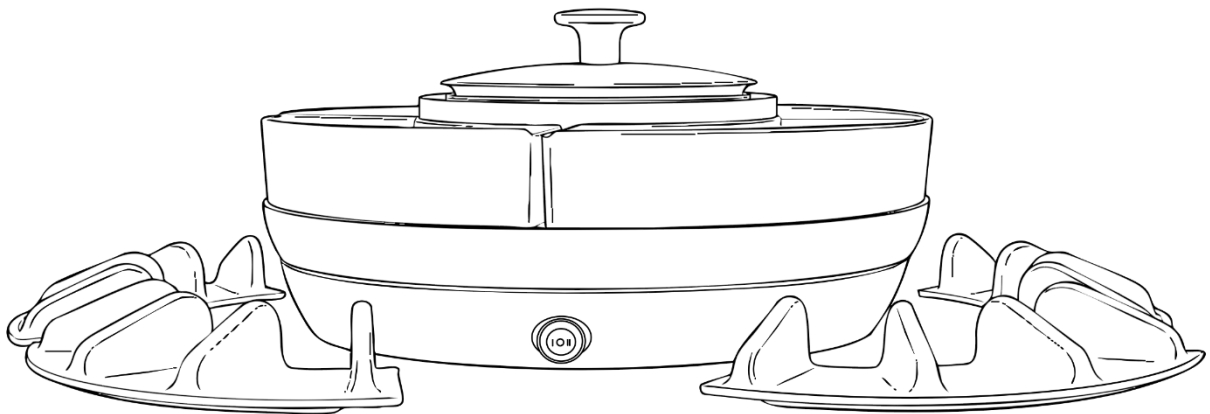

## **TACO SERVING KIT**

### Instruction Manual



Model No.: ATM01

To ensure the proper operation of this product, please read this instruction manual carefully before using the product and keep it for future reference.

# Important Safeguards



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for future reference, along with the purchase receipt and packaging. If applicable, pass these instructions on to the next owner of this product.

## Explanation of Symbols



This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.




This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.



This signal word warns of possible damage to property.



The surfaces are likely to get hot during use.

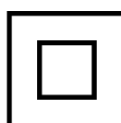

This symbol indicates that the product complies with electrical protection class II.

## READ ALL INSTRUCTIONS

When using an electrical product, to reduce the risk of personal injury or damage to property, basic safety precautions must be observed, including the following:

- **Limited to household use only:** This product is intended for and limited to household use only. Do not use it outdoors, where aerosol (spray) products are being used or where oxygen is being administered.
- **Intended purpose:** Do not use this product for anything other than its intended purpose and only use it as described in this manual.
- **Accessories:** Do not use any accessories with this product that are not supplied or specifically recommended.
- Never use any accessories or parts not included with the product.
- Do not spray water directly on to equipment containing electrical components.
- No naked flame sources, such as candles, should be placed near the product.
- The voltage indicated on the rating plate must correspond to the supply voltage.

**WARNING!** Do not operate in areas where petrol, paint or other flammable liquids are used or stored.

**WARNING!** This product heats up whilst in use. To avoid burns, do not let bare skin touch hot surfaces.

- Switch off the product, remove the plug from the wall socket and allow to cool completely before moving.
- Never use this product below wall cupboards or shelving.

**CAUTION!** Never use wet hands to touch the mains plug.

- Do not operate with the cord coiled up as a build-up of heat may occur.
- Do not remove the plug from the wall socket until the product has been switched off.
- Always unplug the product when it is not in use.
- Do not allow the cord to come into contact with heated surfaces during operation.
- Do not allow the power cord to hang over the edge of a table or bench top or touch any hot or sharp surfaces.
- Never wrap the cord tightly around the product.
- Do not put any stress on the cord where it enters the product as this could cause it to fray and break.
- Never leave the product unsupervised. To protect children from the dangers posed by electrical products, make sure that the cable is hanging low and that children do not have access to the product.

**WARNING!** Do not use this product near an open window as rain may cause electric shock.

- Do not use this product outdoors or on a damp floor.
- Do not use the product for any purpose other than its intended use.

**WARNING!** Always allow at least 20cm of space around the exterior of the product when it is in use. Never use near curtains, under cupboards or near flammable materials.

**WARNING!** DO NOT immerse the warming base in water.

- Do not use this product with a damaged cord or plug, after a malfunction or if it has been dropped or damaged in any manner.
- **NOTE!** This product is to be used by adults. This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- Do not allow children to play with the product or the packing film. Danger of suffocation.
- Never let children use electrical products unsupervised.
- Do not place the product on or near a flammable or hot object.
- Some products are "sealed" using tamperproof screws to avoid tampering/maintenance by unskilled or unqualified persons and also for safety reasons.
- Always disconnect the product from the power outlet and allow it to cool down before cleaning.
- Do not store the product whilst it is still hot.
- Do not use this product in the immediate surroundings of a bath, shower, or swimming pool.
- This product is not intended to be operated by means of an external timer or separate remote-control system.
- For the details of the cleaning process of the warming surface, please refer to section "Cleaning and Maintenance".
- This product is for household use only; it is not intended for commercial use. Only use the product for domestic purposes in households or similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments.
  - Farmhouses.
  - By clients in hotels, motels and other residential type environments.
  - Bed and breakfast type environments.

**WARNING!** DO NOT cover the product when it is in operation or during storage.

- The warming bowl of the product has a non-stick coating. Do not use steel wool or other abrasive scourers to clean the warming bowl.
- This product is for indoor use only.
- Do not operate the product near curtains, blinds, drapes or in the bathroom.
- To disconnect, grip the plug and pull it from the wall outlet. Never pull by the cord.
- This product is for household use only; it is not intended for commercial use.

**CAUTION!** Modifications to the product by the user/s may cause damage to property or persons and will be deemed as not in accordance with the instruction manual and no liability for damage will be accepted by the manufacturer.

**WARNING!** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.

**NOTE!** The first time the product is operated a slight odour may develop. This is entirely harmless and will soon dissipate. Ensure there is adequate ventilation when using the product.

**WARNING!** Do not use the product if the surface is cracked.

**CAUTION! HOT SURFACE!**

The surfaces are likely to get hot during use. The temperature of the outer surface may be high when the product is working. Please do not touch the outer surface by hand. Use the handles. Only remove the accessories when product has completely cooled down.

**WARNING!**


- To reduce the risk of electric shock, do not immerse or expose the product, or cord to rain, moisture, or any other liquid.
- Do not use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.
- In the event where the product is dropped into water, turn off the power at the power outlet and remove the plug immediately.

**DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISCONNECTED FROM THE POWER SUPPLY.**

- It is important to note that the product will have to be inspected by a qualified technician before using it again.

**SAVE THESE INSTRUCTIONS**

## Parts Guide

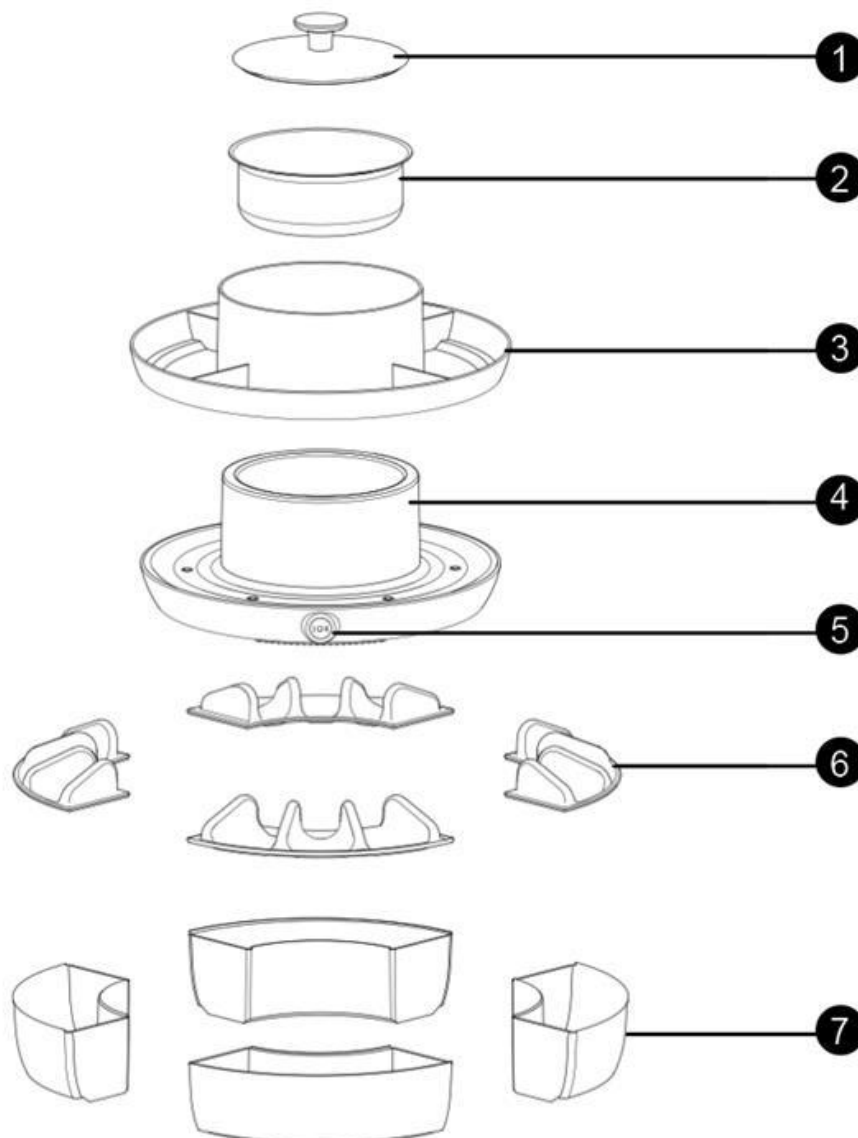

1. Lid
2. Warming bowl
3. Carousel
4. Warming base
5. Power switch(I/O/II)
6. Taco holders x 4
7. Food compartments x 4

# Instructions

## GETTING STARTED

Check the product and parts guide.

### NOTE!

#### Risk of damage!

If opening the packaging with a sharp knife or other pointed object, be careful to avoid damaging the products surface.

- Proceed carefully with opening the packaging.
- 1. Remove all packaging from the product.
- 2. Check that the delivery is complete (see Parts Guide).
- 3. Unwind the power cord to its full length and inspect the cord and plug for any damage. Do not use the product if these parts are damaged. In the case of damage, contact Customer Service for further assistance.
- 4. Place the product on a level, dry and heat-resistant surface ready to use. Ensure you read all instructions carefully and keep them for future use.
- 5. Wash the food compartments, warming bowl, lid and taco holders in warm soapy water and dry thoroughly.

**NOTE:** Do not use any abrasive cleaners as these may scratch the surface.

- 6. When all removable parts are clean and dry, reassemble the product.
- 7. Fill the food compartments with your favourite taco toppings such as lettuce, tomatoes, cheese, salsa etc.
- 8. Then arrange the compartments around the carousel.
- 9. Provide each diner with a taco holder. The taco holders can be used for hard or soft shell tacos for easy assembly of your taco.

**NOTE:** Do not use any abrasive cleaners as these may scratch the surface.

**WARNING! DO NOT immerse the warming base in water or any other liquid.**

**NOTE:** The first time the product is used, a slight odour may develop. This is entirely harmless and will soon dissipate. Ensure there is adequate ventilation when using the product.

## OPERATION

1. Remove the product from the packaging. Please save the packaging for easy storing.
2. Place the product on a flat, level and heat-resistant surface away from windows, drapes, curtains, blinds and wet areas.
3. Plug the product into the power outlet and turn on.
4. The warming bowl can be used to help keep any pre-cooked food warm while you are serving your tacos.

### **CAUTION! HOT SURFACE – USE CARE WHEN FILLING THE WARMING BOWL.**

5. Fill the warming bowl with your chosen sauce or meat. Be careful not to overfill the bowl.
6. Caution and care should be taken when using the warming bowl. DO NOT let the mixture boil over as this could cause burns.
7. Steam may be released from food during heating. For your safety, avoid contact with steam as it may cause burns.,
8. When removing the lid from the bowl, ensure to use extreme caution.
9. For a low heat setting, turn the power switch to “I” the power indicator light will be illuminated.
10. For a higher heat setting, turn the power switch to “II” the power indicator light will be illuminated.
11. Ensure to turn the power switch to the “O” position to turn off the heat to the warming bowl.

**WARNING! The warming bowl of the product becomes HOT whilst in use.**

**CAUTION! Caution should be used when using the product. Always use handles and dials to avoid burns. DO NOT pick up or move the product while it is in use.**

## Cleaning and Maintenance

### **CAUTION! Risk of short circuit!**

If water or other liquids enter the housing, they can cause a short circuit.

- Do not immerse the product, power cable or mains plug in water or other liquids.
- Do not let water or other liquids penetrate the product.

### **CAUTION! Risk of damage!**

Improper handling of the product can damage the product.

- Do not use any aggressive cleaners, sharp or metal cleaning utensils such as knives, hard scrapers or similar items. These could damage the surfaces.
- Never wash the product in the dishwasher. This would destroy the appliance.

## Cleaning the product

**NOTE:** Ensure that the product is disconnected from the power outlet and cooled down before cleaning.

- Before cleaning, switch the power/heat setting button to the “O”/OFF position and ensure that the product is cool.
- Turn the power off at the wall outlet and remove the plug from the wall by grasping the plug, do not pull on the cord.
- Do not use abrasive cleaners or scouring pads to clean the product as they may damage the non-stick coating of the warming bowl. All removable parts can be washed in warm soapy water. Ensure that the warming bowl is cool before cleaning.
- The base of the product can be wiped over with a damp cloth and wiped dry if required.
- NEVER immerse the base or power cord in water or any other liquid.

**WARNING!** The product and parts are **NOT** Dishwasher Safe.

- Reassemble the product when clean and dry for easy storing.

## Storage

All parts must be completely dry before being stored.

- Always store the product in a dry and clean area.
- Protect the product from direct sunlight.
- Store the product so that it is not accessible to children.

## Technical Specifications

|              |                   |
|--------------|-------------------|
| Model Number | ATM01             |
| Power Supply | 220-240V~ 50-60Hz |
| Rated Power  | 30W               |

# WARRANTY

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

| Contact for Kmart purchases                                                                                                                                                                                                                                          | Contact for Target purchases                                                                                                                                                                                                                                   |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Kmart Australia Ltd.<br>C/-Customer Service Centre<br>L2/ 1 MIDDLE ROAD, CHADSTONE<br>VIC 3148 AUSTRALIA<br>Customer Service: 1800 124 125<br>(Australia) or<br>0800 945 995 (New Zealand) or via<br>Customer Help at <a href="http://kmart.com.au">kmart.com.au</a> | Target Australia Pty Ltd<br>C/- Customer Service Centre<br>L2/ 1 MIDDLE ROAD, CHADSTONE<br>VIC 3148 AUSTRALIA<br>Customer Service: 1300 753 567 or via<br>Customer Help at<br><a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a> |