

Assembly Instructions







 



43706327/43706334/72785683/72785676 HENRY DINING CHAIR

CARE INSTRUCTIONS: WIPE CLEAN WITH A SOFT DAMP CLOTH. DO NOT USE ABRASIVE MATERIAL AND SOLVENTS. SPOT CLEAN IF NEEDED. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. CHECK AND TIGHTEN ALL PARTS REGULARLY. FOR INDOOR AND DOMESTIC USE ONLY.


WARNING: DO NOT STAND ON THIS CHAIR. USE ONLY ON A FLAT SURFACE. SUITABLE FOR ONE PERSON USE ONLY. DO NOT USE UNTIL ALL SCREWS, BOLTS AND KNOBS ARE FIRMLY SECURED. THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES. DO NOT SIT ON THE ARMREST. ADULT ASSEMBLY REQUIRED. DO NOT TIGHTEN THE SCREWS FULLY DURING ASSEMBLY. FULLY TIGHTEN SCREWS AFTER THE FINAL ASSEMBLY STEPS.

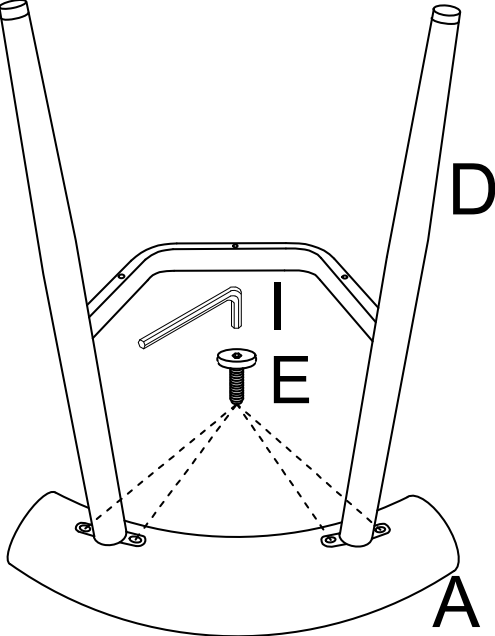FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

MAXIMUM SAFE LOAD: 100KG.


<p>AX1</p> 	<p>BX1</p> 	<p>1</p>  <p>Attention: Assemble screws after the holes are aligned. Do not tighten screws until all the screws are well in position.</p>
<p>CX1</p> 	<p>DX1</p> 	
<p>EX5</p>  <p>M6X16mm</p>	<p>FX4</p>  <p>M6X45mm</p>	
<p>GX4</p>  <p>M6</p>	<p>HX4</p>  <p>M6</p>	
<p>IX1</p>  <p>4#</p>		

2

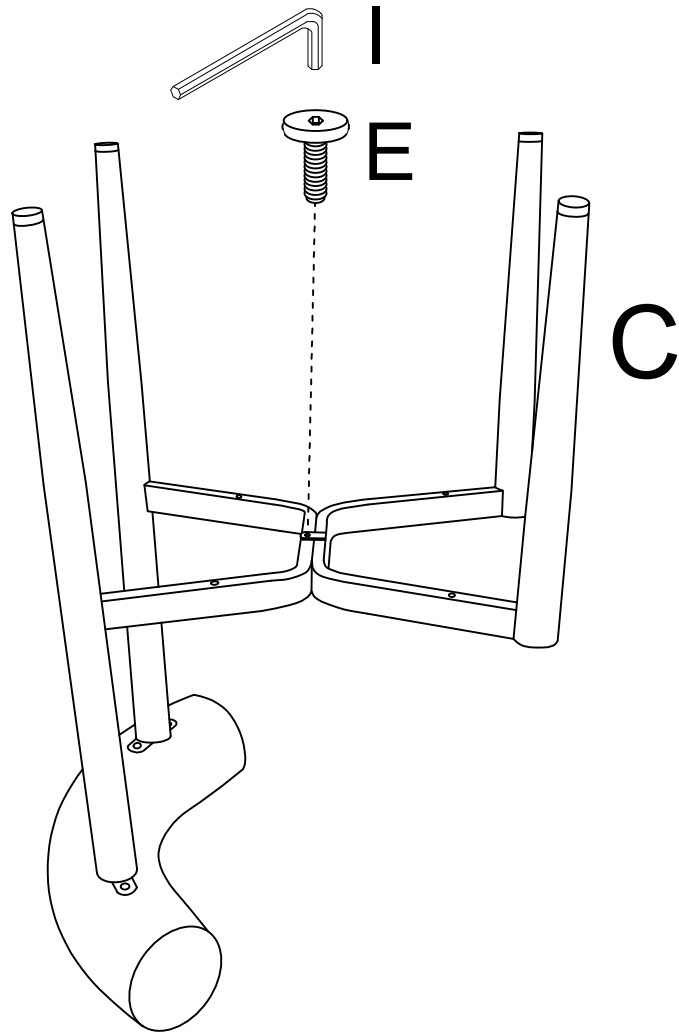


Attention: Assemble screw after the hole is aligned. Do not tighten screws until all the screws are well in position.

3

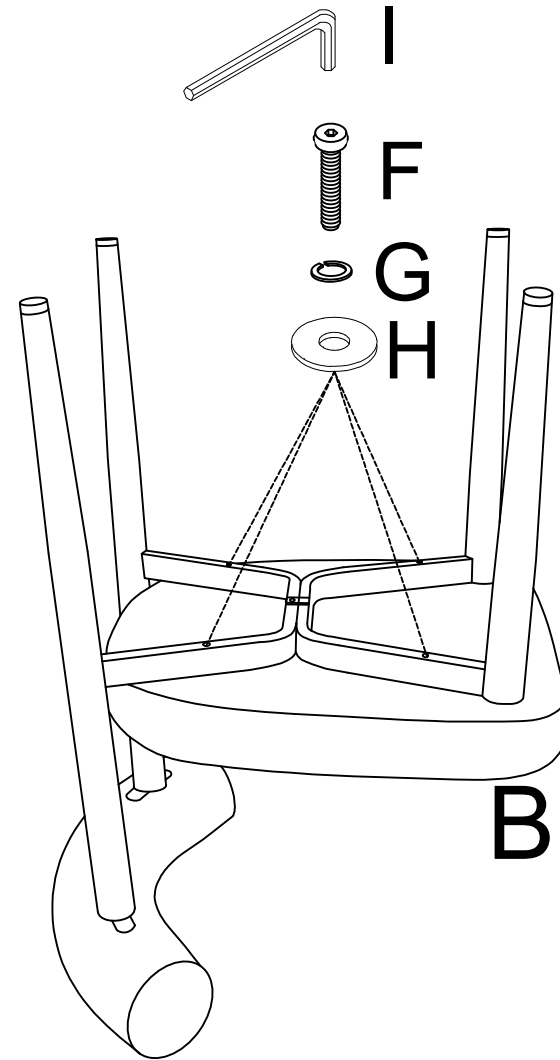


Attention: Assemble screws after the holes of legs and the bottom of seat are aligned. Do not tighten screws until all the screws are well in position.

4

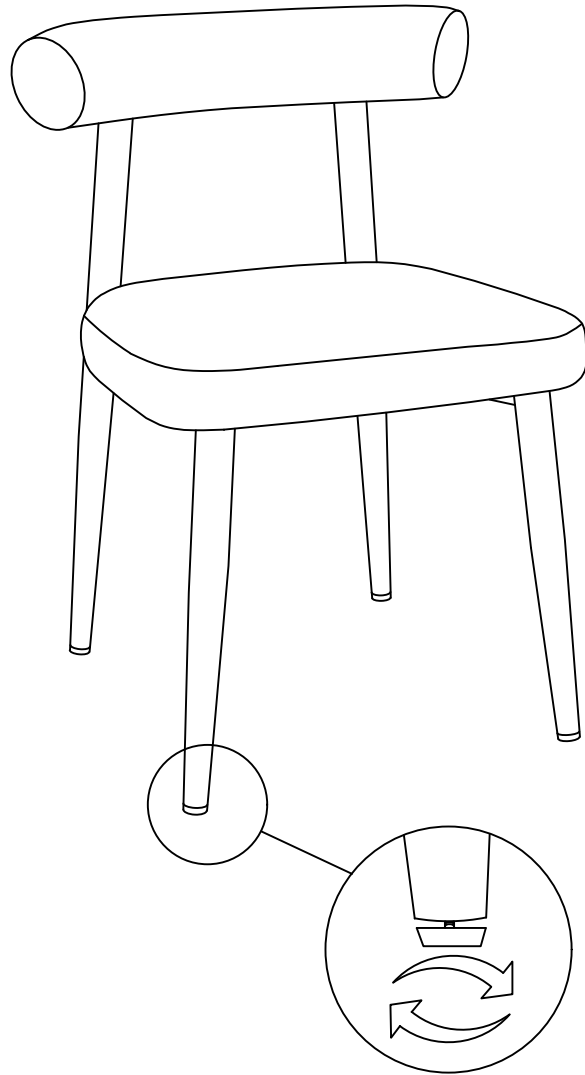

5

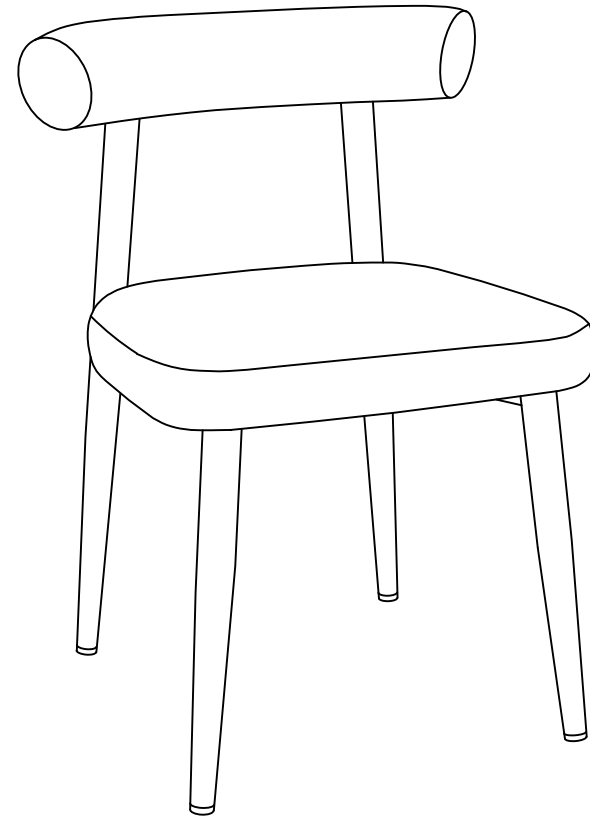

Please use adjustable foot pads to adjust the chair when it is uneven on the ground.