

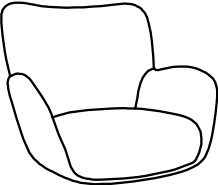

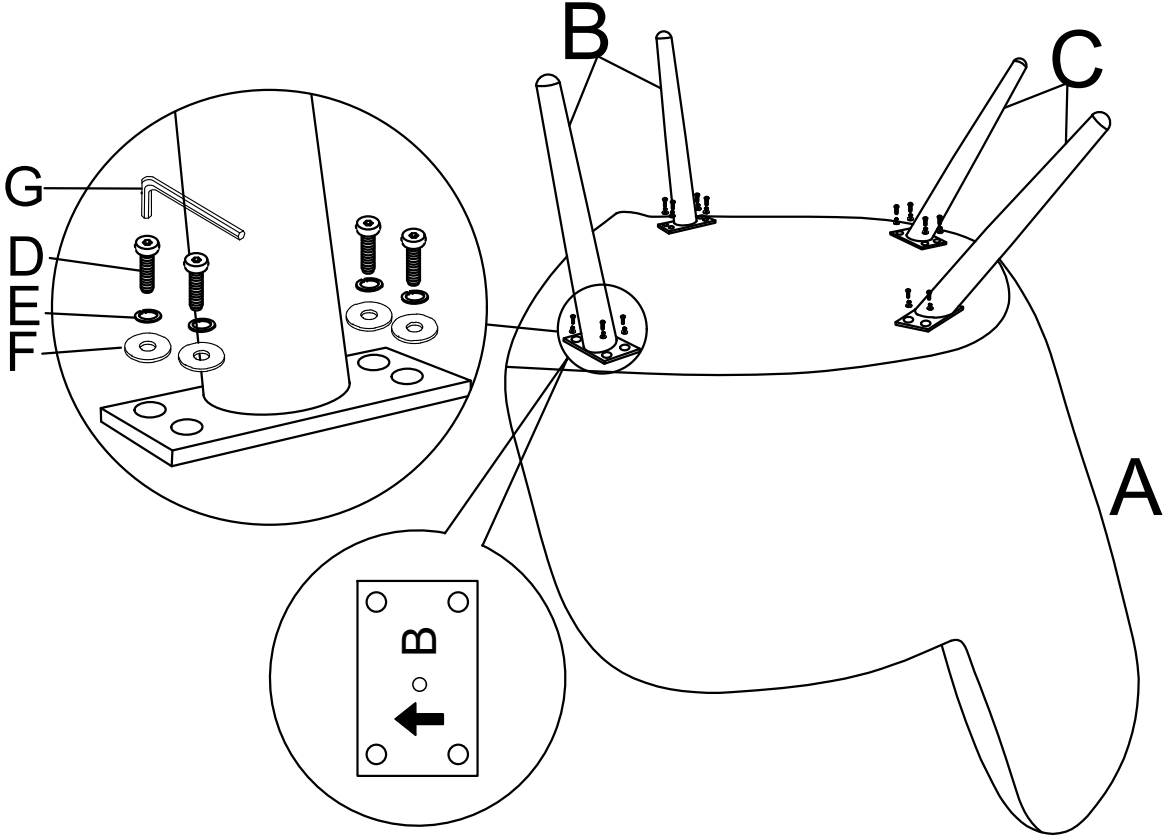
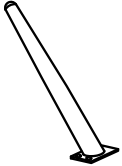
 

 
 
# Assembly Instructions

## 43706358 NOLAN LOUNGE CHAIR

**CARE INSTRUCTIONS:** WIPE CLEAN WITH A SOFT DAMP CLOTH. DO NOT USE ABRASIVE MATERIAL AND SOLVENTS. SPOT CLEAN IF NEEDED. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. CHECK AND TIGHTEN ALL PARTS REGULARLY. FOR INDOOR AND DOMESTIC USE ONLY.

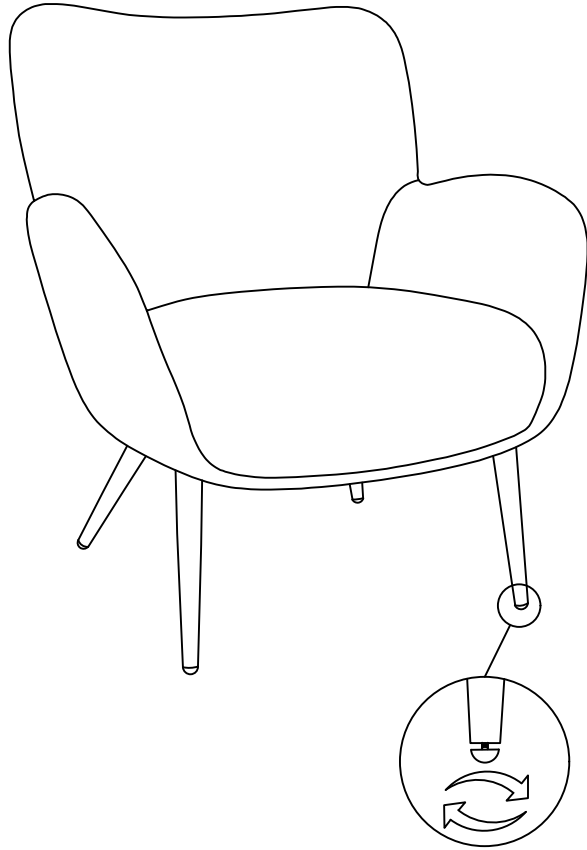
**WARNING:** DO NOT STAND ON THIS CHAIR. USE ONLY ON A FLAT SURFACE. SUITABLE FOR ONE PERSON USE ONLY. DO NOT USE UNTIL ALL SCREWS, BOLTS AND KNOBS ARE FIRMLY SECURED. THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES. DO NOT SIT ON THE ARMREST. ADULT ASSEMBLY REQUIRED. DO NOT TIGHTEN THE SCREWS FULLY DURING ASSEMBLY. FULLY TIGHTEN SCREWS AFTER THE FINAL ASSEMBLY STEPS. **FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.**

**MAXIMUM SAFE LOAD: 100KG.**

|  |   |   |
|--|---|---|
| <p><b>AX1</b></p>               | <p><b>BX2</b></p>                    | <p><b>1</b> Attention: Please do not tighten the screws until all the screws are well in position.</p>  <p>Please assemble in the direction of the arrow on leg B.</p> |
| <p><b>CX2</b></p>               | <p><b>DX16</b></p>  <p>M6X20mm</p>   |   |
| <p><b>EX16</b></p>  <p>M6</p> | <p><b>FX16</b></p>  <p>M6X16mm</p> |   |
| <p><b>GX1</b></p>  <p>4#</p>  |   |   |

# 2

Please use adjustable foot pads to adjust the chair when it is uneven on the ground.



# 3

