

# size:70mmx80mm

 
## anko

### Mini Digital Camera-Clear Instruction Manual

K: 43-712-991 | T: 72-443-545  
Model No.ZB2025091630


#### Accessories:

- > 1 x Camera
- > 1 x Charge & data cable
- > 1 x Keychain
- > 1 x Lanyard
- > 1 x Instruction manual

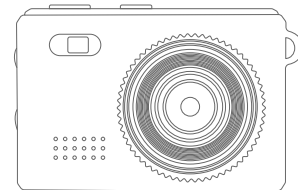

#### Product Specifications:

 - Product dimensions: 42.4\* 28.5\* 29.2mm(L\*W\*H)
- Display size: 0.96 inches
- Input: DC 5V 1A(Max)
- Battery capacity: 200mAh
- Optimal shooting distance: 50-130cm

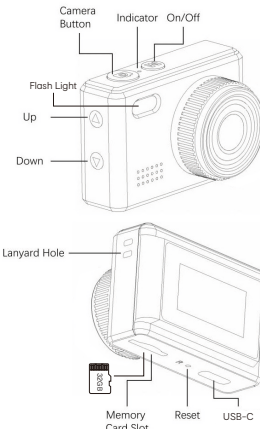

#### Operating Instructions

##### 1. Charging

Before using this device for the first time, please charge it. The device can be charged in the following ways.

- 1). Connect to a charger
- 2). Connect to a computer
- 3). Connect to a mobile power supply

The red charging LED will be illuminated whilst charging is in progress; It will turn off when charging is complete.

**Note:** When the battery is low, the device will enter a protected state and cannot be turned on. Please charge the device before turning it on and using it.

##### 2. Power on/off

Power on: Press and hold the on/off button (Ⓜ) for 3 seconds.  
Power off: Press and hold the on/off button (Ⓜ) for 2 seconds.

##### 3. Photo shoot

After inserting the memory card, the camera will enter Photo Shoot Standby mode directly after powering on, and the camera icon will appear in the upper left corner of the screen. Press the camera button (📷), the flashlight will light up, and the speaker will make a clicking sound to indicate that the photo has been taken. The number of remaining photos that can be taken is displayed in the upper right corner of the screen.

**Note:** Please keep the camera steady during the photo shoot.

##### 4. Video recording

In photo shoot standby mode, press the on/off button (Ⓜ). The video icon (📺) will appear in the upper left corner of the screen, and the device will enter video mode. Press the camera button (📷) to start recording. The video time counter will appear in the upper right corner of the screen. Press the camera button (📷) again to stop recording. The video file will be automatically saved to the memory card, and the device will return to video standby mode.

##### 5. Mute photo shoot/video recording mode

In standby mode, short press the Up button (⬆), and the microphone off icon (🔇) will appear in the upper left corner of the screen. At this time, both the photo shoot and video recording modes are in mute mode, and the flashlight will turn off.

##### 6. Sound recording mode

In standby mode, press and hold the camera button (📷) to enter sound recording mode and start sound recording automatically. Short press the camera button (📷) to stop sound recording and enter sound recording standby mode. Press the camera button again to start a new sound recording. Press the on/off button (Ⓜ) or press and hold the camera button (📷) to exit sound recording mode.

##### 7. Turn on flash light

Press and hold the Up button (⬆) for 3 seconds in standby mode to turn the flash light on; press and hold it (⬆) for another 3 seconds to turn it off.

##### 8. Filter

Short press the down button (⬇) in standby mode to select from a variety of filter effects. There are 6 filter effects to choose from.

##### 9. File playback

Short press the on/off button (Ⓜ) to switch to file playback mode, select the file you want to view using the up (⬆)/down (⬇) buttons, and press the camera button (📷) to play or pause. Press and hold the camera button (📷) to delete files. Press it again to select whether the current file or all files to be deleted.

 
##### 10. Computer camera

If the device has the memory card removed, it can be used as a computer camera by connecting it to the computer with the data cable (included).

For computers without a built-in camera, simply connect to use. For computers with a built-in camera, simply switch to this camera to be the settings (camera name: UVC).

##### 11. Time display settings

1). Insert the memory card into the device, turn it on, connect it to the computer, open the root directory, and find the text document named time.txt.  
2). Open the time.txt file and write the time you want to synchronize in strict accordance with the format of the file (you only need to change the text inside). After modifying the time, unplug the charge & data cable from the computer, and the camera will automatically shut down. Turn the camera on again, and the time will be successfully set.



##### 12. Automatic switch off

The device will switch off automatically in the following cases:  
1). If the battery is low while recording, the system will automatically save the video content and then automatically switch off.  
2). In standby mode, the system will automatically switch off if there is no operation for 3 minutes.

##### 13. Reset

If the device freezes or gets stuck for unknown reasons, you can insert a reset pin into the reset hole, short press it to complete the reset, and then turn it on to use normally.  
**Note:** Most crashes are caused by frequent wrong operations or memory card problems.

##### 14. How to connect to computer

After inserting the memory card into the device and connecting the device to the computer with charge & data cable included, it can be used directly as a USB drive. After a few seconds, the camera will display the removable disk icon, and the files on the memory card can then be edited.

#### WARNING!

**IMPORTANT INFORMATION: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE USE AS IT CONTAINS IMPORTANT INFORMATION.**

1. THIS PRODUCT IS NOT A TOY.
2. DO NOT CONNECT TO POWER EXCEEDING THE RECOMMENDED VALUE (5V-1A).
3. THE CAMERA SHOULD BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, ENCLOSURE, OR OTHER PARTS. IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED. (PLEASE CONTACT THE SERVICE PROVIDER FOR REPLACEMENT; DO NOT REPLACE IT BY YOURSELF.)

4. THIS CAMERA CONTAINS BATTERIES THAT ARE NON-REPLACEABLE.

5. MEMORY CARD IS SMALL PART WHICH MAY BE A CHOKING HAZARD DO NOT PUT INTO THE MOUTH.

6. THIS CAMERA CANNOT BE OPERATED DURING CHARGING BATTERY. ADULT SUPERVISION REQUIRED AT ALL TIMES.

7. THIS PRODUCT IS NOT WATERPROOF. KEEP IT AWAY FROM WATER AND MOISTURE.

8. DO NOT PLACE THE DEVICE NEAR STRONG MAGNETIC OBJECTS SUCH AS MAGNETS AND MOTORS.

9. PLEASE AVOID GETTING CLOSE TO ANY OBJECT THAT EMITS STRONG RADIO WAVES, AS HIGH MAGNETIC FIELDS MAY CAUSE DEVICE MALFUNCTION OR DAMAGE TO IMAGES AND SOUNDS.

10. IT IS RECOMMENDED TO USE HIGH-QUALITY MEMORY CARDS TO SAVE HIGH-QUALITY VIDEO FILES.

#### 12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.  
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**MADE IN CHINA**  
**CUSTOMER SERVICE:**  
**KMART AU:** 1800 124 125  
**KMART NZ:** 0800 945 995  
**TARGET AU:** 1300 753 567

# size:70mmx80mm

 
## anko

### Mini Digital Camera–Metallic Instruction Manual

K: 43-713-035 | T: 72-444-122  
Model No.ZB2025091632


#### Accessories:

- > 1 x Camera
- > 1 x Charge & data cable
- > 1 x Keychain
- > 1 x Lanyard
- > 1 x Instruction manual

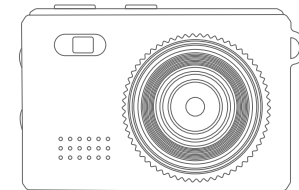

#### Product Specifications:

 - Product dimensions: 42.4\* 28.5\* 29.2mm(L\*W\*H)
- Display size: 0.96 inches
- Input: DC 5V 1A(Max)
- Battery capacity: 200mAh
- Optimal shooting distance: 50-130cm

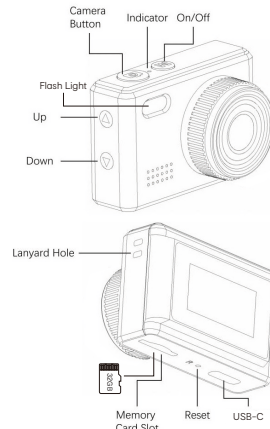

#### Operating Instructions

##### 1. Charging

Before using this device for the first time, please charge it. The device can be charged in the following ways.

- 1). Connect to a charger
- 2). Connect to a computer
- 3). Connect to a mobile power supply

The red charging LED will be illuminated whilst charging is in progress; It will turn off when charging is complete.

**Note:** When the battery is low, the device will enter a protected state and cannot be turned on. Please charge the device before turning it on and using it.

##### 2. Power on/off

Power on: Press and hold the on/off button (Ⓜ) for 3 seconds.  
Power off: Press and hold the on/off button (Ⓜ) for 2 seconds.

##### 3. Photo shoot

After inserting the memory card, the camera will enter Photo Shoot Standby mode directly after powering on, and the camera icon will appear in the upper left corner of the screen. Press the camera button (Ⓢ), the flashlight will light up, and the speaker will make a clicking sound to indicate that the photo has been taken. The number of remaining photos that can be taken is displayed in the upper right corner of the screen.

**Note:** Please keep the camera steady during the photo shoot.

##### 4. Video recording

In photo shoot standby mode, press the on/off button (Ⓜ). The video icon (□) will appear in the upper left corner of the screen, and the device will enter video mode. Press the camera button (Ⓢ) to start recording. The video time counter will appear in the upper right corner of the screen. Press the camera button (Ⓢ) again to stop recording. The video file will be automatically saved to the memory card, and the device will return to video standby mode.

##### 5. Mute photo shoot/video recording mode

In standby mode, short press the Up button (Ⓢ), and the microphone off icon (🔇) will appear in the upper left corner of the screen. At this time, both the photo shoot and video recording modes are in mute mode, and the flashlight will turn off.

##### 6. Sound recording mode

In standby mode, press and hold the camera button (Ⓢ) to enter sound recording mode and start sound recording automatically. Short press the camera button (Ⓢ) to stop sound recording and enter sound recording standby mode. Press the camera button again to start a new sound recording. Press the on/off button (Ⓜ) or press and hold the camera button (Ⓢ) to exit sound recording mode.

##### 7. Turn on flash light

Press and hold the Up button (Ⓢ) for 3 seconds in standby mode to turn the flash light on; press and hold it (Ⓢ) for another 3 seconds to turn it off.

##### 8. Filter

Short press the down button (Ⓡ) in standby mode to select from a variety of filter effects. There are 6 filter effects to choose from.

##### 9. File playback

Short press the on/off button (Ⓜ) to switch to file playback mode, select the file you want to view using the up (Ⓢ)/down (Ⓡ) buttons, and press the camera button (Ⓢ) to play or pause. Press and hold the camera button (Ⓢ) to delete files. Press it again to select whether the current file or all files to be deleted.

 
##### 10. Computer camera

If the device has the memory card removed, it can be used as a computer camera by connecting it to the computer with the data cable (included).

For computers without a built-in camera, simply connect to use. For computers with a built-in camera, simply switch to this camera to be the settings (camera name: UVC).

##### 11. Time display settings

1). Insert the memory card into the device, turn it on, connect it to the computer, open the root directory, and find the text document named time.txt.  
2). Open the time.txt file and write the time you want to synchronize in strict accordance with the format of the file (you only need to change the text inside). After modifying the time, unplug the charge & data cable from the computer, and the camera will automatically shut down. Turn the camera on again, and the time will be successfully set.



##### 12. Automatic switch off

The device will switch off automatically in the following cases:  
1). If the battery is low while recording, the system will automatically save the video content and then automatically switch off.  
2). In standby mode, the system will automatically switch off if there is no operation for 3 minutes.

##### 13. Reset

If the device freezes or gets stuck for unknown reasons, you can insert a reset pin into the reset hole, short press it to complete the reset, and then turn it on to use normally.  
**Note:** Most crashes are caused by frequent wrong operations or memory card problems.

##### 14. How to connect to computer

After inserting the memory card into the device and connecting the device to the computer with charge & data cable included, it can be used directly as a USB drive. After a few seconds, the camera will display the removable disk icon, and the files on the memory card can then be edited.

#### WARNING!

IMPORTANT INFORMATION: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE USE AS IT CONTAINS IMPORTANT INFORMATION.

1. THIS PRODUCT IS NOT A TOY.
2. DO NOT CONNECT TO POWER EXCEEDING THE RECOMMENDED VALUE (5V-1A).
3. THE CAMERA SHOULD BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, ENCLOSURE, OR OTHER PARTS. IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED. (PLEASE CONTACT THE SERVICE PROVIDER FOR REPLACEMENT; DO NOT REPLACE IT BY YOURSELF.)

4. THIS CAMERA CONTAINS BATTERIES THAT ARE NON-REPLACEABLE.
5. MEMORY CARD IS SMALL PART WHICH MAY BE A CHOKING HAZARD DO NOT PUT INTO THE MOUTH.
6. THIS CAMERA CANNOT BE OPERATED DURING CHARGING BATTERY. ADULT SUPERVISION REQUIRED AT ALL TIMES.
7. THIS PRODUCT IS NOT WATERPROOF. KEEP IT AWAY FROM WATER AND MOISTURE.
8. DO NOT PLACE THE DEVICE NEAR STRONG MAGNETIC OBJECTS SUCH AS MAGNETS AND MOTORS.
9. PLEASE AVOID GETTING CLOSE TO ANY OBJECT THAT EMITS STRONG RADIO WAVES, AS HIGH MAGNETIC FIELDS MAY CAUSE DEVICE MALFUNCTION OR DAMAGE TO IMAGES AND SOUNDS.
10. IT IS RECOMMENDED TO USE HIGH-QUALITY MEMORY CARDS TO SAVE HIGH-QUALITY VIDEO FILES.

#### 12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.  
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**MADE IN CHINA**  
**CUSTOMER SERVICE:**  
**KMART AU:** 1800 124 125  
**KMART NZ:** 0800 945 995  
**TARGET AU:** 1300 753 567