

Indoor Play Tent

Instruction Manual

3+
years

IMPORTANT KEEP FOR FUTURE REFERENCE

PLEASE READ ALL INSTRUCTIONS BEFORE SETUP OR FOLDAWAY


CAUTION: DO NOT FOLD OR UNFOLD THIS PRODUCT NEARBY PEOPLE, PETS OR OBSTACLES.

SETUP

1. REMOVE THE PRODUCT FROM THE PACKAGING AND CAREFULLY UNFOLD IT AT ARMS LENGTH.


CAUTION! THE PRODUCT MAY SPRING OPEN QUICKLY.

2. SIT THE STRUCTURE UPRIGHT. OPEN ONE SIDE OF THE PANEL LIKE YOU WOULD WITH A BOOK.

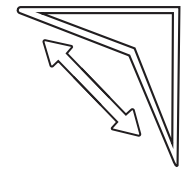


TOP VIEW

3. REACH INTO THE INSIDE CORNER AND PULL IT TOWARDS YOU. THIS WILL FORM THE CUBE STRUCTURE.

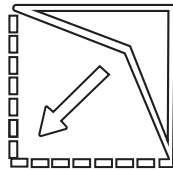


TOP VIEW

4. YOUR PLAY TENT IS NOW READY TO ENJOY.

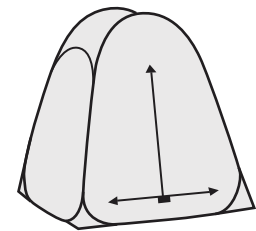


FOLDAWAY

1. TAKE THE STRUCTURE AND PUSH CORNER [A] INTO THE OPPOSITE CORNER [C].

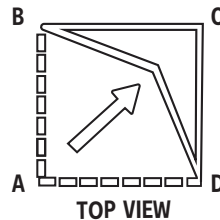

TOP VIEW


2. BRING CORNERS [B] AND [D] TOGETHER. THE STRUCTURE SHOULD NOW BE FLAT.

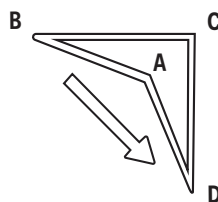

TOP VIEW


4. HOLD THE FLATTENED TENT UPRIGHT WITH ONE HAND ON EITHER SIDE.

TWIST TOWARD
YOU WITH THE
LEFT HAND

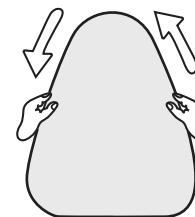


TWIST AWAY
FROM YOU WITH
THE RIGHT HAND

5. REVERSE ONE HAND AND TWIST THE FLATTENED TENT INTO ITSELF. THIS WILL FORM THREE LOOPS IN A FLATTENED DISC.

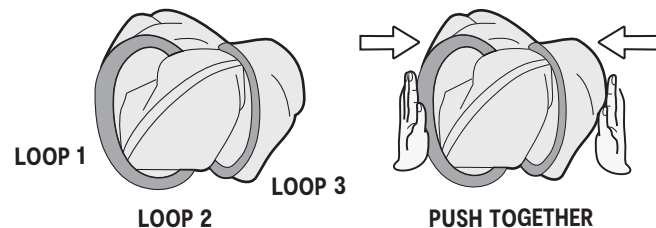

3. MAKE SURE THE PANELS OF YOUR STRUCTURE LAY FLAT AND THE EDGES JOIN UP AS MUCH AS POSSIBLE OR IT WILL MAKE THE FOLDING DIFFICULT NOW YOU ARE READY TO FOLD. IT IS RECOMMENDED TO STORE THE PRODUCT FLAT. HOWEVER FOR PORTABILITY, CONTINUE TO FOLD.

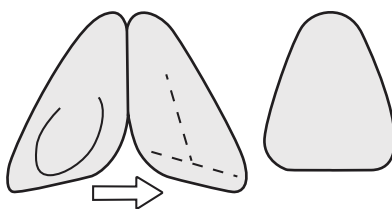

FOLD TOGETHER

6. BRING THE LOOPS TOGETHER AND STORE THE COMPACTED PLAY TENT CAREFULLY IN ITS CARRY BAG. CAUTION! IT MAY SPRING OPEN AGAIN SUDDENLY.

CARE INSTRUCTIONS:
WIPE CLEAN WITH A DAMP CLOTH.
FOR INDOOR USE ONLY.

ADULT ASSEMBLY AND SUPERVISION REQUIRED.
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

WARNING: THIS PRODUCT HAS AN INTERNAL SPRING FRAME THAT WILL POP OPEN WITH SOME FORCE. NEVER LET SMALL CHILDREN UNFOLD OR FOLD THIS PRODUCT. CAUTION MUST BE USED IN THE HANDLING OF THIS PRODUCT.

43-713-271

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: KEEP AWAY FROM FIRE AND ALL HEAT SOURCES. NEVER ALLOW A NAKED FLAME NEAR THIS PRODUCT. IT IS NOT FIREPROOF. THE FABRIC WILL BURN IF IT IS LEFT IN CONTINUOUS CONTACT WITH FLAME AND HEAT SOURCES. PLEASE THOROUGHLY READ INSTRUCTION MANUAL BEFORE USING THIS PRODUCT.