

Light Up Tent

Instruction Manual

3+
years

**IMPORTANT: KEEP FOR
FUTURE REFERENCE**

PLEASE READ ALL INSTRUCTIONS BEFORE
SETUP OR FOLDAWAY



Parts List:



Tent pole x 4 (when fully assembled)



Net bag x 4



Carry bag x 1



Tent x 1



String light x 1




Storage bag x 1

Battery Installation:


1. Open the battery compartment.
2. Insert batteries into the correct + and - polarities.
3. Close the cover.

REQUIRES 3 X 1.5V AA
BATTERIES (NOT INCLUDED).

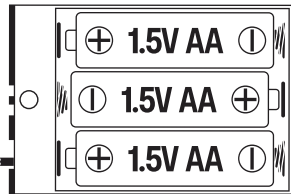


Assembly Instructions:

- Step 1. Connect each of the short poles together to form four long poles. Slide net into the pole from the red side and tie a knot.
- Step 2. Unfold the tent to form a round shape.
- Step 3. Insert the black end of the poles into the pockets located at the tip of the tent and insert the other white end of the poles into the pockets located at the bottom of tent. Tie the straps and the string light together with the poles. Put battery box into the bag at the roof of tent, slide light string into net bag along the arrow indicated path, Then use the string on the tent to tie a knot with the loop at the end.

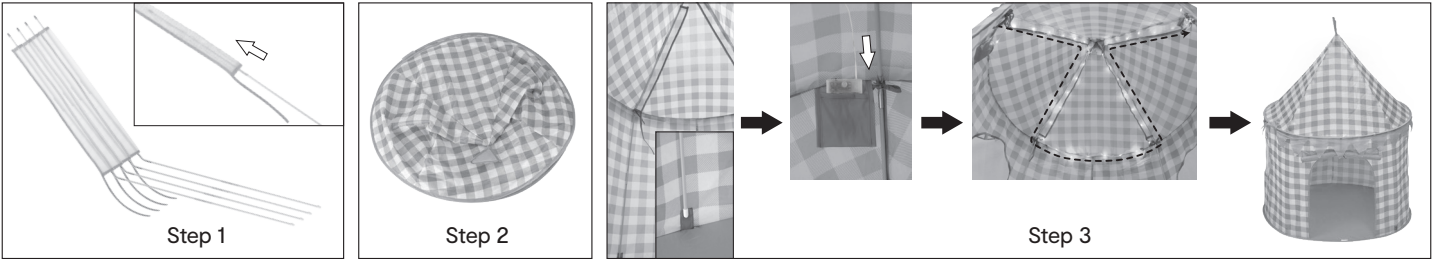

Folding Instructions for Tent:

Remove the string light and all the poles first, and fold the tent to form a round shape (Fig.1), then fold it from C,D point (Fig.2) Attach A point on the floor and fix it with foot (Fig.3), twist B point clockwise and let D point to move inside to form two smaller loops (Fig.4), overlap C point on B point, you can see a round folded shape (Fig.5). Wrap the folded tent with elastic belt to keep it compressed (Fig.6). Now it is easy to put it into the carry bag.

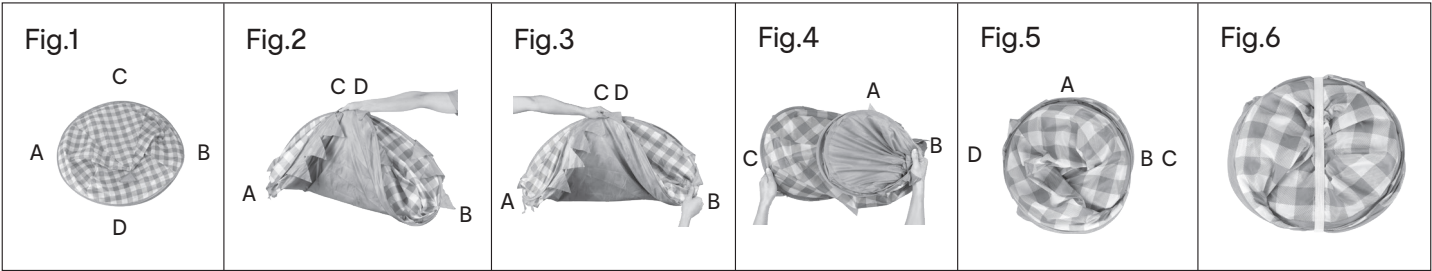

Care Instructions:

1. Wipe clean with damp cloth, do not use abrasive material or solvents.
2. Ensure the tent is clean and dry thoroughly before storage.
3. Always turn off the light and store in a dry place when not in use.

WARNING: THIS PRODUCT HAS AN INTERNAL SPRING FRAME THAT WILL POP OPEN WITH SOME FORCE. NEVER LET SMALL CHILDREN UNFOLD OR FOLD THIS PRODUCT. CAUTION MUST BE USED IN THE HANDLING OF THIS PRODUOCT.

WARNING: KEEP AWAY FROM FIRE AND ALL HEAT SOURCES. NEVER ALLOW A NAKED FLAME NEAR THIS PRODUCT. IT IS NOT FIREPROOF THE FABRIC WILL BURN IF IT IS LEFT IN CONTINUOUS CONTACT WITH FLAME AND HEAT SOURCES. PLEASE THOROUGHLY READ INSTRUCTION MANUAL BEFORE USING THIS PRODUCT.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING:
CHOKING HAZARD - SMALL PARTS.
NOT FOR CHILDREN UNDER 3 YRS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

ADULT ASSEMBLY REQUIRED.
PRODUCT MAY VARY FROM THE IMAGE SHOWN.
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.