



4. Lift the fork and insert the connecting pole to the fork legs simultaneously. Attach hardware A (M6 Bolt) from the front of the trike and secure with Hardware B (M6 Washer) and Hardware E (M6 Nut).

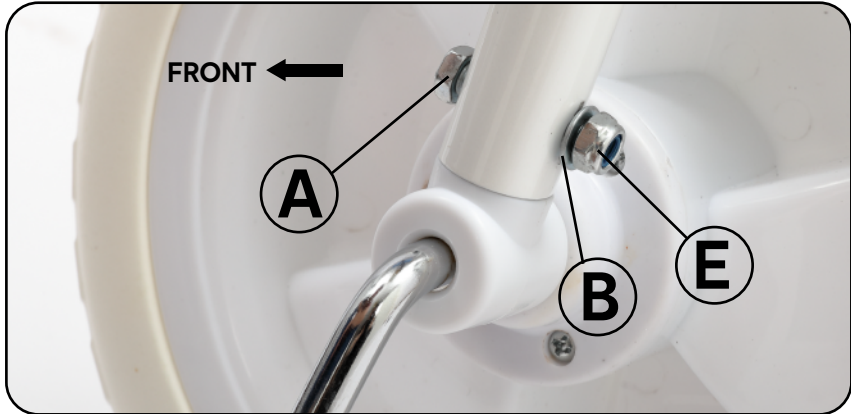

5. If necessary, assemble the stem bolt (4), washer (5), and wedge nut (2) to the stem (1). Point the stem toward the front tube of the trike and put it into the locknut (6). Put the stem at a comfortable height for the rider and tighten the stem bolt (4) firmly.

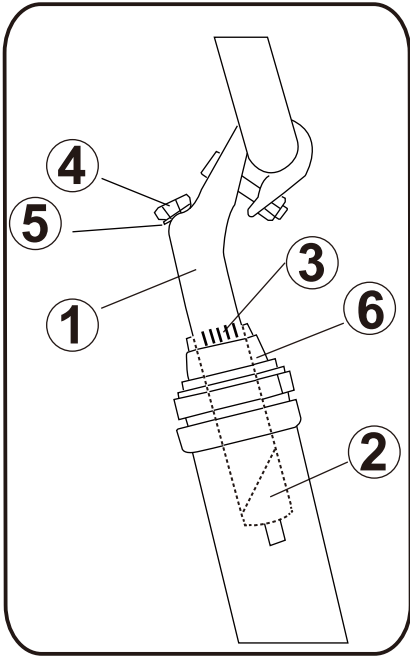

⚠ WARNING:

To prevent steering system damage and possible loss of control, the MINIMUM INSERTION mark (3) on the stem must be inside the locknut.

The Trike is now assembled.
Check and tighten all the hardware on the product before use.

Kmart Customer Service

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

INSTRUCTION MANUAL

Keycode: 43716241
Name: Retro Pedal Trike



Keycode: 43716241

Congratulations on purchasing Kmart Retro Pedal Trike. The aim of the trike is to assist in the development of your child’s balance, coordination and steering, as well as to build strength and motor skills. Your child will be able to learn how to ride with ease.

Important Safety Information:

- 1. Recommended for children 1 to 3 years.
- 2. Maximum weight is 20 kg.
- 3. Ensure all parts are securely fastened.
- 4. Verify that the wheels are properly attached.
- 5. Inspect the product thoroughly before allowing children to use it.
- 6. Failure to follow these instructions may result in injury
- 7. Protective gear should always be worn when riding any bike (helmet, protectors for knees, elbows and wrists).
- 8. Always ensure that appropriate footwear is worn whilst riding this trike.
- 9. Only one person to ride this trike at any given time.
- 10. This trike is not intended for stunting or tricks.
- 11. Do not use on roadways, always ride in a safe environment such as a park or private property.
- 12. This trike is not constructed for uneven paths, stairs, steep hills, or other rocky surfaces. Damage may be done to the trike and to the rider. Only use on flat surfaces.
- 13. Adult supervision is required at all time.

Contents of the package

 

Note! Certain parts, like the frame, saddle and front wheel set were pre-assembled in factory. Check if the package is complete and does not show any traces of damage. Should you find some parts missing or damaged, do not use the trike and contact the Kmart Customer Service Team. Keep the packaging or utilize it as required by the local regulations.

Caution! For the safety of kids do not leave parts of the packaging (plastic bags, blisters, boxes, styrofoam etc.) freely available. Risk of suffocation!

Cleaning and maitenance

- Clean the trike with a damp cloth or sponge.
- Protect the run trike from dust, humidity, water, extremely high and low temperatures, damage etc.

PARTS AND HARDWARE LIST

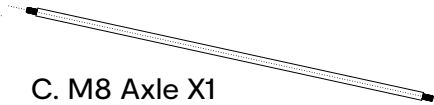 Frame X 1 set	 Front Wheel X 1 set
 Handlebar with Stem X 1 set	 Rear Wheel X 2 pcs
A. M6 Bolt X 2 	B. M6 Washer X 2 
C. M8 Axle X1 	D. M8 Washer X2 
E. M6 Nut X2 	F. M8 Nut X2 
G. Rear End Plug X2 	


WARNING: Item to be assembled by adult only. Choking hazard, contains small assembly components with functional sharp points and edges.

STEPS OF ASSEMBLY

1. Pick up all the components from the carton, check the contents as per list above.

WARNING: Dispose of the packaging promptly and keep it out of children’s reach to prevent the risk of suffocation.

2. Insert Hardware C (M8 Axle) to the rear tube of the trike and seal the ends of the rear tube with 2 X Hardware G (Rear End Plug). Ensure that there is equal distance at both ends of the rear axle for installing the rear wheel.

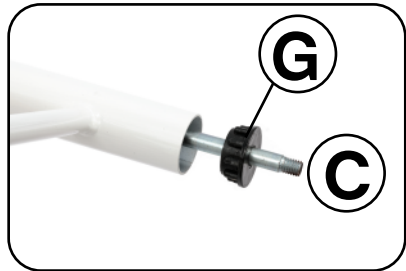

3. Attach two rear wheels onto the rear axle. Then, secure each wheel using two pieces of Hardware D (M8 Washer) and Hardware F (M8 Nut). Tighten both nuts on each side simultaneously using an Allen wrench to ensure the axle is centered and the wheels are evenly secured.

