

TOY STORY ROCKET SCOOTER INSTRUCTIONS

K: 43716272 | T: 72453537

WARNING! Assembly by adult only.

WARNING! Not suitable for children younger than 3 years old.

WARNING! Protective equipment should be worn.

WARNING! Not suitable for children with a body mass of more than 30 kg.

WARNING! Do not use on public roads.

Remove the scooter and all the parts from the box. Set out all the parts and read the assembly instructions prior to use. Keep the packaging until assembly is complete.

General instructions

- This scooter must be assembled by a responsible adult. Prior to use, ensure that the scooter has been assembled properly. Remove all the parts which are not necessary for play before giving the scooter to your child. Due to the skill it requires, the scooter must be used with care in order to avoid falls or collisions likely to injure the user or others.
- To use with a suitable protective equipment, including a helmet, shoes, elbow, wrist and knee protectors. Teach the child how to use it safely and responsibly.
- The scooter is not a toy for children under the age of 3 years.
- Non-rechargeable batteries must not be recharged; Install batteries strictly in accordance with the positive (+) and negative (-) polarity marks to avoid short circuits.
- Only use the battery type recommended for this product. Do not mix different types of batteries or new and used batteries. Damaged batteries must be removed from the product in a timely manner.
- Any modification to the scooter body and spray system is strictly prohibited.

Directions

- a) The scooter can be dangerous and can lead to traffic accident when used on public highways. Don't use on the public roads.
- b) It is best used on a flat, clean surface, free of gravel and grease.

- c) Avoid bumps and drainage grates that may cause an accident.
- d) The scooter does not include any headlights or lights. It is therefore not suited for use at night or during periods when visibility is limited.
- e) Always use under adult supervision.
- f) Do not allow more than one child to ride the scooter at the same time.

Before and after use

- Before use, check that all parts of the product are fastened, moving parts can rotate flexibly, and apply light lubricating oil to moving parts.
- Check for damage to all parts. If damage is found, stop using the product immediately and replace the damaged parts before resuming use.
- Check all of the connection elements: the brake, the quick release system of the steering column and the wheel axles must be adjusted correctly and not damaged.
- Also check the tyre wear.
- Clean the product in a timely manner after use, and remove the batteries from the battery compartment if the product is not to be used for a long time.
- Check the height of the steering system, and make sure the nuts are tightened and that the handlebars and the front wheel are perpendicular.

Battery usage rules

- Only use the recommended 1.5V AA batteries; do not use different types of batteries such as alkaline, zinc-carbon or nickel-cadmium rechargeable batteries.
- Do not mix new and used batteries, and do not use inferior batteries with bulging, leakage or damage.
- Batteries must be installed by an adult or under adult supervision, and placed strictly in accordance with the positive and negative polarity marks to avoid short circuits of the positive and negative poles.
- Do not attempt to recharge non-rechargeable batteries. Rechargeable batteries must be recharged under adult supervision and must be removed from the product before charging.
- Remove batteries from the product in a timely manner when they are exhausted. Be sure to remove the batteries if the product is not to be used for a long time to prevent battery leakage and damage to the product.
- Do not place batteries near fire sources or high-temperature environments, and do not tear or impact batteries.

During use

- Standing on the scooter, one hand on each handle, push with one of your feet to move forward. Proceed with caution at the start.


- Braking: a brake is located at the rear, when necessary, press down on it to slow down. Press down gradually in order to prevent skidding or loss of stability. The metal or aluminum brake may heat up after multiple uses. Avoid touching it during and after use.
- Shoes are mandatory and we strongly advise you to wear pants and long sleeve shirts to avoid injury if you fall.
- Explain to the child clearly how to open/close and especially how to lock the scooter before any use.

Assembly instructions:

HOW TO ASSEMBLE THE SCOOTER TOGETHER

Step 1: Assembly of the Handlebar

Press the "F" button and insert the tube with the flat side engaging with side "H" and side "F" engaging with side "I".

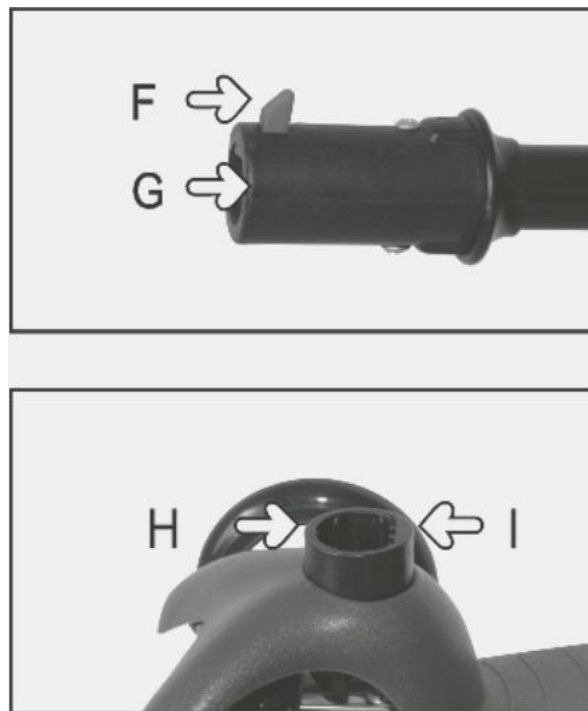

Step 2: Battery Installation

1. Use the star key included with the product to open the battery compartment cover.
2. Insert 3 x 1.5V AA batteries and ensure correct positive and negative polarity installation.
3. Close and lock the battery compartment cover. Battery installation must be performed by an adult throughout the process.



Step 3: Spray System Operation

1. Add room temperature water to the marked water filling compartment of the product; purified water is preferred. Do not add any other liquids.
2. Press the spiral part down repeatedly to fill the liquid storage tank with water until it is completely full.



3. Press the spray power switch, and the spray function, lights and sound effects will turn on simultaneously (one press to activate).
4. To turn off the machine, hold down the same power button until the machine shuts down.



Care Instructions

A.Wheel bearings: Avoid going through water, oil or sand as this can damage wheel bearings.

To look after the wheel bearings, systematically check that the wheels turn properly by turning the scooter upside-down and using your hand to spin the wheels. If the wheels do not spin they must then be removed to check their condition. First unscrew the wheel axle, remove the axle and detach the wheel, then carefully push the two wheel bearings out of their housing. If they are chipped or dented, new ones should be bought. If there is no visible damage, they must then be oiled. To do this, remove all traces of grease, mud or dust with a kitchen towel or cloth, and re-oil them with a grease spray or by leaving them to soak overnight in oil [turn them several times in the oil first]. Remove reassemble the wheel bearings and axles, followed by the wheel, onto the scooter. proceed in the same manner for the other wheel.

B. Wheels: The wheels wear down with time and can be pierced if overly used on rough surfaces. The back wheel on which the brake is applied is particularly affected after several hours of braking. In the interests of safety, they should be checked regularly and changed if necessary.

C.Modifications: The original product must by no means be modified except for the maintenance-related changes mentioned in these instructions.

D.Nuts and axles: These should also be checked regularly. They can become loose after a while in which case they should be tightened. They can become worn and not tightened properly, in which case they should be replaced.

MADE IN CHINA

CUSTOMER SERVICE

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567

