 


70mm

100mm

anko

Instruction Manual

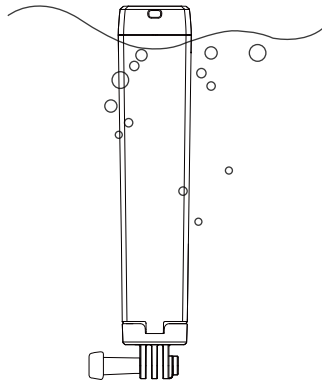

4 in 1 Tripod
K: 43-719-655 | T: 72-466-148
MADE IN CHINA

Please check the waterproof rating of the floating devices before underwater.
Please read the instruction manual before use,
and retain it for future reference.

1. Safety Instruction

- 1) This product supports floating devices up to 200 grams. Heavier devices exceeds 200g may not float and will sink.
- 2) Rinse it with fresh water after use in saltwater.
- 3) The product comes with a wrist strap to prevent the tripod and the mounted device from slipping and getting lost underwater.
- 4) This device is not a toy. Children should be supervised to ensure they do not play with the device.
- 5) This product contains no user serviceable parts and do not attempt to repair the product yourself. Leave any servicing or repairs to qualified personnel only.
- 6) Always place the tripod on a flat and stable surface to prevent the mounted device from tipping over. When using outdoors, also be aware that extending the mount too high increases the risk of it falling. Be particularly careful when using in windy conditions.
- 7) Do not leave the product near heat sources such as furnaces or heaters, or inside vehicles on hot days.

2. Product Specifications

 
Material: plastic + aluminum alloy
Colour: black + orange
Folded height: 220mm (phone holder not included)
Maximum operating height: 610mm (phone holder not included)
30m depth 30min IPX8 waterproof
Supports floating devices up to 200g
Suitable for 1/4" thread hole devices,
such as action camera or phone holder.
Product weight for tripod: 168g
Product weight for phone holder: 69g

3. Package Contents

4 in 1 Tripod x1
Phone Holder x1
Wrist Strap x1
Instruction Manual x1


4. Extend the Pole

- A: Twist the pole anti-clockwise to unlock the 3 telescopic stages.
- B: Extend the pole to 3 stages when unlocked.
- C: Twist the pole clockwise to lock 3 stages and make the pole locked, safe and secure.

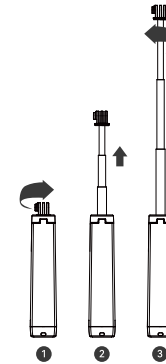


5. Install the Phone Holder or Action Camera

 Insert screw on the flat side of the mount. Rotate the screw clockwise until it comes out of the threaded nut.

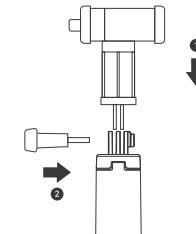


6. Foldable Legs

 Extend the legs of the tripod outward, and repeat the above steps until the other legs are also unfolded and fixed.

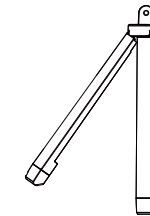

7. Attach Wrist Strap

 Pinch the small end string of the wrist strap. Slide the opposite end of the wrist strap through the loop and pull to tighten.

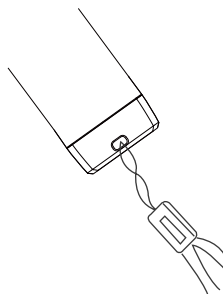

8. Operate in the Expanded State

- A. Shake off the seawater from the stick.
- B. Soak in fresh water: 10 minutes
- C. Rinse under tap water: 5 minutes
- D. Wipe off any remaining water droplets with a soft, dry cloth and let it air dry.
- E. Store the product in a dry, well-ventilated area.

9. Broad Compatibility

Note:

> This product supports floating devices up to 200grams. Heavier devices exceeds 200g may not float and will sink.



Two-claw mounting base (Not included)



Action camera (Not included)



Frame (Not included)



Waterproof case (Not included)

Note:

> The universal action camera comes with the 1/4" thread hole needs to be mounted on the tripod via a two-claw mounting base / frame / waterproof case (not included).

> If the corresponding accessory is missing, it is recommended to purchase it separately.

12 Month Warranty:

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567