


Moon Bluetooth® Speaker

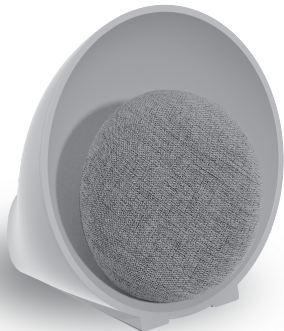


User Manual



K: 43-720-323 | T:72-465-462
MODEL: CZ3-23040

- Includes:
- › Moon Bluetooth® Speaker
 - › USB-A to USB-C Charging Cable
 - › User Manual

Function overview:

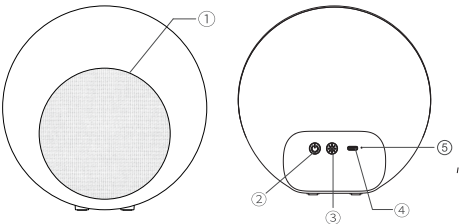

- 1. Lamp
- 2. Power ON/OFF Play/Pause
- 3. Lamp Brightness Adjust
- 4. USB-C Input
- 5. Charging/Bluetooth Indicator Light

How to use this speaker:

- Function Operation**
- Power ON/OFF** Long press button 3 seconds
- Play/Pause** Short press button

Specifications:

Model no: CZ3-23040	Charging voltage: DC 5V = 1A
Version: Bluetooth V5.3	Battery capacity: 3.7V 1500mAh
Working distance: 10 Meters	Charge time: Approx 2 hours
Music time: Approx 2-3 hours(80% volume)	Output: RMS 4W (THD≤10%)

Power ON/OFF Button

- › Press and hold button for 3 seconds to turn on the device. The lamp will turn on automatically. The Bluetooth indicator light will flash blue rapidly with a power-on tone. At this point, the device will automatically enter Bluetooth pairing mode.
- Short press to play/pause music.

Lamp Function

- › Press button to turn on the lamp.
- Press button again to change lighting brightness modes:
low brightness →medium brightness →high brightness →off

Bluetooth Mode

- › Once the speaker is powered on, it will automatically enter Bluetooth mode in several seconds, and Bluetooth indicator light will flash in blue.
- › Search for "anko43720323"(Bluetooth name)and connect from the Bluetooth menu on the source device that has Bluetooth turned on.
- › Once the speaker is successfully paired and connected, the Bluetooth indicator light will stay solid blue.
- › When the device is turned on again, it will automatically reconnect to your media device via Bluetooth as it did last time.

Charging

- › The device is powered by rechargeable Lithium battery. Please use provided USB-C cable for charging(Plug the USB-C end into the device's charging port and the other USB-A end into a charger with a minimum output of 5V/1A). The charging indicator light will turn red while charging and will turn off when fully charged.

Operating Environment & Storage Environment

- › Operating environment
Temperature: -5 °C~40 °C
- › Storage environment
Temperature: -20°C~60 °C

12 month warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

- Statement**
- This product shall not be connected to power supply source exceeding PSI (5V d.c. 1A).
 - Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
 - A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
 - The apparatus is only suitable for mounting at height < 2m.
 - The marking located on the bottom of the apparatus.

CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

