

70x92mm 128克铜板纸 双面印刷风琴折

70mm

92mm

anko Instruction Manual



Kids Interactive Video Chat
K: 43-721-085 | T: 72-466-681

MADE IN CHINA

Please read this user manual carefully before use.
Please retain for future reference.

1. Safety instruction

Misuse of batteries can lead to bursting, causing a fire or chemical burns. Please read the precautions:

1. Do not disassemble.
2. Do not crush and expose the battery to shock or force. Such as hammering, dropping or stepping on it.
3. Do not short-circuit
4. Do not expose to high temperatures or place near a heat source.
5. Do not dispose of in fire.
6. Do not handle a damaged or leaking battery.
7. Keep the battery out of the reach of children.
8. Keep the battery dry.
9. If you notice any signs of damage, cease use, and contact support.
10. Dispose of the item at a suitable waste station, as the battery cannot be added to normal waste.
11. Keep the item out of direct sunlight and away from any heat source.
12. Do not drop the product on a hard surface. Do not expose it to moisture or immerse it in water.
13. Keep the lens clean. If the pictures taken are blurry, it could be because there is dust or dirt on the lens. You can clean the lens by: blowing on the lens or gently wiping the lens with a dry cloth.
14. Charging should only be completed by an adult.


2. Product specifications

Dimension: 130*53*22mm
Display screen: 2.0 inch IPS
Speaker power: 1W
Video distance (outdoor): within 100 meters in open areas
Video distance (indoor): within 80 meters in open areas
Battery capacity: 3.7V, 800mAh per device
Working time: up to 2.5 hours under video chat
Charging time: 2.5 Hours
Charging power: 5V \square 0.5A
Charging port: USB-C
2 handsets weight: 130g

3. Package contents


Video chat *2 handsets
Lanyard*2
Charging cable*1
User manual*1

4. Product overview

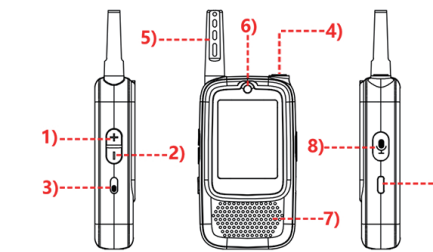

- 1) Volume +
- 2) Volume -
- 3) Power switch
- 4) Confirm/Return
- 5) Antenna

- 6) Lens
- 7) Speaker
- 8) Intercom
- 9) Charging interface

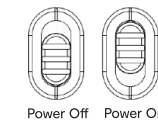

Power On/Off function
1. The product is factory-settings with the power switch in the "OFF" position.
2. As shown in the figure, pushing the button upward will turn on the device, and pushing it downward will turn it off.
3. Please fully charge the product before using it for the first time.


5. Main interface button operation:



1. Press the "Volume +/-" button to move left and right to select the function.
2. Press the "Confirm/Return" button to enter the function.
3. Long press the "Confirm/Return" button to return to the interface.

Micro Chat Camera Album Setting

5.1. Micro chat

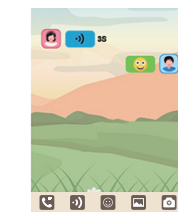

Kindly note: It has been paired before shipment and can be used directly. If it show disconnect, please follow the pairing method to manual pair.

Pairing method

1. Turn on both devices, then check the colour of the status indicator lights in the upper left corner.
2. If both devices show one red light and one green light, press and hold the "Volume +" button on both simultaneously to enter pairing mode. A prompt sound will be heard after successful connecting.
3. If both devices show red or green lights, press and hold the "Volume -" button on one device until it automatically powers off and restarts. The status indicator lights will then change to one red and one green, and then press the volume increase buttons of both devices simultaneously to enter the pairing mode.

Function operation

There are five functions that you can choose from Micro chat, press the "Volume +/-" button to select a function, and then press the "Confirm/Return" button to enter.

1. Video chat
2. Voice chat
3. Emoji communicate
4. Picture
5. Camera

(1) Video chat

- 1) Press the "Confirm/Return" button to select video call, then dial and wait for the other party to connect. When you are the caller, long press to hang up. When there is an incoming call, short press the "Confirm/Return" button to connect, long press the "Confirm/Return" button to reject.
- 2) Short press the "Volume +/-" button to increase or decrease the volume. Long press the "Volume +" button to switch the video window display, and short press the "Confirm/Return" button to switch the stickers and filters.
- 3) Long press the "Intercom" button for voice communication.
- 4) Long press the "Confirm/Return" button to end the video call.

(2) Voice chat

Long press the "Intercom" button to speak, and release the button to end and send the voice.
Short press the "Intercom" button and "Volume +/-" button to select the voice message, and then click the "Confirm/Return" button to play.

(3) Emoji communicate

Press the "Confirm/Return" button to select Emoji communicate.
Press the "Volume +/-" button to move left and right to select the emoji, and click the "Confirm/Return" button to send.
Long press the "Confirm/Return" button to return to the Micro chat interface.

(4) Picture

- 1) Press the "Confirm/Return" button to select picture.
- 2) Press the "Volume +/-" button to move left and right to select the image, and click the "Intercom" button to send;
- 3) Long press the "Volume -" button on the image interface to bring up the delete menu; Press the "Volume +/-" button and "Confirm/Return" button to select whether to delete.
- 4) Long press the "Confirm/Return" button to return to the Micro chat interface.

(5) Camera

- 1) Press the "Confirm/Return" button to open camera function, press the "Intercom" button to switch stickers and filters; then press the "Confirm/Return" button to take a photo and send it.
- 2) On Micro Chat interface, press the "Intercom" button and "Volume +/-" button to select the photo, press the "Confirm/Return" button to view, press again to return to Micro chat interface.
- 3) Long press the "Confirm/Return" button to return to the Micro chat interface.

5.2. Camera

- 1) Press the "Volume +/-" button to select and click the "Confirm/Return" button to enter the camera function.
- 2) Click the "Confirm/Return" button to switch stickers and filters, press the "Confirm/Return" button to take a photo.
- 3) Long press the "Confirm/Return" button to back to the main interface.
- 4) Can view the photos on album.

5.3. Album

- 1) Press the "Volume +/-" button to select and press the "Confirm/Return" button to enter album.
- 2) Click the "Volume +/-" button to move left and right to select the image, click the "Confirm/Return" button to view, and click again to return to the preview interface.
- 3) Long press the "Volume -" button on the image interface to bring up the delete menu; press the "Volume +/-" button and the "Confirm/Return" button to select whether to delete.
- 4) Long press the "Confirm/Return" button to back to the main interface.

5.4. Settings

- 1) Click the "Volume +/-" button to select and press the "Confirm/Return" button to enter settings.
- 2) Click the "Volume +/-" button to move up and down to select settings, click the "Confirm/Return" button to confirm and save.
- 3) Long press the "Confirm/Return" button to back to the interface.

Language Setting

English, 简体中文, Français, Deutsch, Español, Português, Nederlands, Italiano, Polski, Ελληνικά, Magyar, Svenska, Norsk, Dansk, Suomi, Română, русский язык, 日本語, עברית, 한국어, العربية, Bahasa Indonesia

Brightness	1-5
Screen Saver Mode	1 min, 3 min, 5 min, 10 min, off
Sound	Deactivate, low, medium, high
Factory Reset	Yes, No

12 Month Warranty:

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

