

89.5 mm


128.0 mm

anko

Alarm Clock Transparent Operating Instructions

Please read this manual carefully before using this product and retain it for future reference.

Includes:
1 × Alarm clock
1 × User manual

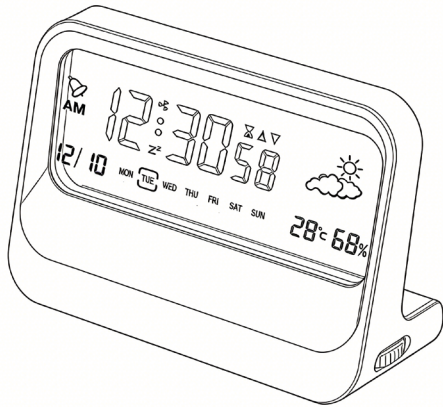

K: 43721092 | T: 72466605
Model: JLR-81997

Product Specifications:


Power supply: 2 x 1.5V AAA Alkaline batteries (not included).

Important Safety Information

- › Insert batteries with correct polarity (+/-).
- › Do not mix different types of batteries or new and used batteries.
- › Non-rechargeable batteries must not be recharged.
- › Remove batteries if the product will not be used for an extended period.
- › Exhausted batteries should be removed immediately.
- › Keep batteries out of reach of children and pets.
- › Swallowing batteries may cause serious injury or death. Seek immediate medical attention if swallowed.
- › Do not expose the product to excessive heat or dispose of batteries in fire.
- › Do not attempt to open, crush, or short-circuit batteries.
- › Dispose of batteries in accordance with local regulations.


LCD full-screen display

The product features a full-screen LCD display for clear and easy reading.

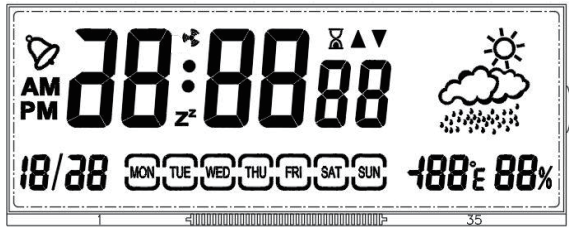

Product diagram

Refer to the diagram below for button and function locations.

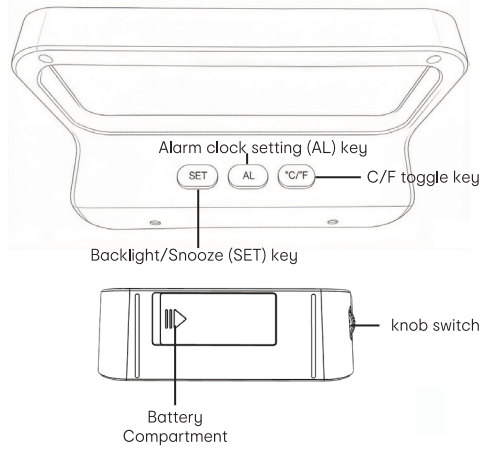

OPERATING INSTRUCTIONS

1. Normal Time Mode

After powering on, the clock will beep and display the full screen after approximately 2 seconds.

Default settings:

- › Time: 06:00
- › Date: Jan 1, 2024 (Monday)
- › Alarm: 00:00
- › Time format: 24-hour (default)

Set Time:

Long press the SET button for 3 seconds to enter the setting mode.

Press the knob to cycle through settings:

Year → Month → Day → Hour → Minute → Exit

Rotate the knob to adjust the value.

Press the SET button to switch between 12-hour and 24-hour formats.

› 12-hour format displays AM/PM

› 24-hour format hides AM/PM

If no operation is performed for 10 seconds, the clock will automatically exit the setting mode.

The weekday is updated automatically according to the date.

2. Alarm Setting

In normal mode, long press the AL button to enter alarm setting.

Press the knob to switch between:

Hour → Minute → Exit

Rotate the knob to adjust the value.

Alarm ON/OFF:

- › Press the AL button once → alarm icon appears (🔔)
- › Press again → alarm icon disappears

If no operation is performed for 10 seconds, the system exits automatically.

3. Snooze Function

When the alarm is sounding:

- › The buzzer sounds and the alarm icon (🔔) flashes
- › Press the knob to stop the alarm and enter snooze mode
- › The snooze icon (ZZ) will flash (5-minute interval)

If no operation is performed for 1 minute, the alarm will stop automatically.

During snooze mode:

Press any button (except the knob) to cancel snooze.

4. Temperature & Humidity Display

Temperature range: -10°C to 50°C (-14°F to 122°F)

- › Display "LL" when below range
- › Display "HH" when above range

Humidity range: 10%–95%

- › Display "LL" when below range
- › Display "HH" when above range

Press the C/F button to switch between °C and °F.

Measurements update every 60 seconds.

Weather icons (☀️, ☁️, 🌧️, 🌨️) change automatically based on temperature and humidity.

5. Hourly Chime

Long press the C/F button in time display mode to turn the hourly chime ON/OFF.

When enabled, the chime icon (🔔) appears on the display.

The chime operates from 07:00 to 21:00.

6. Count-Up Timer (⏲️)

Maximum time: 23:59:59

Press the knob to enter timer mode.

- › If the timer is not 00:00:00, long press the knob to reset
- › Press the knob to start counting
- › Press again to pause

While paused:

- › Rotate the knob to adjust time (switches to countdown mode (⏳)).
- › Long press the knob to reset.

Press SET to switch to the time display while timing continues.

The count up timer icon (⏲️) will flash to indicate the timer is running.

If no operation is performed for 10 seconds, the display returns to clock mode.

7. Countdown Timer (⏳)

Press the knob to enter timer mode.

Rotate the knob to set time:

Seconds → Minutes → Hours

Press the knob to start countdown.

Press again to pause.

If paused for 10 seconds, the display returns to clock mode.

While paused:

- › Rotate the knob to adjust time.
- › Long press the knob to reset.

Press C/F to quickly switch between 5-minute and 25-minute countdown.

Press SET to switch to the time display while timing continues. The

Countdown Timer icon will flash to indicate the timer is running.

- › When countdown ends, the clock beeps.
- › Press any key to stop the alarm.

Press SET to return to time display while countdown continues. The

countdown icon (⏳) will flash when running.

When the countdown ends, the alarm will sound.

Press any button to stop it.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567



6.2 mm