


anko

Mobile TV Stand Operating Instructions

Please read this manual carefully before using this product and retain it for future reference.

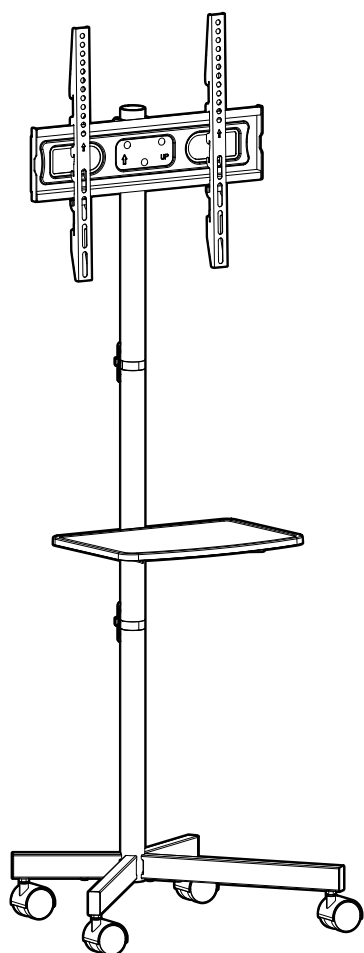

K: 43721115 | T: 72466704
Model: JLR-81521

Product Specifications:

Maximum Load Capacity: 40kg
Compatible TV Size: Up to 60 inches
VESA Pattern Compatibility: 100 × 100 mm – 400 × 400 mm

✓ 100 x 100mm	✓ 300 x 200mm
✓ 100 x 200mm	✓ 300 x 300mm
✓ 200 x 100mm	✓ 400 x 200mm
✓ 200 x 200mm	✓ 400 x 300mm
✓ 200 x 300mm	✓ 400 x 400mm

Max: 15.9"

Max: 15.9"

400mm


400mm

Note: Ensure your TV mounting holes match the VESA pattern supported by this stand before installation.

Important Safety Information

- To reduce the risk of injury or damage, please follow these safety instructions:
- Ensure the TV stand is placed on a flat, stable surface before use.
 - Do not exceed the maximum load capacity of 40 kg.
 - Only mount TVs that are compatible with the VESA patterns specified for this stand.
 - Ensure all screws and components are securely tightened before mounting the TV.
 - Always mount the TV with the assistance of another person.
 - Do not climb, sit, or hang on the stand.
 - Do not place excessive weight on the shelves.
 - When moving the stand, ensure the TV is securely mounted and move slowly to avoid tipping.
 - Lock the castor wheels when the stand is stationary to prevent unintended movement.
 - Keep children away from the stand during assembly and installation.

PACKAGE CONTENTS:

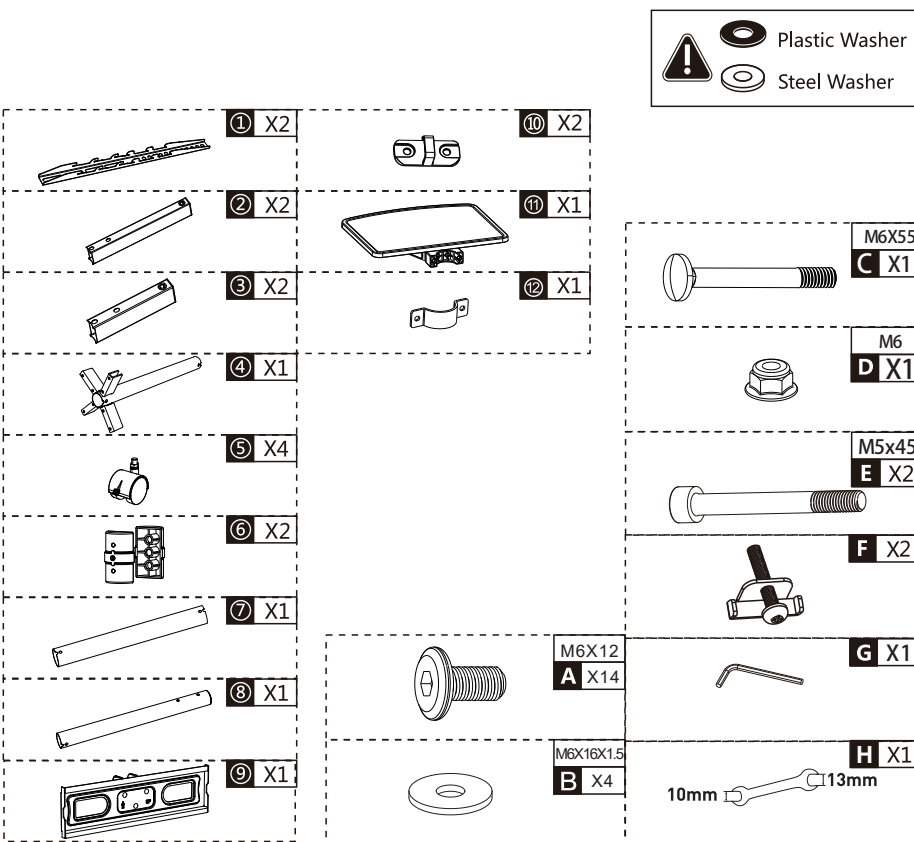


FOR TV INSTALLATION

M4X12 TV1 X4	M4X30 TV1 X4	M6X16 TV2 X4	M6X35 TV3 X4	M8X25 TV4 X4	M8X50 TV5 X4
M4/M5 TV6 X4	M6/M8 TV7 X4	2.5mm TV8 X8	10mm TV9 X4	22mm TV10 X4	

ASSEMBLY INSTRUCTIONS


Step 1: Base Assembly

- Locate the following parts: four Base Legs (two long ① and two short ②), base frame ③, eight Screws A (M6x12), and Wrench G.
- Identify the front and back of the base frame ③. The side with the pre-drilled holes is the back.
- Attach the two longer Base Legs ① to the front of the base frame, and the two shorter Base Legs ② to the back.
- Insert Screws A into the bottom of the base frame and tighten them securely using Wrench G.

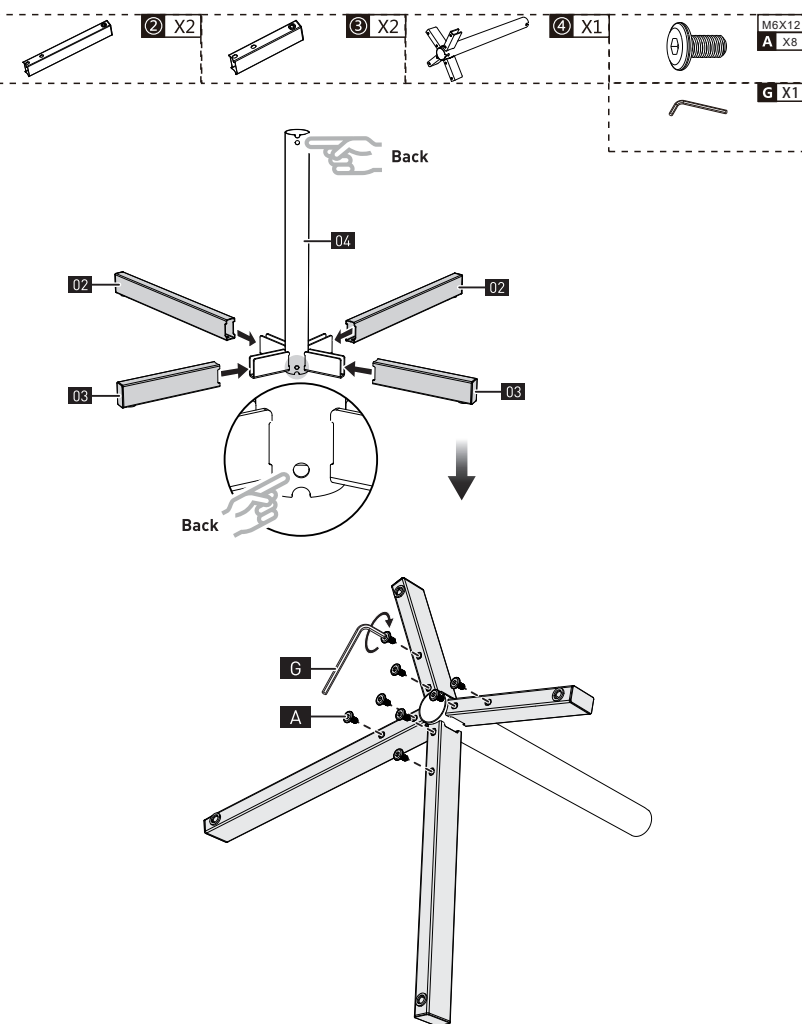


Step 2: Attach the Castors

- Locate the four Castors ④ and Spanner H.
- Turn the base assembly upside down on a soft, non-scratch surface (e.g., carpet or cardboard).
- Screw the Castors ④ into each of the four pre-drilled holes at the bottom corners of the base legs.
- Tighten all Castors securely using the provided Spanner H.

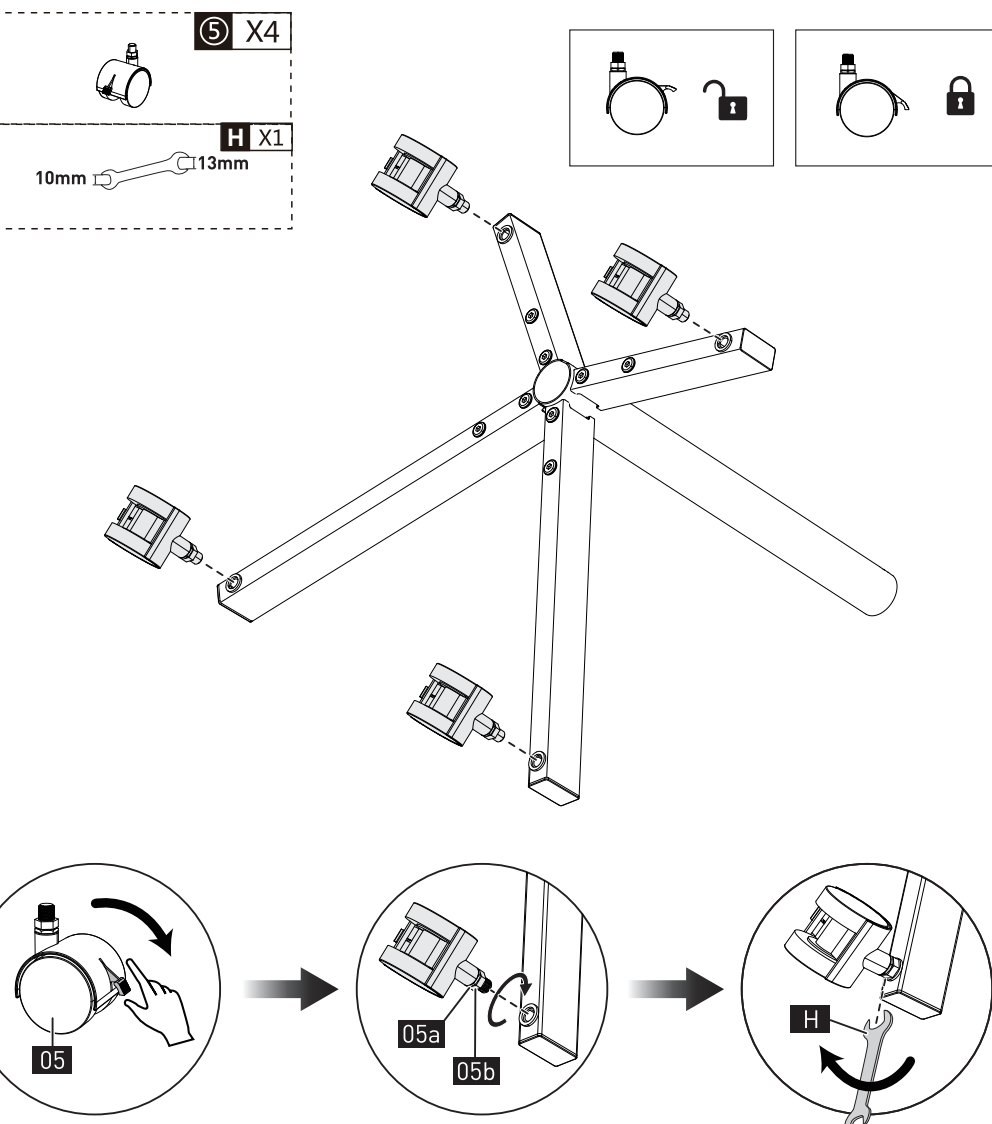


Step 3: Attach the Support Bar

- With the frame right-side-up, locate the Bar Connector ⑤ and the Support Bar ⑥.
- Insert the Bar Connector ⑤ to the base frame ③.
- Insert the Support Bar ⑥ into the Connector ⑤.
- Tighten the Bar Connector ⑤ securely using Wrench G.

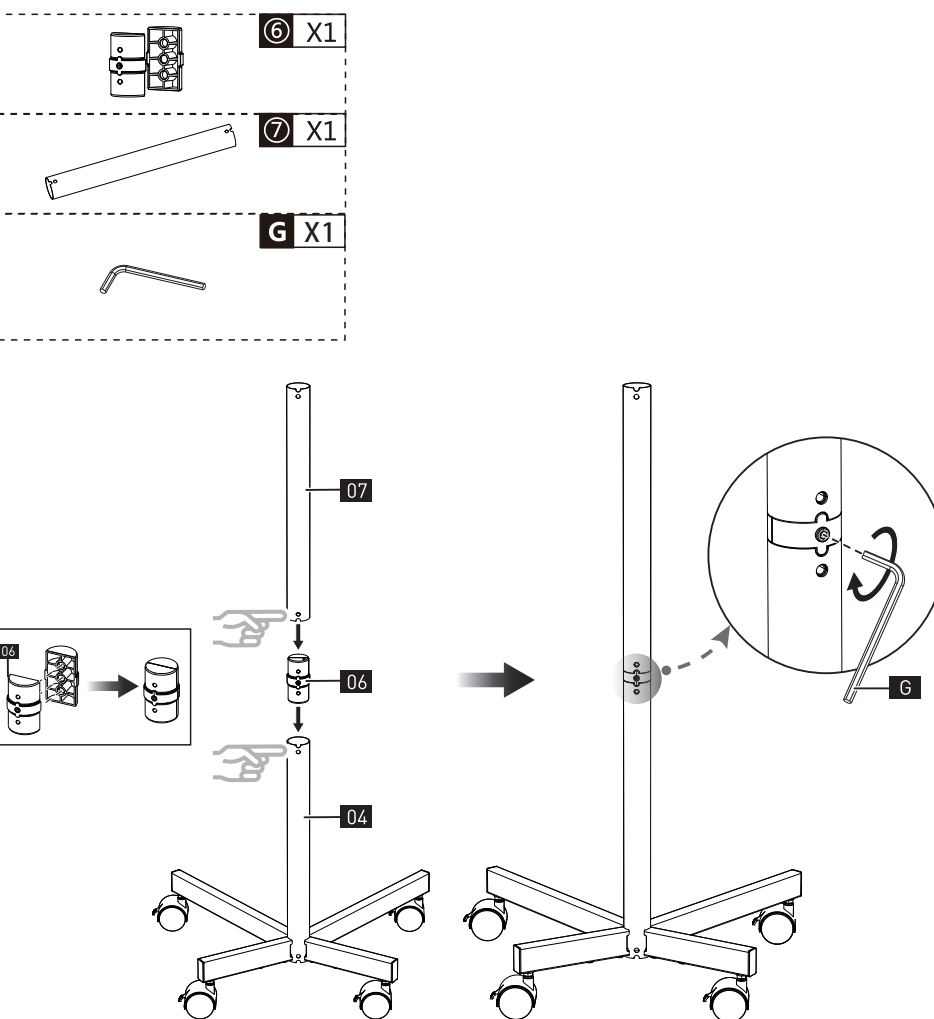


Step 4: Assemble the TV Mounting Bracket

- Locate the following parts: Top Support Bar ⑦, VESA Mount Plate ⑧, Screws A (M6X12), Washers B (M6X16X15), Screw C (M6X55), Nuts D, Wrench G, and Spanner H.
- Identify the front and back of Bar ⑦. The side with the pre-drilled holes is the back.
- Insert a Screw C through the top left hole of the VESA Plate ⑧ and the corresponding hole in Bar ⑦. Secure it with a Nut D on the other side, and tighten using Spanner H.
- Attach the bottom of the VESA plate ⑧ to Bar ⑦ using Screws A and Washers B. Tighten securely using Wrench G.

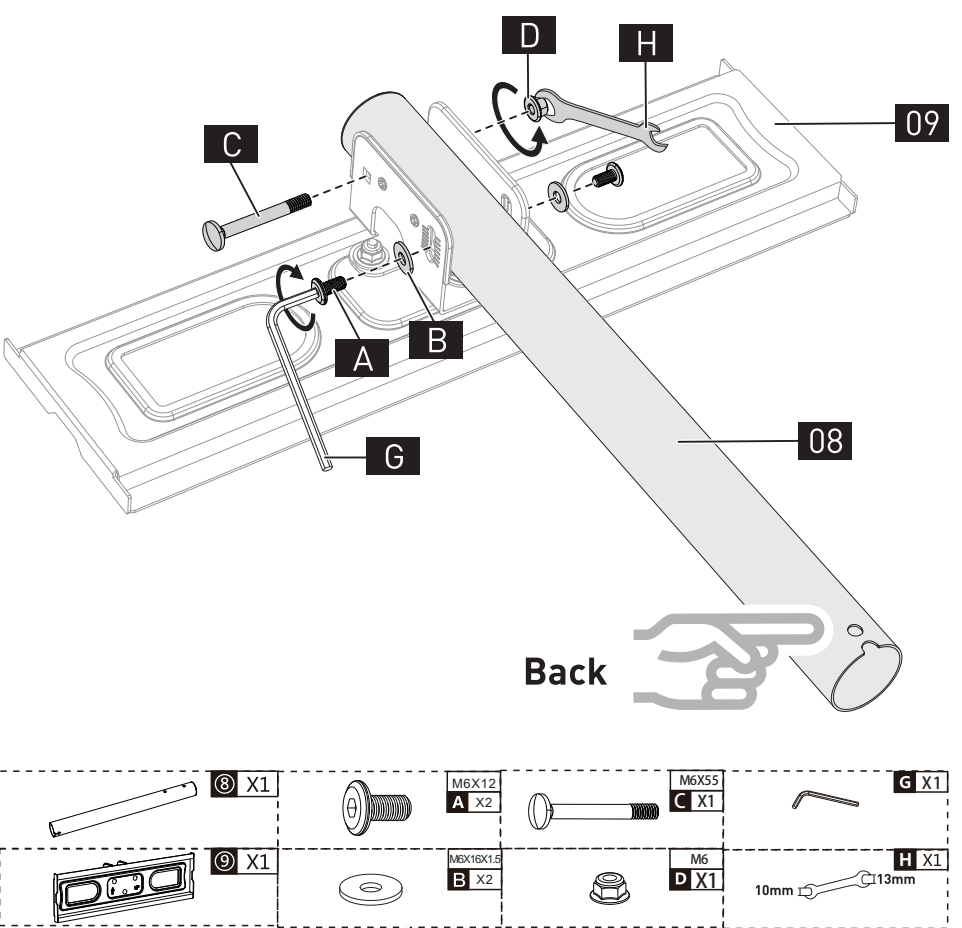


Step 5: Connect Upper Bracket into Base Frame

- Locate another Bar Connector ⑤.
- Connect the Support Bar ⑦ and the Top Support Bar ⑦ using the Bar Connector ⑤.
- Tighten the Bar Connector ⑤ securely using Wrench G.

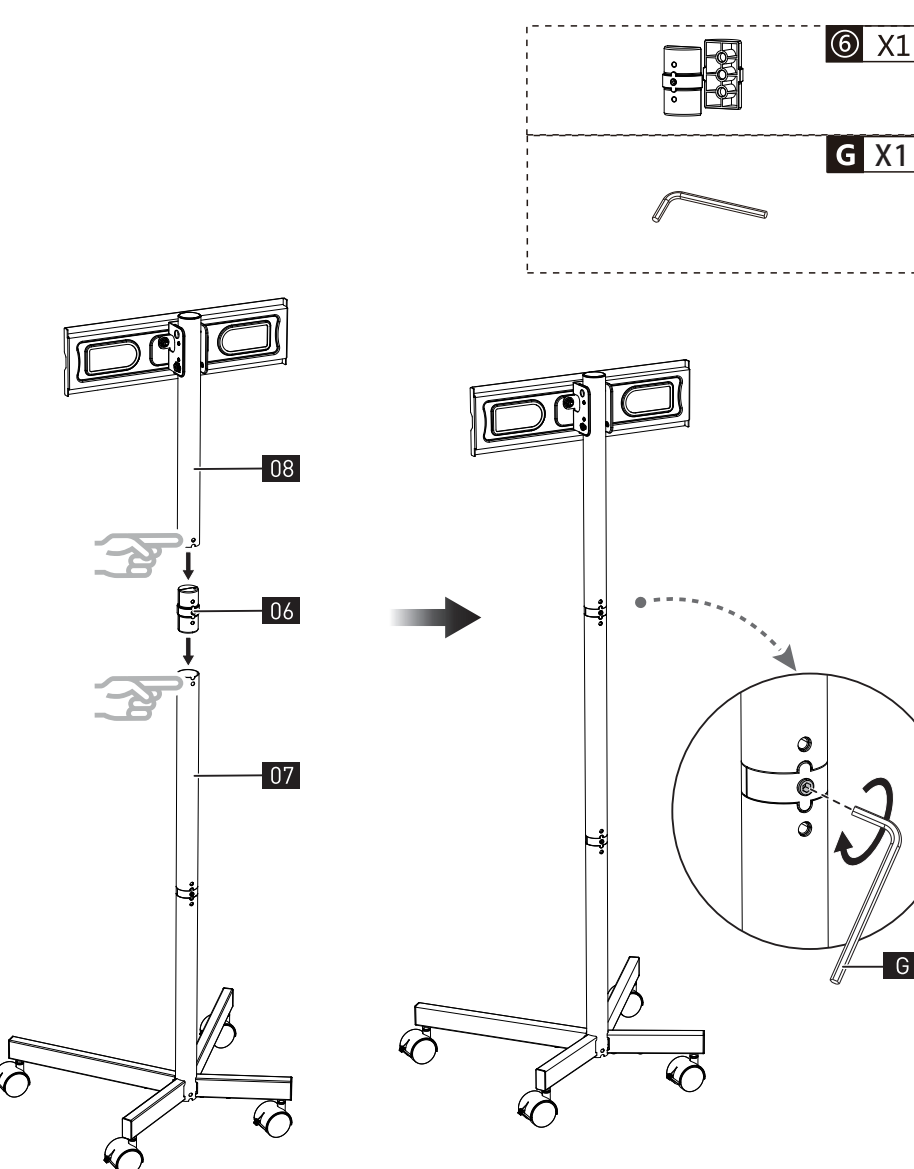


Step 6: Install the shelf

- Locate the Shelf ⑨, U-Bolt ⑩, Screws E, Washers B, and Wrench G.
- Position the Shelf ⑨ at the desired height on the Support Bar ⑦.
- Secure it by placing the U-Bolt ⑩ around the bar and through the shelf.
- Place a Washer B on each side of the U-Bolt, then insert and tighten Screws E through the U-Bolt. Tighten securely using Wrench G.

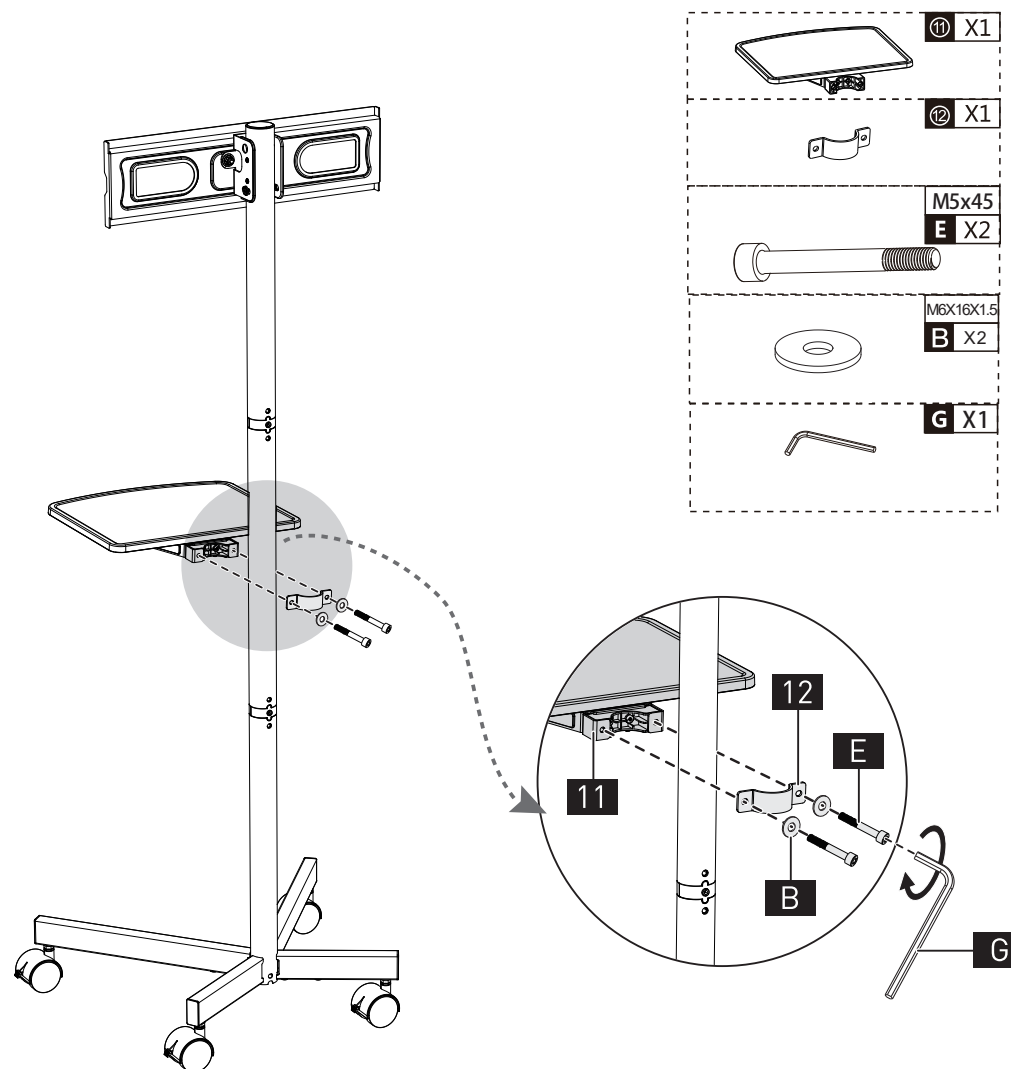


Step 7: Measure the TV Mounting Holes

- Measure the vertical and horizontal distance between your TV's mounting holes (the VESA pattern).
- You are provided with screws in three diameters: M4, M6, and M8. Select the screw diameter that fits your TV's mounting threads.

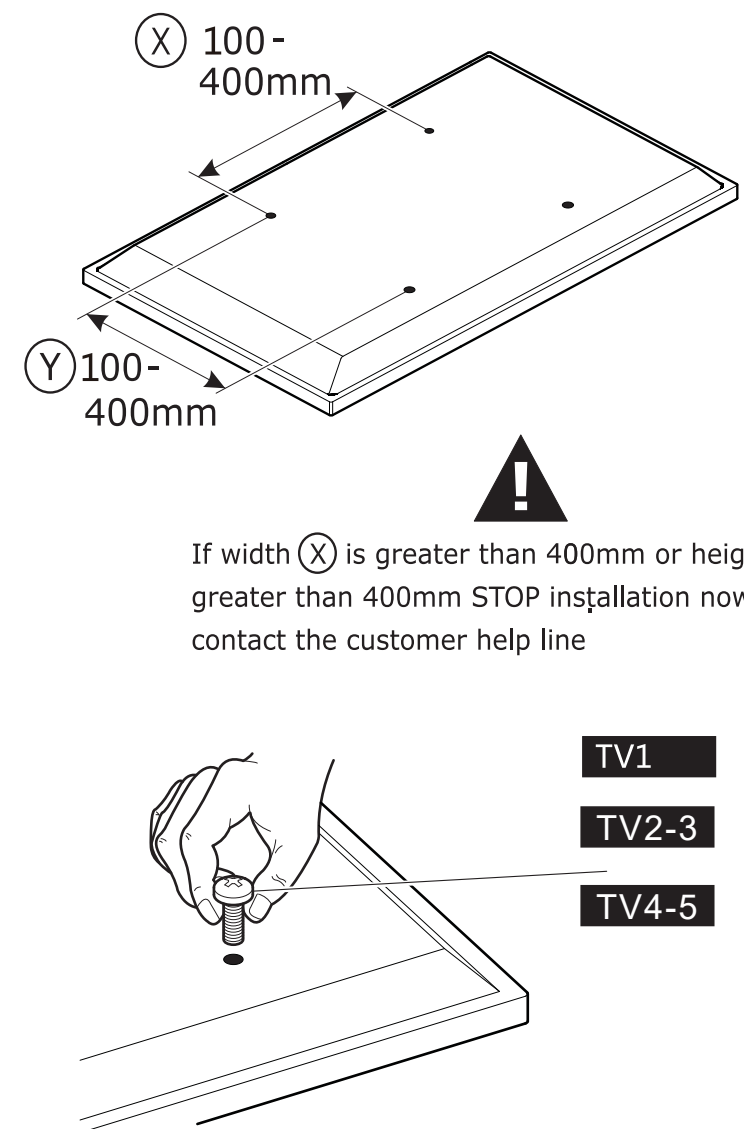


- The mounting plate accommodates TVs with spacers (for irregular/obstructed backs) or without spacers (for flat backs).

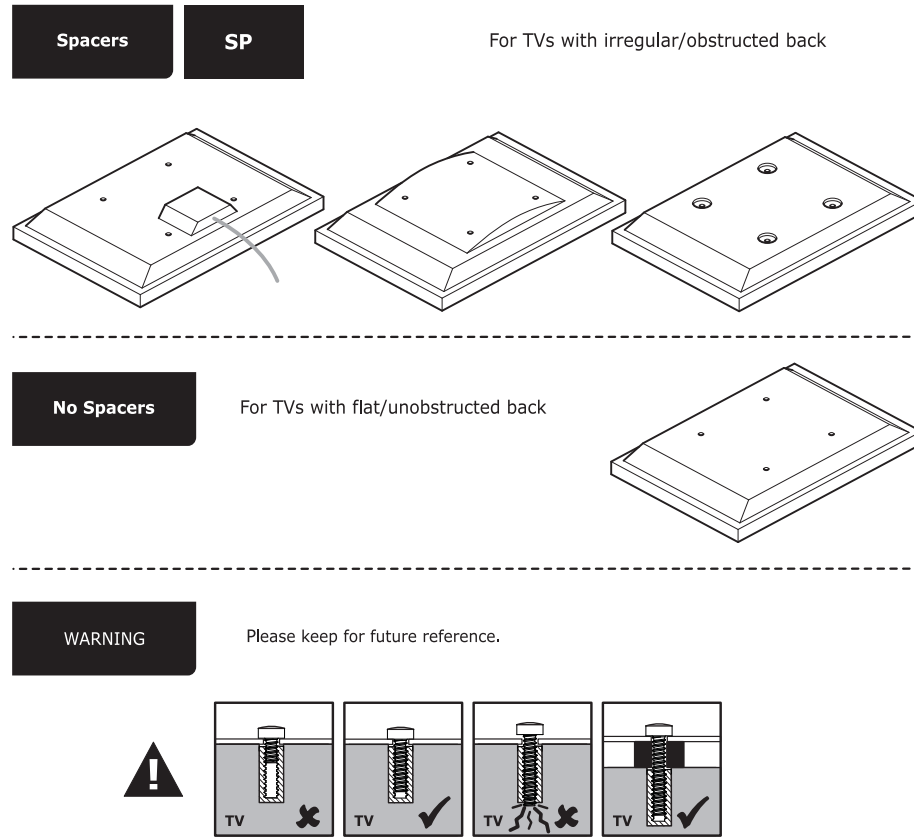

- Note: Always use the correctly sized screws. Screws that are too long can damage your TV, while screws that are too short will not secure it properly.


Step 8: Install the TV Mounting Plate

- Locate the Hook Plates ⑪, TV mounting screws, washers, and plastic spacers.
- Select the correct combination of screw length, washer, and spacer for your TV's back profile.
- Attach the Hook Plates ⑪ to your TV's VESA mounting holes using the selected hardware. Tighten the screws securely with a screwdriver (not included).

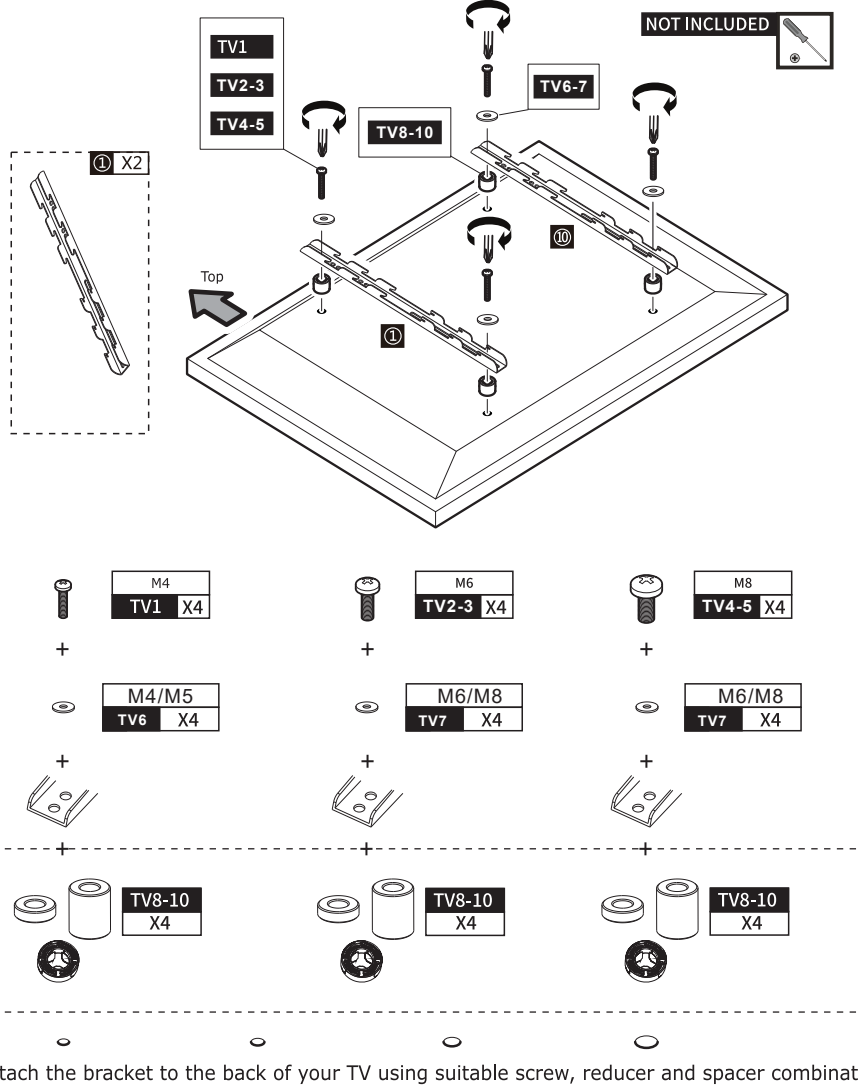


Step 9: Mount the TV on the Stand

- Carefully hang the TV with the attached Hook Plates ⑪ onto the VESA Mount Plate ⑧ on the stand.
- Locate the Cord Organizer ⑫, Screws A, and Wrench G.
- Attach the Cord Organizer ⑫ to the Bar Connectors ⑤ and tighten with Screw A.

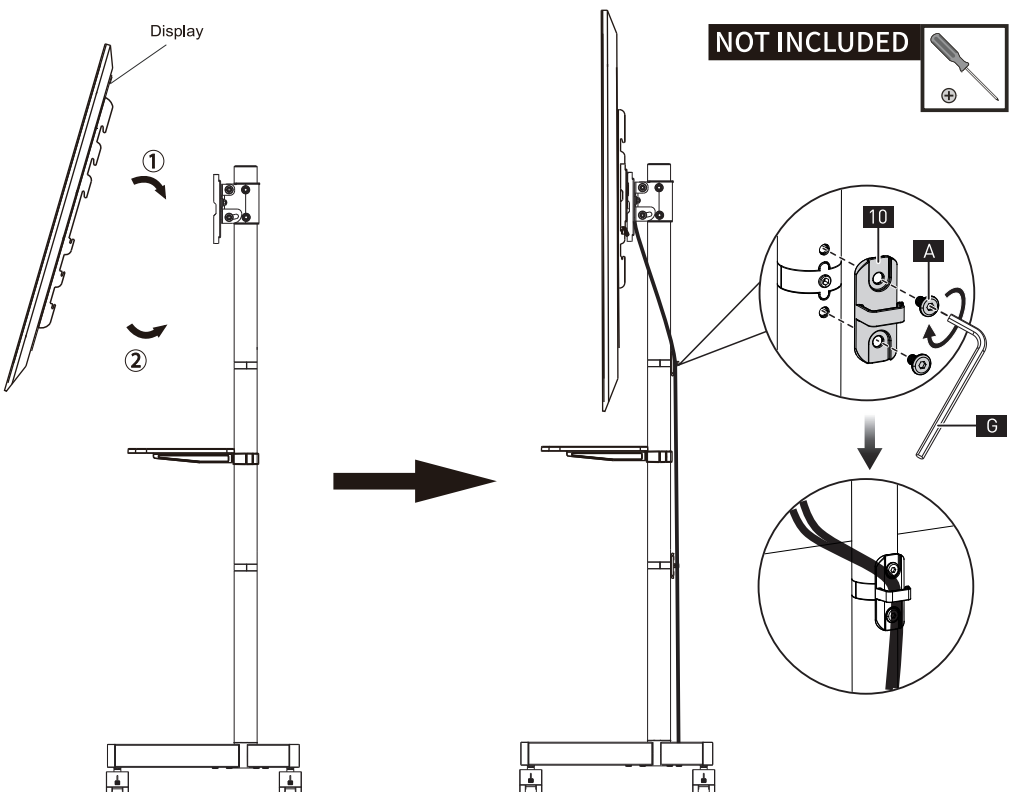

- Locate the Safety Set Screws ⑬. Insert and tighten them into the bottom of the VESA Mount Plate ⑧ to prevent the TV from lifting off. Use a screwdriver (not included).

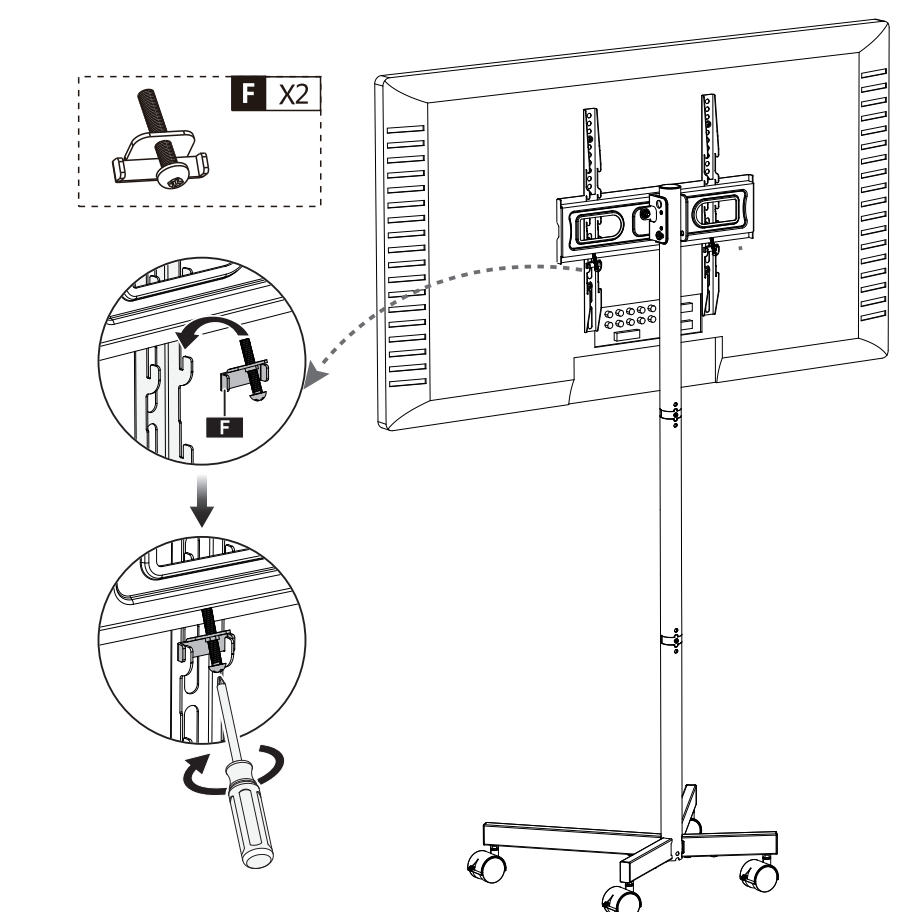

Step 10: Final Check & Cable Management

- Ensure all screws and bolts are fully tightened.
- Carefully return the stand to the upright position.
- Route power cords, HDMI cables, and other wires through the designated cable management holes or clips (e.g., Cord Organizer ⑫) to keep them organized and prevent tangling with the wheels.

How to Use Your Rolling TV Stand

- Moving the Stand: Apply light pressure to the frame (NOT the shelves) to move the stand. Ensure the path is clear.
- Locking the Stand: After positioning, engage the locking mechanism on at least two castors (preferably on the front or back) by pushing the brake lever down. This prevents rolling.
- Placing Your TV: With assistance, carefully lift and hang the TV (with Hook Plates attached) onto the VESA Mount Plate.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567