

148 mm

anko

Desk Side Tidy Organisier

Operating Instructions

Please read this manual carefully before using this product and retain it for future reference.

- Includes:
- › 1 × Desk side tidy organiser
 - › 1 × Pen holder
 - › 1 × Instruction manual



K: 43721160 | T: 72466650
Model: JLR-82015

Product Specifications:


- Dimensions: 20 cm (H) × 30 cm (W) × 9 cm (D) (without pen holder)
- Maximum Load Capacity:
- Desk side tidy organiser: 5 kg
 - Pen holder: 300 g

Important Safety Information


- › Ensure the organiser is securely fastened before placing items inside.
- › Do not exceed the stated maximum load capacity.
- › Keep out of reach of children.
- › This product is intended for indoor use only.
- › Regularly check the thumb screw to ensure it remains secure.

Installation Instruction:

1. Position the Desk Side Tidy Organisier securely against the edge of your desk in the desired location. Tighten the thumb screw until the organiser is firmly secured. Do not overtighten.

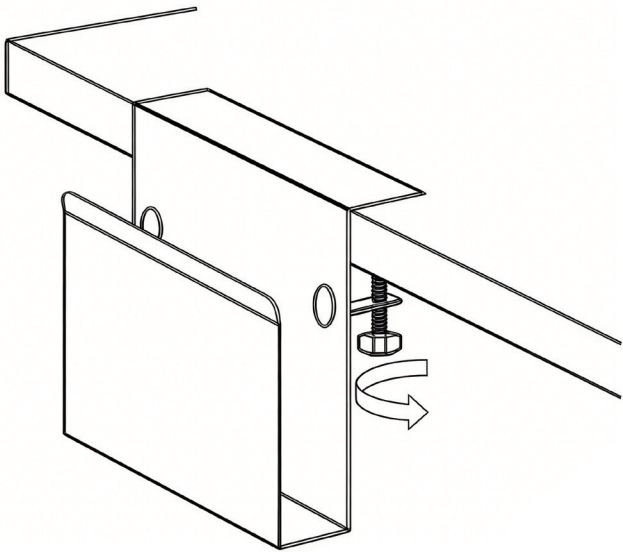

2. Attach the Pen Holder to the front of the Desk Side Tidy Organisier as illustrated.

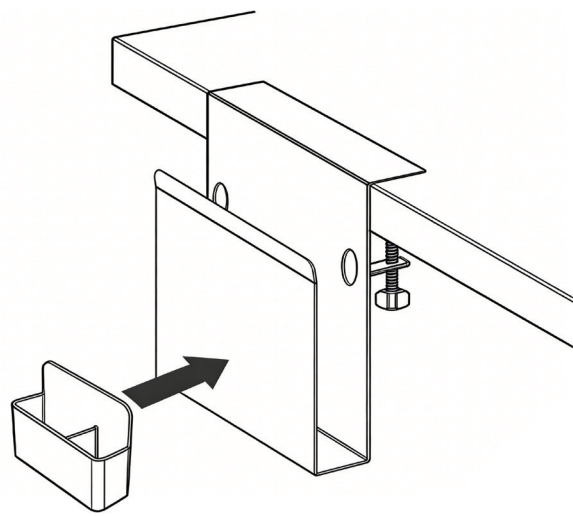

3. Installation is now complete.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567