 


材质：80g双铜 双面印刷风琴折

尺寸：60x85mm

anko Instruction Manual

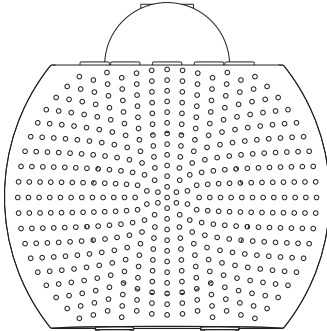

Karaoke Speaker with Light

K: 43-721-221 | T: 72-466-711

K: 43-721-238 | T: 72-466-575

Made In China

Please read this instruction manual carefully before using the product and retain for future reference.

1. Battery Safety Warnings:

Do not expose the battery to extremely high or low temperatures during use, storage, or transportation, nor to low air pressure at high altitudes.

Do not attempt to disassemble, modify, or replace the built-in lithium battery.

Never dispose of the battery in fire or a hot oven, or mechanically crush or cut the battery, as this may cause an explosion.

Do not leave the battery in extremely high-temperature environments, which may cause explosion or leakage of flammable liquid or gas. A battery exposed to extremely low air pressure may cause explosion or leakage of flammable liquid or gas.

 
 
2. Product specifications

Dual Stereo BT Speaker with RGB rainbow light
Bluetooth® connection
Rated input : 5V 1A
Speaker battery capacity: 1200mAh
Microphones battery capacity x 2: 500mAh x 2
Charging time: About 3-4 Hours
Working time: About 2-4 hours
Charging port: USB-C
Main functions: playback, TF card, AUX

3. Packing list


Karaoke speaker with light *1
USB-A to USB-C charging cable *1
User manual *1
Wireless microphones *2

4. Product overview

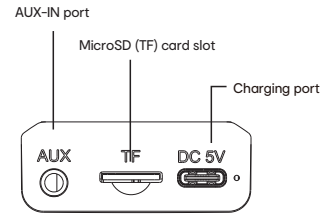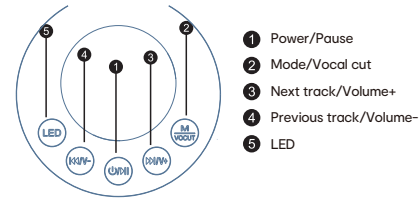

5. Operating instructions

 1. Power on key: long press to turn on / off short press switch: microphone adjustment / reverb adjustment style adjustment / double click control audio playback pause.
2. +-key: short press to switch microphone volume up Reverb volume increase. accompaniment volume increase; Long press Control the next music.
3. -key: short press to switch microphone volume down Reverb volume decrease / accompaniment volume decrease; Long press Control the previous music.
4. -key: short press to switch original sound/male voice/baby voice/haunting voice/warrior voice.
5. Bluetooth / charging indicator: blue light / red light.
6. USB-C: DC5V / charging.

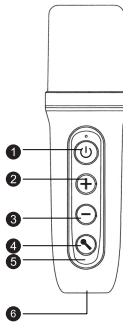

6. How to charge

1. When the battery is low. The device will shut down automatically.
2. Connect a DC 5V charger to the charging connector to charge the speaker or microphones. The charging indicator will turn red when charging and turn off when fully charged.

7. Button function details

Power/Pause: Press and hold to turn on/off the power.

Press to pause or play the music.

Previous track/Volume- & Next track/Volume+: Short press to adjust the volume. long press to switch between up and down tracks.

Mode/Vocal cut: Press to switch between Bluetooth mode, Micro SD (TF) card mode and AUX mode. Press and hold to reduce vocals from the song leaving only the background music.

Change tone: Press to switch between original sound/male voice/baby voice/haunting voice/warrior voice.

8. How to use

Sing by Bluetooth

1. Turn on the speaker: Press and hold the power button to turn on the speaker. The power indicator will start flashing.
2. Bluetooth connection: Turn on the Bluetooth on your smart phone. In the Bluetooth setting, find the device name Anko 43721221 / Anko 43721238 and pair. The speaker will make a tone if the pairing is completed.
3. Turn on the microphone: Press and hold the power button on the microphone. The microphone will be connected to the speaker automatically and the corresponding indicator on the speaker will be on.
4. Adjust sound effect: Adjust the volume of the speaker and microphones and choose appropriate sound effects.
5. Play music: Open a music app on your smart phone and play any music you like. The volume of the music can also be adjusted on your phone. Pressing the Vocal Cut button can reduce vocals from the song.

Note: Once you pair the speaker with your smart phone via Bluetooth, they will pair automatically when the next time you use. The Bluetooth can be disconnected in the Bluetooth setting on your phone.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.