


说明书材质：128g铜版纸  
 折叠尺寸55x78mm



**anko**  
Instruction Manual

**Harmonica**  
K: 43-721-245 | T: 72-466-643  
MADE IN CHINA

Before use please read this manual carefully.  
Please retain for future use.

**1. Intended use**

This is a magic musical instrument made in order to keep people bright and childlike. The rich bass and graceful notes are in harmony, not only for classical and melodic melodies, but also for the instruments of sentiment, education and music for the ensemble.

**2. Safety instructions**

- 1) Recommended age: 3 years and above
- 2) This device is not waterproof and is only suitable for indoor use.
- 3) Do not open the product case.
- 4) Prevent small screws and parts from falling into children's nasal and throat areas.
- 5) Do not immerse the unit in water or other liquids.

**3. Package contents**

Harmonica x1  
Storage box x1  
Instruction manual x1

**4. Product specifications**

Plastic Material: PP  
Brass reed plate  
Colour: transparent  
Product Size: 28x103x20mm  
Net Weight: 39g  
Key of C  
10-hole 20-tone diatonic


Please take note of the following hints and playing tips so that you can get the best out of your instrument for as long as possible!

**5. How to hold your harmonica**

A. Place the bass note (number 1) of the harmonica on the left.

B. Hold the harmonica between your left thumb and index finger. Your remaining fingers should be slightly curved to create a small resonating space.

C. Place the palm of your right hand over the harmonica and cup it tightly to create a large resonating space. Do not cover the side with the mouthpiece.



**6. How to play your harmonica**

The most common ways to play the 10-hole 20-tone harmonica include single notes, diphonic, wah-wah, tremolo, bending and so forth. Mastering the single note technique, however, is critical to your ability to play beautiful, crystal-clear music. Though there are many different ways to play your harmonica, hole notation is the most common choice.


We suggest using the most common notation method - the staff.

> To play a single-note, you will need to be low air through only one hole.

> Open your mouth in an O-shape, making sure that your lips tightly cover the hole and the plate.

> Place your tongue over your bottom teeth so that it touches your lower gums.

> Adjust the separation of your lips and positioning of the harmonica until you are able to play an isolated note. Like singing, harmonica playing is largely dependent on the use of your diaphragm. This technique is often referred to as "belly breathing". Push the air out of your core and slide the harmonica from side to side to begin playing.

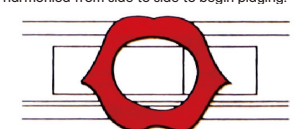

**7. Tone series of the 10-hole 20-tone harmonica**

Low ← → High

Blow bends: C E G C E G C E G C

Blow notes: C E G C E G C E G C

Draw notes: D G B D F A B D F A

Draw bends: D<sup>b</sup>/C<sup>b</sup> G<sup>b</sup>/F<sup>b</sup> B<sup>b</sup>/A<sup>b</sup> D<sup>b</sup>/C<sup>b</sup> A<sup>b</sup>/G<sup>b</sup>


**Note: How to Read and Use**

- > Blowing = exhaling into the harmonica; drawing = inhaling through the harmonica.
- > Each hole on a harmonica produces two notes: one when you blow, the other when you draw.
- > Pitch direction: "low → high". The leftmost holes are the low pitch range, and the rightmost holes are the high pitch range. Pitch increases from left to right.
- > The numbers in the notation correspond to holes for blowing and drawing notes.

For example:

- > "1" = blowing into the first hole, which corresponds to the note C (do);
- > "1<sup>b</sup>" = drawing through the first hole, which corresponds to the note D (re).

*Oh! Susanna*



**12 Month Warranty:**

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**MADE IN CHINA**

**CUSTOMER SERVICE:**  
 KMART AU: 1800 124 125  
 KMART NZ: 0800 945 995  
 TARGET AU: 1300 753 567