

材质：80g双铜 双面印刷风琴折
尺寸：60x85mm

anko

Instruction Manual



Party Speaker
K: 43-721-269 | T: 72-466-582
Made In China

Please read this instruction manual carefully before using the product and retain the instruction for future reference.

1. Battery Safety Warnings:

- Do not expose the battery to extremely high or low temperatures during use, storage, or transportation, nor to low air pressure at high altitudes.
- Do not attempt to disassemble, modify, or replace the built-in lithium battery. Never dispose of the battery in fire or a hot oven, or mechanically crush or cut the battery, as this may cause an explosion.
- Do not leave the battery in extremely high-temperature environments, which may cause explosion or leakage of flammable liquid or gas.
- A battery exposed to extremely low air pressure may cause explosion or leakage of flammable liquid or gas.

2. Product overview



3. Button function

On/Off: Power On/Off

►/◄ Short press for play and pause. Under FM mode, short button, the machine will search the radio station automatically, after searching finished, press the volume button "+" and "-" to choose the station. Please insert the charging cable to the USB charging port as antenna to receive better signal before using FM function.

Mode:

Under device working, short press this button to change the mode. Such as Bluetooth, FM, TF card, AUX and USB mode. Long press to close/open the LED light.

"+": Short press for next song, long press to turn up the volume.
"-": Short press for last song, long press to turn down the volume.

4. Operating instruction

1. Bluetooth® pairing

When the speaker Power on, it is default as Bluetooth® mode, under Bluetooth® mode, make sure your mobile phone or other devices's Bluetooth® is open. Then search the Bluetooth® name: "Anko43721269", and link it. After successfully linking, you can play the music and enjoy it.

2. TF card

Insert a TF card, then will change to TF card mode and play music.

3. USB

Insert a USB driver, then will change to USB mode and play music.

4. DC 5V

Charging port, use the charging cable to charge the device. During charging, you can see red indication light near the charging port, after charging finished, the red light will close directly.

5. AUX

Insert line in cable with the speaker and your mobile phone to play music.

6. MIC

Insert the wired microphone and power on the speaker, then you can sing song directly.

5. TWS function

TWS function correct operation:

Power on one speaker first, and connect with your mobile phone's Bluetooth, after connecting, power on the second one speaker, long press the second one's "play and pause" button until you hear one "RING" sound, then the two speakers will search the signal and contact with each other, when you hear one "RING" sound again, it means TWS is connected successfully.

6. Product specification

Dual Stereo BT Speaker with RGB rainbow light
Bluetooth® connection
Rated input: 5V 1A
Battery capacity: 3.7V, 1200mAh
Charging time: About 4 hours
Working time: About 8 hours (at 70% volume)
Charging port: USB-C
Main functions: Bluetooth® playback, FM radio, TF card, USB, AUX

7. Packing List

Party speaker *1
USB-C charging cable *1
User manual *1

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.