

材质: 80g双铜 双面印刷风琴折
尺寸: 60x85mm

anko Instruction Manual



Automatic Mouse Mover K: 43-721-283 | T: 72-466-742

Made In China

Please read this instruction manual carefully before using the product and retain the instruction for future reference.

 
1. Specifications

Material: ABS
Weight: 119g
Product size: 131*78*29mm
Power supply: USB-C
Working voltage: 5V
Timer: 0.5 Hour/1 Hour/2 Hours/4 Hours
Colour: black

2. Packing list


Mouse mover *1
Storage bag *1
USB-C cable *1
User manual *1

3. Product overview

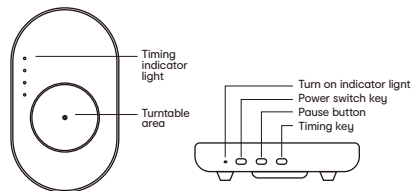


4. How to use

 1. Connect the product to the computer or the USB port of the 5V charging head for power supply.
2. Place the optical sensor of the mouse on the area of the turntable: The farther away the optical sensor of the mouse is from the disk dot, the greater the range of movement of the mouse pointer.
3. Make sure the interface connection is stable, press the power switch of the product, turn on the indicator light, the mouse pointer will move automatically, press the power switch again, turn off the indicator light, turn off the product.
4. Pause button: can pause the rotating wheel.



 5. Timing key: 4 gears are optional: 0.5 Hour/1 Hour/2 Hours/4 Hours (See front view) by pressing the timing key to select the pressing the timing key to select the timing time, the timing indicator light will be lit in sequence, can be switched cycle.



12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE:

KMAT AU: 1800 124 125

KMAT NZ: 0800 945 995

TARGET AU: 1300 753 567

