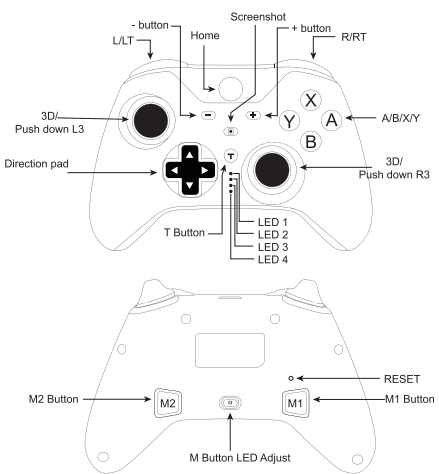
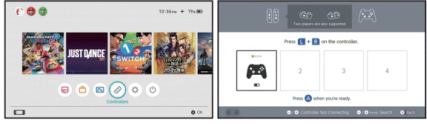


折叠尺寸70x100mm
128g双铜纸，双面印刷风琴折
正面排5页反面排4页，空白页放最后

anko Instruction Manual  Wireless Gaming Controller K: 43-721-306 T: 72-471-821 MADE IN CHINA Before use please read this manual carefully. Please retain for future use.	Product features: 1.This controller is suitable for operating games of N-Switch/Switch 2/Lite/OLED, PC, Android devices; 2.This controller supports wireless Bluetooth connection to N-Switch/Switch 2/Lite/OLED console, and also supports wired connection to N-Switch dock to operate N-Switch games; 3.The function button layout of this controller corresponds to the button function of N-Switch Pro controller, which supports TURBO combo function, six-axis gyroscope function, vibration function and colorful RGB lighting. Functional buttons icon: 	Product instructions:  N-Switch/Switch 2/Lite/OLED wireless connection mode 1.Press and hold the controller "Y+Home" button for 3 seconds, and after releasing the hand, lights 1, 2, 3 and 4 will light up and blink in green to enter the pairing state. After the controller is successfully paired with the Switch console, the green light of light 1 will always light up; 2.After the successful connection, press the "Home" button for 1 second, and the lights 1, 2, 3 and 4 will light up and blink cyclically in green to automatically connect back; 3.The console can wake up the Switch Console. N-Switch/Switch 2/Lite/OLED wired connection mode 1. Before using wired connection, please confirm that wired connection of "Pro controller" is turned on in the system settings of N-Switch console. 2.The controller is connected with the Switch dock through a USB data cable, which can be used as a wired controller, and the green light of 1 LED flashes slowly. PC wired mode Please use USB cable to connect the controller with the computer, and connect it directly. The connection is successful, and LED 1 and LED 3 are flashing green, so the console can be used normally. Note: Connected to D-input mode by default, long press Home button to switch to X-input mode (It's suggested to use X-input mode because this mode is compatible with most game modes.) The LED 2 is on when switched successfully. Long press Home button again to switch to switch mode (The LED 1 is on). Long press Home button again to switch to D-input mode (The LED 1 and 3 is on). Please switch to X-input mode before entering into steam game. Note: Not all PC-side games are equipped with controllers. Please confirm that the game supports controllers before use.	Android mode (Bluetooth® connection) 1. Press the "B+Home button" for 3 seconds at the same time, and the light 1 will flash quickly to enter the pairing state. After the controller is successfully paired with the Android device, the light 1 will always turn green (to prevent accidental touch, it is recommended to hold down the "B" button firstly, and then press the "Home" button, and make sure that the two buttons are pressed at the same time for more than 3 seconds); 2. Turn on Bluetooth on Android, enter search mode, search for "Gamepad", select the device and click "Pairing"; 3. If there is no Bluetooth function on Android, consult customer service to choose to buy a receiver; 4. Connect the Android device back, press the "Home" button for 1 second, and the green light will flash slowly. If the connection is successful, the green light will always be on. Android wired mode Please use USB cable to connect the controller with the Android device, and connect it directly. The connection is successful. The lighting is the default lighting (magic color), and the controller can be used normally. Note: Connected to D-input mode by default, long press Home button to switch to X-input mode (It's suggested to use X-input mode because this mode is compatible with most game modes.) The LED 2 is on when switched successfully. Long press Home button again to switch to switch mode (The LED 1 is on). Long press Home button again to switch to D-input mode (The LED 1 and 3 is on). Please switch to X-input mode before entering into steam game. Note: Not all Android games are equipped with controllers. Please confirm that the game supports controllers before use.	B. Turn on automatic repeating: firstly press and hold the "T" button, and then press and hold the button that has turned on manual repeating to turn on automatic bursting; (Automatic burst has pause function). C. Turn off the bursting: press and hold the "T" button firstly, and then press and hold the button that has started the automatic bursting again to turn off the bursting function of the current button; D. Turn off all the buttons' bursting: press and hold the "+" button and the "T" button to press the button to turn off the burst function of all buttons. 4. Adjustment mode of burst speed: A. How to increase the burst speed: press and hold the "T" button and the "+↑" button, and the controller vibrates once, indicating that the first burst speed is successfully raised; B. How to reduce the burst speed: hold down the "T" button and the "+↓" button, and the controller vibrates once, indicating that the burst speed of the first gear is successfully lowered. Vibration gear 1. There are four gears: strong, medium and weak ,zero,(amplitude 100%, 55%, 25% and 0%). 2. Adjustment method: press and hold the four L/LT/R/RT buttons on the top at the same time (just press and hold the four keys on the top for 1 second at the same time), and cycle for 4 gears; 3. Which gear is the default for the first connection? -Connect the default mid-range 55% for the first time. Note: The vibration intensity is set to remember the last setting, that is, turn it off and then on, and you can remember the intensity set by the customer last time. Back button programming function Mode 1 (single button): 1. Press 【M1】 or 【M2】 + 【-】 at the same time for about 1 second. When the controller vibrates, the RGB lights of the left stick, the right stick and the direction pad turn white and flash slowly, indicating that the programming mode is entered. Then press the function key to be programmed (A/B/X/Y/L/R/LT/RT/L3/R3/ Up/Down/Left/Right), and the RGB lights of the left stick, right stick and direction pad will flash slowly, indicating that the function button has been programmed successfully. Then press M1or M2, the controller vibrates, and the RGB lights of the left stick, the right stick and the direction pad become the front lights, indicating that the programming is completed.
--	--	--	--	---

2.For example, if you want to program the button value "A" to M2, press [M2] + [-] at the same time for about 1 second, the controller vibrates once, and the RGB lights of the left stick, the right stick and the direction pad change to white lights and flash slowly. At this time, you enter the programming mode, press the "A" button, and the RGB lights of the left stick, the right stick and the direction pad flash from slowly to quickly, then press M2 to confirm, and the controller vibrates again. At this time, and the button value of M2 is "A" button. Mode 2 (multi-button): 1.Press 【M1】 or 【M2】 + 【+】 at the same time for about 1 second, the controller vibrates, and the RGB lights of the left stick, the right stick and the direction pad turn white and flash slowly, indicating that the programming mode is entered. Then press the function button to be programmed (A/B/X/Y/L/R/LT/RT/L3/R3/ Up/Down/Left/Right/Left 3D stick 8 button/Right 3D stick 8 button), and the RGB lights of the left stick, right stick and direction pad will slowly flash, indicating that the function button has been programmed successfully (There are at most 16 buttons. If there are more than 16 buttons, the program will automatically exit, and the 16 function keys pressed will be successfully recorded. When the motor vibrates, the light will enter the state.). Then press M1 or M2, the controller vibrates, and the RGB lights of the left stick, the right stick and direction pad become the front lights, indicating that the programming is completed. 2. For example, to program the button values of three function buttons "A", "L3" and "right 3D" upper left to M2, and press 【M2】 + 【+】 at the same time for about 1 second, the controller vibrates once, and the RGB lights of the left stick, right stick and direction pad turn white and flash slowly. At this time, enter the programming mode, and press "A", "L3" and "right 3D" to adjust to the upper left, and the RGB lights of the left stick, right stick and direction pad flash from slowly to quickly, and then press M2 to confirm, and the controller vibrates again. At this time, the button values of M2 play "A", "L3" and "right 3D" upper left sequentially. Restore the default state: 1.Press the 【M1】 or 【M2】 + 【+】 button or 【-】 button at the same time for about 1 second, and the controller vibrates to enter programming. Then press the 【M1】 or 【M2】 button again to exit programming, and the 【M1】 or 【M2】 button will be restored to its original state. (The 【M1】 or 【M2】 button is initially empty).	LED button function The default left 3D/ right 3D/ direction pad magic mode 【RGB】 is turned on, and A/B/X/Y is always on. Mode 1: 1. Press the LED button "M" firstly, and then press the 【+】 button, and the RGB light of the left 3D/ right 3D/ direction pad will become the next light, in the order of 10 kinds of lights: magic color, red, orange, yellow, green, cyan, blue, purple, white and no light. Mode 2: 1. Press the LED button "M" firstly, and then press the 【+】 button once to enter the breathing mode, and the left 3D/ right 3D/ direction pad will automatically change the light in the order of red, orange, yellow, green, cyan, blue and purple; Press the LED button "M" firstly, and then press the 【+】 button once again to enter the laser mode. The left 3D/ right 3D/ direction pad only lights up one RGB light at a time. For example, in the left 3D circle light, one RGB light is red firstly, then the direction pad lights up one RGB light yellow, and then the other RGB light turns purple in the right 3D. (when the next RGB light is lit, the last RGB light goes out, and the color of each light is lit in different color at the same time). Press the LED button "M" firstly, then press the 【+】 button once again, and the RGB light of the left 3D/ right 3D/ direction pad will go out. 2. In Mode 2, the three lighting modes are switched to one mode at a time by pressing the LED button "M" + 【+】 button. 3.Press and hold the LED button "M" and upward the left stick, increase the brightness of double aperture (25%-50%-75%-100%); And press the LED button "M" and downward the left stick, reduce the brightness; And the brightness can be remembered when turned off; The lighting control can be memorized; And it can be turned on after being turned off, the lighting state is the color or mode adjusted when it was turned off last time. 4. Hold down the "screen capture" button and "L3", after 1 second the controller vibrates, and switch the functions of the left stick and the direction pad. (Android wireless connection does not support left stick and D-pad function switching). Hold down the "screen capture" button and R3, and after 1 second the controller vibrates, to switch the functions of "A" and "B", "X" and "Y" buttons. Repeat the above actions to switch back(This fuction only supports X-input mode).	Manual gyroscope calibration method: Press and hold the "+ " + "HOME" buttons at the same time to enter the correction mode, the 1/2 and 3/4 channel lights of the channel light flash alternately, place the handle horizontally and press the "+" button at the same time, the channel light is off, and the calibration can be completed. Manual gyroscope calibration method: When power off, press L3 and R3 simultaneously and hold the HOME key for 1 second. All 4 lights will remain on in green. Release the button, and the green lights will go out. The handle will return to its factory settings. Note: Press and hold the "Home" button for 5 seconds to force the shutdown. Product specifications: 1. Input voltage/current: DC 5V 500mA; 2. Continuous use time: ≥ 8hours; 3. Charging time: about 2-3 hours; 4. Transmission distance: ≤ 10m; 5. Battery capacity: 3.7V, 1000mAh. Precautions: 1. Please do not store the product in a humid or hot place; 2. Do not knock , beat, puncture or attempt to disassemble the product to avoid unnecessary damage to the product; 3. Non - professionals should not disassemble this product, otherwise it will not be included in the after- sales warranty service; 4. If the product is not used for a long time, or other illegal operation causes abnormal work , you can reset the product. The reset button is in the back hole of the product, and can be operated with thinner sharp objects .	12 Month Warranty: Thank you for your purchase. Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation. We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect. Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. MADE IN CHINA  CUSTOMER SERVICE: KMART AU: 1800 124 125 KMART NZ: 0800 945 995 TARGET AU: 1300 753 567 The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.	
--	--	---	---	--