


80 mm

anko

Alarm Clock Instruction Manual

K: 43722082 | T: 72471401 Model: JLR-82062

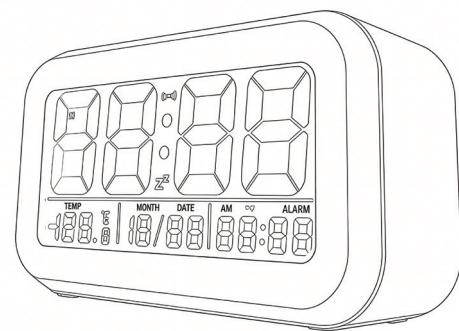

Please read this manual carefully before using the product and retain it for future reference.

Package Contents

- 1 x Alarm Clock
- 1 x Instruction Manual

Production structure:



1. Snooze/Light Button
2. Alarm ON/OFF Switch
3. Year/ "12/24" Hour Button
4. Min/Date/ "°C/°F" Button
5. Hour/Month Button
6. Alarm/Date/Time Setting Switch
7. Light Sensor ON/OFF Switch
8. Battery compartment Cover

Production Specification

Power Supply: DC 4.5V (requires 3 x 1.5V AAA batteries (not included))

Important Safety Information

- Batteries are to be inserted with correct polarity.
- Do not mix different types of batteries or new and used batteries.
- Non-rechargeable batteries are not to be recharged.
- Remove batteries from the product when not in use for extended time or when batteries become exhausted.
- Do not allow children or pets to swallow the battery to avoid injury or explosion of the battery. If swallowed, seek immediate medical attention.
- Do not dispose of batteries in fire.
- Dispose of used batteries responsibly in accordance with local regulations.

Operating instructions

1. Installing the Batteries

1. Open the battery compartment cover.
2. Insert 3 x AAA batteries, ensuring the polarity (+/-) is correct. (Batteries not included)
3. Close the battery compartment cover securely.

Setting the Time

1. Slide the Setting Switch to the "TIME SET" position.
2. Press the "HOUR" and "MIN" Button to adjust the hour and minutes.
3. Slide the Setting Switch back to the "LOCK" position to confirm.

Setting the Date

1. Slide the Setting Switch to the "DATE SET" position.
2. Press the "YEAR", "MONTH" and "DATE" button to adjust the year, month and date.
3. Slide the Setting Switch back to the "LOCK" position to confirm.

Setting the Alarm

1. Slide the Setting Switch to the "AL SET" position.
2. Press the "HOUR" and "MIN" Button to adjust the alarm hour and minutes.
3. Slide the switch back to "LOCK" to confirm.
4. Slide the Alarm ON/OFF switch to ON to activate the alarm.

Note: The alarm will sound for approximately one minute if not interrupted.

12/24 hour Format

Press the "12/24" button to toggle between 12-hour and 24-hour display modes.
In 12-hour mode, AM or PM will be displayed.

Temperature Unit Selection

Press the "C/F" button to switch between Celsius and Fahrenheit.

Snooze and light function

- Press the Snooze/Light button to activate the backlight. The light will turn off automatically after approximately 5 seconds.
- When the alarm sounds, press the Snooze/Light button to pause the alarm. The alarm will sound again after approximately 5 minutes.

Light sensor function

When the Light Sensor switch is set to ON, the LCD display brightness will automatically adjust according to the ambient light level.

To disable this feature, switch to OFF.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



MADE IN CHINA

CUSTOMER SERVICE:

- KMART AU: 1800 124 125
- KMART NZ: 0800 945 995
- TARGET AU: 1300 753 567

115 mm