

105.0 mm

anko

Kids Brick Alarm Clock Operating Instructions

Please read this manual carefully before using this product and retain it for future reference.

Includes:
› 1 × Kids Brick Alarm Clock
› 1 × Instruction Manual



K: 43722099 | T: 72471418
Model: JLR-82082

73.5 mm

Product Specifications:

Dimensions: 8 cm (L) × 8 cm (W) × 11 cm (H)
Power Supply: 2 × 1.5V AAA batteries (not included)
Compatible with most leading building block brands.

Note:

This product is compatible with major building block brands. Kids Brick Alarm Clock is not sponsored, authorized, or endorsed by the LEGO Group.


Important Safety Information

This product is not a toy. Not for use by children under 3 years old. Small parts may present a choking hazard. Children should be supervised by an adult during use.

1. Batteries are to be inserted with correct polarity.
2. Do not mix different types of batteries or new and used batteries.
3. Non-rechargeable batteries are not to be recharged.
4. Remove batteries from the product when not in use for extended time or when batteries become exhausted.
5. Keep batteries out of reach of children and pets. Swallowing may lead to serious injury or explosion.

6. Do not dispose of batteries in fire.
7. Dispose of used batteries responsibly in accordance with local regulations.

Product Diagram

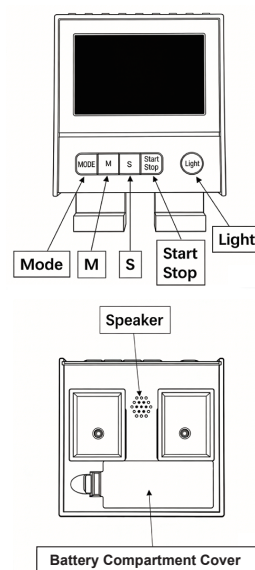

OPERATING/FUNCTION INSTRUCTIONS

Installing the Battery:

1. Open the battery compartment cover.
2. Insert 2 × 1.5V AAA batteries, ensuring correct polarity (+ / -). (Batteries not included).
3. Close the battery compartment securely.

Note: Battery installation and replacement must be performed by an adult.

Mode Setting:

Short Press the "Mode" button to cycle through the modes: Clock, Countdown Timer and Alarm mode. Default setting is clock Mode.

Clock Setting/Format Setting: Setting the Time

1. Long press the "Start/Stop" button for 3 seconds to enter the time setting. The Hour icon will flash.
2. Use the "M" or "S" buttons to adjust the hour.
3. Short press the "Start/Stop" button to switch to minute adjustment.
4. Use the "M" or "S" buttons to adjust the minutes.
5. After setting the minutes, short press the "Start/Stop" button again to save and exit.

Note:

1. If no operation is performed for 20 seconds, the device will exit setting mode and save automatically.
2. Press and hold the buttons to adjust the time rapidly.

Setting the Time Format:

Short press the "S" button to toggle between 12-hour and 24-hour display modes. In 12-hour mode, AM or PM will be displayed.

Countdown Timer Setting:

1. Short press the "Mode" button to switch to the Countdown Timer mode.
2. Use the "M" button to adjust the minutes and "S" button to adjust the seconds.

Countdown Timer Operation:

1. Short press the "Start/Stop" button to start the countdown timer.
2. When the countdown timer is running, press "M", "S", or "Start/Stop" to pause the timer.
3. When the countdown ends, the display will flash and an alert will sound. Press any buttons to stop the alert.
4. The countdown timer will sound for up to 1 minute.

Note:

1. The maximum settable countdown timer is 99 minutes and 59 seconds (99:59).
2. Press both the "M" and "S" buttons to clear the setting.
3. Press and hold the buttons to adjust the countdown timer rapidly.

Alarm Setting:

1. Short press the "Mode" button to switch to the Alarm mode.
2. Long press the "Start/Stop" button for 3 seconds to enter the alarm setting. The Hour icon will flash.
3. Use the "M" or "S" buttons to adjust the hour.
4. Short press the "Start/Stop" button to switch to minute adjustment.
5. Use the "M" or "S" buttons to adjust the minutes.
6. After setting the minutes, short press the "Start/Stop" button again to save and exit.

Note:

1. If no operation is performed for 20 seconds, the device will exit setting mode and save automatically.
2. Press and hold the buttons to adjust the time rapidly.

Alarm Operation:

1. In Alarm mode, short press the "Start/Stop" button turn the alarm on or off.
2. When the alarm is on, a "ring" icon will be displayed.
3. Press any buttons to stop the alarm.
4. The alarm will sound for up to 1 minute.

Temperature Unit Selection

Short press the "M" button to switch between Celsius and Fahrenheit.

Light On/Off:

Short press the "Light" button to turn the backlight on or off.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

