


说明书材质：128g铜版纸，双面印刷风琴折  
 折叠尺寸55x78mm



**Touchscreen Earbuds**  
 K: 43-722-686 | T: 72-474-082

MADE IN CHINA

Before use please read this manual carefully.  
 Please retain for future use.

**1. Safety Instruction**

- Do not place any heavy objects on the product.
- Keep your device and all accessories out of reach of children and animals. Small parts may cause choking or serious injury if swallowed.
- Do not disassemble or modify the products and accessories without authorization.
- Do not allow your device to get wet. Liquids can cause serious damage. Do not handle your device with wet hands.
- Do not use strong chemicals or strong washing products to clean this product and its accessories. Use a clean, dry, soft cloth to wipe this product or its accessories.
- Keep this product away from other Bluetooth devices, Wi-Fi devices, 2.4 GHz computer peripherals, cordless phones, microwave ovens, electric ice box and other electronic equipment to prevent signal interference or signal loss.
- Do not place the product near heat sources or exposed fire sources, such as electric heaters, microwave ovens, fires, water heaters, candles, or other places where high temperatures may occur.
- Adjust to a comfortable volume as high volumes may damage hearing.

**Battery Warnings**

- Do not expose the product to any high temperatures over 60°C (like hair dryer, heating, prolonged sunlight etc.) The battery inside of the product may overheat and explode as a result.


**2. Package Contents**

Touchscreen Earbuds x2  
 Charging Case x1  
 USB-C Charging Cable x1  
 Instruction Manual x1

**3. Product Specifications**

Bluetooth® Connection: Anko43722686  
 Bluetooth® Transmission Distance: About 10 m  
 Charging Case Input: 5V 300mA  
 Charging Case Battery Capacity: 3.7V, 400mAh  
 Earbuds Battery Capacity: 3.7V, 35mAh  
 Charging Case Size: 59.8x42.8x26mm  
 Bare Weight of Product: 49g  
 Screen Resolution: 240x296px  
 Charging Time: 1 hour (Earbuds)  
 2 hours (Charging Case)  
 Playing Time: 4-5 hours (80% Volume)


**4. Product Overview**

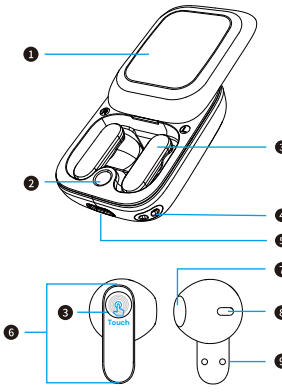

- 1 TP Screen
- 6 Mic Hole
- 2 On/Off Button
- 7 Speaker
- 3 Touch Area
- 8 Tuning Hole
- 4 Rope Hole
- 9 Charging Contact
- 5 USB-C Hole

**5. Method for downloading the APP**


iOS: Search for "Earjoy Intelligence" in the App Store  
 Android: Search for "Earjoy" in the Google Play Apps



Scan code to download



**6. Charging Instructions**

- When the charging case is low: low battery alert icon appears on screen.
- When charging the charging case: the charging animation will be displayed. After 30 seconds of inactivity, the screen will turn off.
- When the charging case is full: the battery on the screen displays 100, indicating full.
- Please align the equipped USB-C charging cable with the charging port of the charging case to charge.

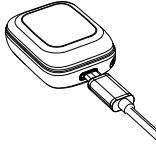


**7. Charging Box Operation Instructions**

- On the lock screen, double-tap the screen to wake up screen and swipe right to unlock.
- For all menu levels above the charging case section: Swipe from the left edge of the screen toward the right to return to the previous menu level.
- Key Operation Instruction
  - Press ② to turn on or off the screen: When the screen is Off, click to light the screen. In the On state, click first to back the home dashboard and click second to off the screen.
  - Long press ②:
    - To turn on the device when it is powered off.
    - To bring up the system menu and select to power off when it powered on.

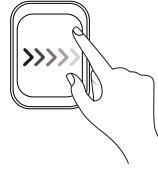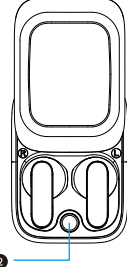**8. Headset Connection Instructions**



- When the Bluetooth icon shows as red, it indicates that the headphones have disconnected from the charging case.
- When the Bluetooth icon shows as white, it indicates that the headphones are not connected to the mobile phone.
- When the Bluetooth icon shows as green, it indicates that the headphones are connected to the mobile phone.
- When the icon shows as red, it indicates that the charging case is not connected to the APP.
- When the icon shows in white, it indicates that the charging case is connected to the APP.

Connection Method:

- Swipe up to open the charging case.
- Enter the phone Settings to enable Bluetooth.
- Search for Bluetooth name "Anko43722686" to select and pair.

**9. Headset Connection Instructions**

|                   |  |
|-------------------|--|
| Power on          | The headphones will automatically turn on when the charging case is opened.                      |
| Power Off         | Put the headphones into the charging case for charging. Close the cover and turn off the device. |
| Voice assistant   | Press and hold touch area ② for 3 seconds to start.  |
| Answer the phone  | When a call comes in, click the left and right earphones.  |
| Hang up the phone | During a call, click the left and right earphones.   |
| Reject a call     | When an incoming call comes in, double-click the left and right earphones.                       |
| Pause/play        | Click left earphone/right earphone.  |
| Previous song     | Play state, double click right ear.  |
| Next song         | Play state, double click left ear.   |
| Volume plus/minus | Triple tap right earphone/left earphone.   |
| Game mode         | Four clicks will enter game mode.  |

**Note:**  
 The above are the factory default settings. If you need to adjust them according to your personal preferences, please go to the shortcut on the "Earjoy Intelligence" or "Earjoy" app homepage to reset them.

**10. This section describes the ICONS on the main and auxiliary screens of the charging box.**

Music

Content Scroller

Translation

Equalizer

Find My Earbuds

Camera

Voice assistant

Game

System Settings

**Note:**  
 > Regarding the Content Scroller function of the iOS system, user need to open the iPhone's Settings - Accessibility - Touch - Assistive Touch Settings - Turn on and connect the app to archive the function of short video control on the charging case.  
 > Regarding the Content Scroller function support the native Android system; deeply optimized or modified Android systems do not support it.

**11. This topic describes the functions of the main screen.**

**Dial Setting**  
  
 Long press the desktop to enter the Dial setting. You can switch the dial images by moving left or right.

**Theme**  
  
 Enter the System Settings and select "Theme" to switch between various menu styles.

**Background Wallpaper**  
  
 Enter the System Settings and select "Background Wallpaper" to switch between various wallpaper.

**Find My Earbuds**  
  
 Enter the page for Find My Earbuds, and then click on L/R, the headphones will emit a beeping sound as a reminder.

**Charging Page**  
  
 Plug in the power supply. The charging animation will be displayed before the screen turns off.

**Content Scroller**  
  
 After connected the Bluetooth, you can swipe up or down to switch between videos and give likes to the videos on the charging case. This feature is only applicable for Tik Tok APP.

**Low battery alert**  
  
 Low battery alert.

**Time Settings**  
  
 Customized Date

**Date Setting**  
  
 Customized Time.

**Music**  
  
 After connected the APP and Bluetooth, you can play/pause, switch between songs on the charging case.

**Game**  
  
 The Bird Game.

**Camera**  
  
 You can control the camera to take pictures from the charging case after opening the camera interface on your phone.

**Brightness Adjustment**  
  
 Adjust brightness by sliding up and down.

**Sleep Timer**  
  
 Swipe right to enter the Sleep Timer interface to customize the time for sleep mode setting.

**Volume Adjustment**  
  
 Moving up or down can adjust the volume.

**Translation**  
  
 After connecting to the app, select the desired mode. It can recognize speech and translate normally, with the translation results synced to the earbud case interface.

**Voice assistant**  
  
 After connected the APP, click Tap to start, the phone's voice assistant will activate and respond to voice commands.

**12. Trouble Shooting:**

- Single earbud is out of power  
 Needs to be placed in the charging case to charge (the charging case has L/R earbud digital charging show).
- Only one earbud can be connected/One earbud has sound while the other doesn't.  
 First, find Bluetooth name "Anko43722686", on the Bluetooth function of your phone, tap to delete it. Place both earbuds back into the charging case, close the case lid, then open it again, take both earbuds out together. Wait 5 seconds, and then search for and connect to "Anko43722686" in the Bluetooth device list.
- Screen lag/no response  
 Close the charging case lid, then open it again, or press and hold the button ② to restart the device.

**12 Month Warranty:**

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you have any cybersecurity-related concerns or queries, please contact us online via our Contact Us page at <https://www.kmart.com.au/contact-us/> or reach us by phone using the numbers listed below.

MADE IN CHINA

**CUSTOMER SERVICE:**  
 K MART AU: 1800 124 125  
 K MART NZ: 0800 945 995  
 TARGET AU: 1300 753 567

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by K MART AUSTRALIA is under license.