

 
170.0 mm

anko

K: 43724208 | T: 72487914 (Model: JLR-82226)

Textured Ceramic Portable Diffuser

Instruction Manual

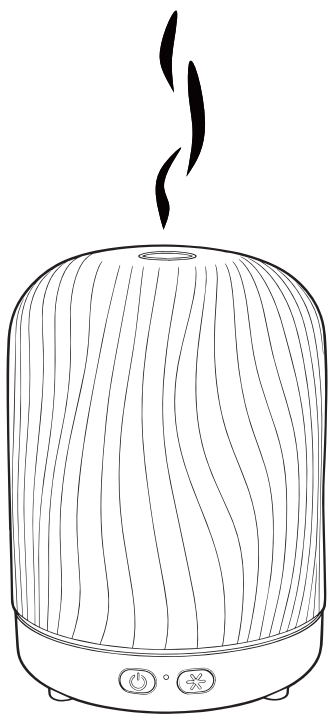

Create an aromatic, soothing atmosphere in your home. Use ultrasonic vibration to transform water into mist.

Important!

Care should be taken with the use of diffusers around animals.

For details regarding filling, please refer to section “OPERATION” of the user manual.

 
For details regarding cleaning and descaling, please refer to section “CLEANING AND MAINTAINENCE” of the user manual.

Unplug the appliance during filling and cleaning.

Warning

- Important safety instructions:
- The following safety precautions should always be followed to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.
- Unplug the appliance during filling, refilling and cleaning.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children being supervised not to play with the appliance.
- The appliance is only to be used with the recommended vaporizing medium. The use of other substance may give rise to toxins or create a fire risk.
- This product contains a **rechargeable lithium-ion battery (non-replaceable)**.
- Use supplied USB-A to DC cable only.
-   For the purposes of recharging the battery, only use the rating 5Vdc 1.2A SELV power supply unit.

Names of Parts

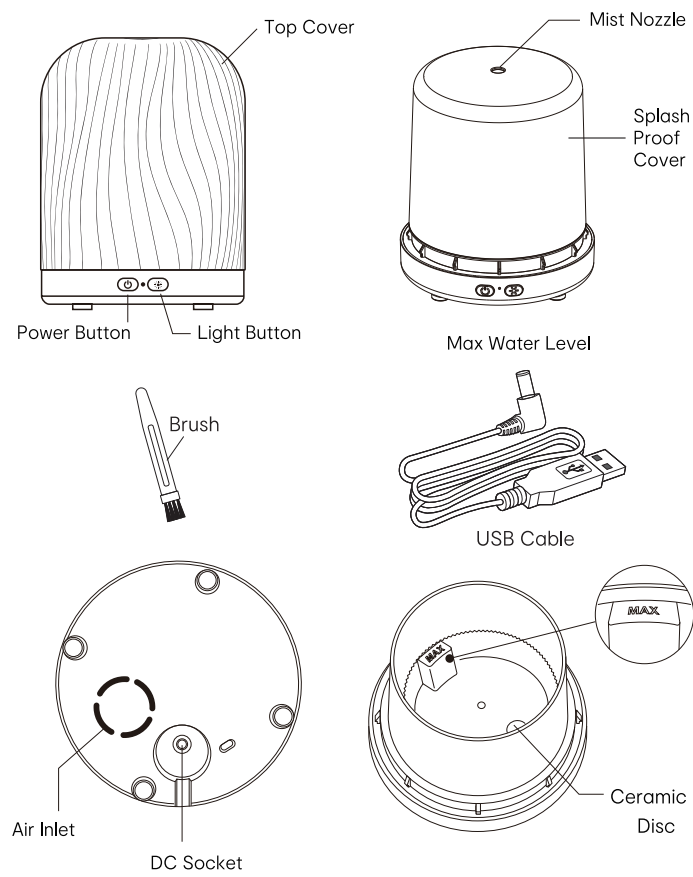

Includes

Main unit
USB-A to DC cable
BATTERY: 3.7V, 2200mAh RECHARGEABLE LITHIUM-ION BATTERY (NON-REPLACEABLE)

Functions:

Mist (Power) button

1st press: the continuous mist mode and light will turn on
2nd press: the light flashes twice and switch to intermittent mist (15s on and 15s off)
3rd press: turn off the mist and light

Light button

on Startup: The light turns on in Colour-Changing mode, automatically cycling through the colours.
1st Press: Stops the cycle and locks the current colour (enters colour Selection Mode).
2nd Press (in colour Selection Mode): Changes the colour to the next one in this sequence:
Warm White – Neutral White – Cool White – Red – Yellow – Green – Light Blue –Dark Blue – Purple.
When Purple is On, Press Once: Turns the light Off. When off, Press Once: Turns the light On and automatically starts colour –Changing Mode again.

Charging

- Insert the USB charging cable provided into the charging port of the unit and plug into a USB power source.
- Charging indicator status
 - Blinking light– battery level is less than 10%
 - White light– charging
 - Light turn off – fully charged
- Use provided USB-A to DC cable for charging only

Water tank

The machine has a water level detector which will automatically power off the unit when the water level is too low. Please ensure there is always adequate water to avoid damaging the diffuser.

Auto shut off function

When water is running out, the unit will flash cool white light 3 times and then turn off. The machine will automatically power off if abnormal overheating is detected.

 
Cleaning and maintenance

The machine should be cleaned after using for 3–5 days continuously, to keep it working normal and extend the lifetime.

- Unplug the machine before cleaning.
- Please clean water tank with a brush and white vinegar or dilute with detergent and warm water. Other parts of the cover can be cleaned with a soft cloth.
- Please do not put the whole machine or base into water. Temperature of water should not exceed 40 degrees when cleaning.
- When the machine is not used for a long period of time, please pour out the water in the tank and wipe off the drops, then place it in a shady and cool place to avoid direct sunlight.
- Please clean the tank regularly.


Operation

Open the top cover. Add water up to max water level into the water tank.

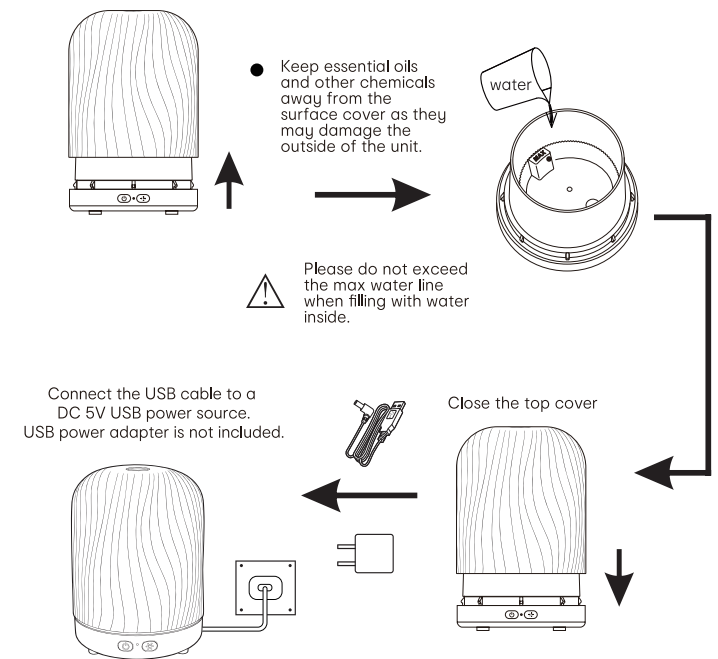

Caution:

 Please do not pour out water through the air outlet as this can damage the inside of the machine.

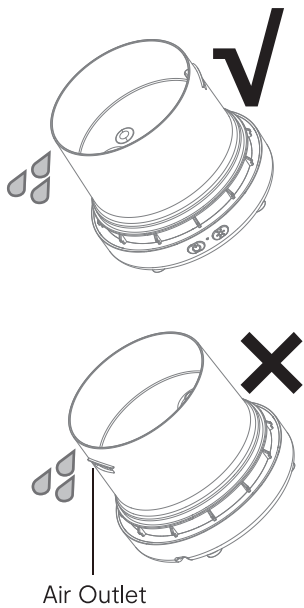

Attention

To prevent less or no steam from the diffuser, do not add water above the max level mark.

- Do not use as a medical respirator
- Do not use the product when there is an abnormal noise or the diffuser is overheating abnormally.
- Do not cover or block the mist outlet or air inlet
- Do not take off the cover during operation of the diffuser
- Do not place near an electric device such as computer, TV or audio equipment.
- Do not use hot water or mineral water. Always use tap water or distilled water.
- Keep out reach of children and pets.

Troubleshooting

If you start the diffuser but it doesn't work, please check the following diagnosis.

Problems	Possible Reasons	Solution
No electricity, not working .	battery is low	use the adaptor(not included) to charge
Unable to spray mist or spray is bad	Is the water leave low?	Please fill with more water.
	Is there too much water inside the tank?	If the water volume exceeds 200ml (max water line), the mist volume will be minimal.
	Is the ceramic disc dirty?	Please clean the water tank.
	Is the top cover correctly placed?	Please place top cover in the correct position.
	Is the bottom air inlet dirty?	Please clear away the dust in the bottom air inlet.
Main body is leaking water.	Is the top cover correctly covered?	If the top cover is not correctly covered, the water will splash out and fall onto the machine body or table.
	Condensation moisture on the body may be caused by low-temperature or a humid environment.	Please avoid low-temperature and humid environments.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase,

provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567