

anko

Humidifier
Model: 250084
User Manual



Model No: 250084
Rev 01

PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS:

BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED WHEN USING ELECTRICAL PRODUCTS.

READ AND SAVE THESE INSTRUCTIONS

- Always place humidifier on a firm, flat surface. A waterproof mat or pad is recommended for use under the humidifier. Never place it on a rug or carpet, or on a finished floor that may be damaged by exposure to water or moisture.
- Always unplug the unit from the electrical outlet immediately after using and before cleaning
- DO NOT place or store the unit where it can fall or be pulled into a tub or sink.
- DO NOT place or drop into water or other liquids.
- DO NOT use water above 30°C.
- Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by Kmart; specifically any attachments not provided with this unit.
- NEVER drop or insert any object into any opening.
- Always hold the water tank firmly with both hands when carrying a full tank of water.
- DO NOT place the humidifier near heat sources, such as a stove, and do not expose the humidifier to direct sunlight.
- DO NOT carry this unit by the power cord or use the power cord as a handle.
- This unit is designed for personal, non-professional use only.
- DO NOT use outdoors. For indoor use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This is not a toy. This is an electrical appliance and must be operated and maintained by an adult. In addition to the water to be vaporised, only any additional liquids advised by the manufacturer for cleaning or fragrance shall be used.

- Never cover the unit while it is operating.
- Always keep the cord away from high temperature and fire.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not attempt to adjust or repair the unit. Servicing must be performed by professional or qualified personnel.
- Stop using this unit if there is an unusual noise or smell.
- Unplug this unit when not in use for a long period of time.
- Do not touch the water or any parts of the unit that are covered by water while the unit is on or plugged in.
- For the information of filling, please refer the section "Instructions".
- For the information of cleaning and descaling, please refer the section "Cleaning and Maintenance"

CAUTION: The product is only to be used with the power adaptor provided with appliance

About White Dust:

Use of high mineral content hard water may cause a white mineral residue to accumulate on surfaces in the room near the humidifier. The mineral residue is commonly called "white dust." The higher the mineral content (or, the harder your water is), the greater the potential for white dust. The white dust is not caused by a defect in the humidifier. It is caused only by minerals suspended in the water.

Unique Features and Specifications

Ultrasonic Technology

This humidifier uses ultrasonic high-frequency technology to convert the water into particles that are dispersed into the air evenly.

Night Light Function

The night light function illuminates the water tank with soft LED lighting.

Auto Shut-Off Protection

When the tank is empty the unit will shut off automatically.

Run Time: Up to 15 hours

Run time is calculated based on using cool water and setting the mist level to the low setting. Based on the natural humidity level in your home, the temperature of water you use, and the mist level setting you choose, you may experience longer or shorter run times.

Cool Mist Ultrasonic Humidifier

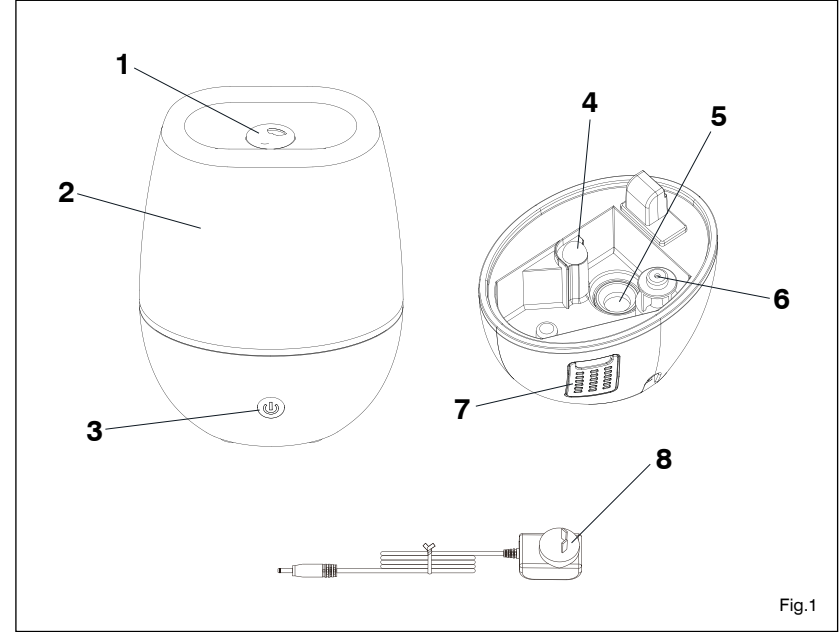


Fig.1

- | | |
|--------------------------|---------------------------------|
| 1. Directional Mist Vent | 5. Ultrasonic Transducer Disc |
| 2. Water Tank | 6. Water Level Sensor |
| 3. Power Button | 7. Oil tray |
| 4. Night Light | 8. Power adaptor-IVP2400-0500WS |

Filling the Water Tank

CAUTION: Before filling unit with water, turn the power off and unplug the unit from the mains power.

NOTE: Always use two hands to carry the water tank.

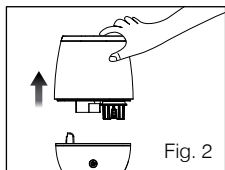


Fig. 2

1. Grasp tank and lift up from humidifier base. (Fig. 2)

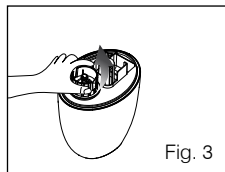


Fig. 3

2. Turn the tank upside down, then remove the tank cap by turning it counter clockwise. (Fig. 3)

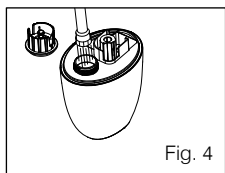


Fig. 4

3. Fill the water tank with clean, cool water. We recommend using distilled water if you live in a hard water area. (Fig. 4)

NOTE: Never add essential oils to the water tank. Even a few drops will damage the unit.

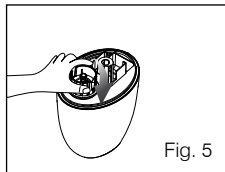


Fig. 5

4. Replace the tank cap by turning clockwise until its tight. (Fig. 5)

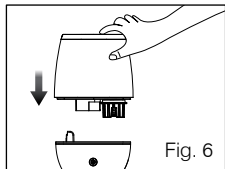


Fig. 6

5. Place the tank back on the humidifier base, making sure it is firmly seated. (Fig. 6)

NOTE: It is normal to have a small amount of water in the reservoir during and after use.



How to Use

IMPORTANT:

The Humidifier must only be supplied at Safety Extra Low Voltage “SELV”.

Only use with Power supply Model: IVP2400-0500WS

- Insert the Power Supply into the power socket outlet and switch it on.
- The On/Off button will illuminate RED indicating power is supplied.

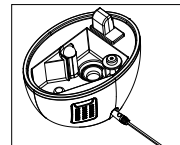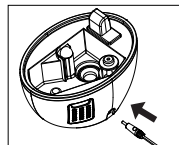

NOTE:

- Never operate without water in the tank. Fill the tank with water before turning the unit on.
- Never use any additive to the water.
- Do not wash, adjust, or move this unit without first unplugging it from the mains power.

OPERATION

1. Plug-in the adaptor into a 230-240 volt AC electrical outlet.
2. Press the Power button once to turn unit on the humidifier, default mode is at High mist rate.
3. Continue pressing the Power button to select desired mist rate.

Indicator light	Operation
GREEN	High mist Rate
BLUE	Medium mist rate
YELLOW	Low mist rate

NOTE: When the unit is in standby mode, the LED on the power button is always red.


ATTENTION: If water has been consumed, the unit will turn off and the indicator light will flash 5 times, indicating water tank has run out of water.

Night Light Function


Press and hold Power button to turn the night light ON. The BLUE light at the bottom of the water tank will turn on. Press and hold the On/Off button again to turn the night light off. The night light cannot be turned on in standby mode.

Adding Essential oils



ATTENTION: Do not add too much essential oil on the pad, too much essential oil will leak to the unit after tray assembly.

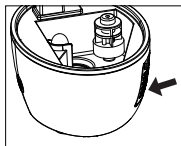

1. The aroma tray is located on the back of the humidifier.

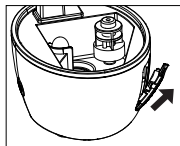


2. Pull out the oil tray, place 1 aroma pad (5 included) into the Oil tray.

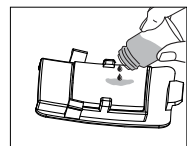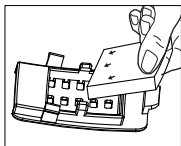

3. Add 1–2 drops of essential oil to the pad. You may use more or less depending on personal preference.

WARNING: Only place essential oil on the pad and NOT directly into the tray.

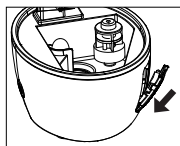

4. Place the oil tray back in its compartment. The scent will start automatically when the mist is turned on.

Cleaning and Care

CAUTION: Before cleaning the unit, turn power off and unplug unit from the outlet.

- Perform regular maintenance on the ultrasonic membrane.
- Never use detergent to clean the ultrasonic membrane.
- Never clean the ultrasonic membrane by scraping with a hard object.

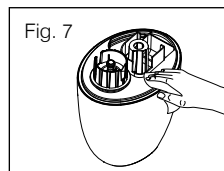


Fig. 7

To Clean the Tank

Remove the tank from the humidifier base by lifting it from the main unit. Unscrew the tank cap and rinse inside the tank with clean water.

To remove any scale or buildup, use a 50/50 mixture of vinegar and lukewarm water to clean the inside of the tank. (Fig. 7)

Suggestion: Clean the water tank once every two to three weeks, depending on your water conditions.

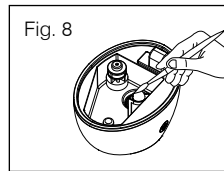


Fig. 8

To Clean the Ultrasonic Membrane

Pour a 50/50 mixture of vinegar and water on the surface of the ultrasonic membrane, then soak for five minutes. Brush clean with a soft-bristle brush (not included). Do not rinse the base under water directly.

NEVER touch the ultrasonic membrane with your fingers as the natural oils in skin can damage the membrane. (Fig. 8)

Suggestion: Clean the membrane once every two to three weeks, depending on your water conditions.

NOTE: Never submerge the base in water or any liquid.

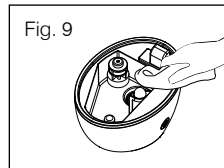


Fig. 9

To Clean the Surface

Clean the surface of your humidifier with a clean, damp, soft cloth as often as needed. (Fig. 9)

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
Power Light is off/ No mist from spout	<ul style="list-style-type: none"> • Unit is not plugged in • No power at outlet • Low water level 	<ul style="list-style-type: none"> • Plug unit in • Press the POWER button touch to turn the power on • Check circuits and fuses or try a different outlet • Refill tank with water
Peculiar Odor	<ul style="list-style-type: none"> • If new unit • If unit is in use, the odor may be a dirty tank or old tank water 	<ul style="list-style-type: none"> • Open the water tank cap and keep it in a shady and cool place for 12 hours • Empty the old water, clean the tank and fill with clean water
Excessive Noise	<ul style="list-style-type: none"> • Unit is not level • Low water level 	<ul style="list-style-type: none"> • Place unit on a flat, even surface • Check the water level. Refill the tank if the water is low • Remove vent cover and brush or vacuum clean the vent filter
White Dust Accumulation	<ul style="list-style-type: none"> • Tank needs refilling 	<ul style="list-style-type: none"> • Use distilled water • Clean the water tank clean the water tank by brush

12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Indicator light	Indicator light
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1800 124 125 (Australia) or 0800 945 995	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us