

anko

DRIP HUMIDIFIER

Instruction Manual



Model No.: AGH08

To ensure the proper operation of this product, please read this instruction manual carefully before using the product and keep it for further reference.

Important Safeguards



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for future reference, along with the purchase receipt and packaging. If applicable, pass these instructions onto the next owner of this product.

Explanation of Symbols



This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.



This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.



This signal word warns of possible damage to property.

PROPER USE

The product is intended to be used exclusively for increasing the humidity in indoor rooms with dry air.

This product is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments.
- Farmhouses.
- By clients in hotels, motels and other residential type environments.
- Bed and breakfast type environments.

Only use the product as described in this manual. Any other use is considered improper and may result in damage to property or persons. The product is not a children's toy.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

READ ALL INSTRUCTIONS

When using an electrical product, to reduce the risk of personal injury or damage to property, basic safety precautions must be observed, including the following:

WARNING!

RISK OF ELECTRIC SHOCK!

A faulty electric installation or excess voltage can cause an electric shock.

- The product is supplied with low voltage in accordance with the labelling on the product.
- Stop using the product if it is damaged.
- Do not open the housing; contact customer service if the product is damaged.
- Do not immerse the product in water or other liquids.
- Never touch the USB cable with wet or damp hands.
- Only use the product indoors. Never operate it in damp rooms or in the rain.
- Do not use the product in a bathroom.
- Never insert any objects into the housing.

WARNING!

Danger to children and persons with reduced physical, sensory or mental abilities (e.g. partially disabled, elderly people with reduced physical and mental abilities) or lack of experience and knowledge (e.g. older children).

- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved.
- Keep children under 8 away from the product and the power cable.
- Do not leave the product unattended when in use.
- Children should not play with the product.
- Children must not clean or service the product unsupervised.
- Unplug the product during filling and cleaning.
- Do not add salt or essential oils to the water as these will block the outlet.

WARNING!

Health hazard!

- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Do not permit the area around the product to become damp or wet. If dampness occurs, reduce the time that the product is being used. Do not use near absorbent materials such as carpeting, curtains, drapes or tablecloths as they may become damp.
- Unplug the product during filling and cleaning.

- Never leave water in the tank when the product is not in use.
- Empty and clean the product before storage. Ensure that the product is clean before the next use.

Micro-organisms that may be present in the water or in the environment where the product is used or stored and can grow in the water tank and be dispersed in the air causing serious health risks when the water and the tank are not cleaned regularly. Water should be replaced every 3 days.

- Empty the water tank and refill every 3rd day. Before refilling, clean the tank with fresh tap water. Remove any scale deposits, or film that has formed on the sides of the tank or on the interior surfaces and wipe all surfaces dry.

WARNING!

Health hazard.

The water in the tank is not to be consumed. Drinking the water can be harmful to your health. This is especially true if scented oils have been added to the water.

- Do not drink the water from the tank.
- Seek medical attention immediately if water with scented oils has been consumed.

CAUTION!

Risk of damage!

Improper assembly can damage the product.

- Only operate the product on an easily accessible, level, stable, dry and heat-resistant surface. Never place the product on the edge of the work surface.
- To avoid a build-up of heat, do not position the product directly against a wall or under wall-mounted cabinets or similar. The emerging vapour can damage furniture.
- Never place the product on or near hot surfaces (stove tops, etc.) and never expose the product to high temperatures (heaters, etc.) or to bad weather (rain, etc.).
- Keep the product and USB cable away from open flames and hot surfaces.
- Never immerse the product in water to clean it and do not use a steam cleaner. This will damage the product.
- Never wash the product in the dishwasher. This would destroy it.
- Stop using the product if any of its components are cracked or deformed. Only replaced damaged components with matching original spare parts.
- Do not attempt to repair or modify the product yourself. Contact customer service if damage has occurred.
- Never expose the product to weather influences, direct sunlight or hot air circulation.
- Only use the product at an ambient temperature of between 0°C and 40°C.
- If the room temperature is less than 0°C, empty the water tank as freezing water could damage the product.
- If the water in the water tank is frozen, wait until it has melted.

- Never pour water directly over the outlet or into other parts of the product. Wipe off any spilt water on the product with a dry cloth.
- Never fill the water tank with water at a temperature above 40°C to avoid discoloration or deformities.
- Only pour water into the water tank and never into other parts of the product.
- Do not put metals, chemicals or detergents in the water tank, otherwise the evaporation will not work properly.
- Never remove residual water from the outlet when the product is switched on.
- If there is a lot of water in the water tank, do not move the product excessively, as this could cause the water to leak and enter other parts of the product.
- This product must only be used with the USB cable provided as per the markings on the product.
- For information on filling, please refer the section "Instructions".
- For the information of cleaning and descaling, please refer the section "Cleaning and Maintenance".

WARNING!


- To reduce the risk of electric shock, do not immerse or expose the product, USB cord to rain, moisture, or any other liquid.
- Do not use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.
- In the event where the product is dropped into water, turn off the power at the power outlet and remove the plug immediately.

DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISCONNECTED FROM THE POWER SUPPLY.

- It is important to note that the product will have to be inspected by a qualified technician before using it again.

SAVE THESE INSTRUCTIONS

Parts Guide

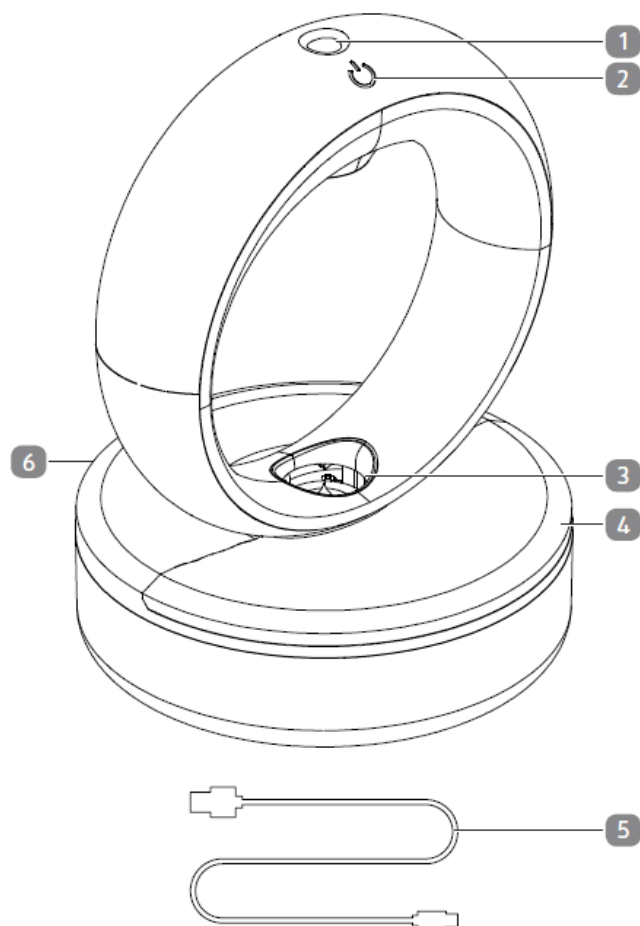

- 1. Vapour outlet
- 2. Power button
- 3. Water outlet
- 4. Water tank cover
- 5. USB cable
- 6. Power socket

Instructions

GETTING STARTED

Check the product and parts guide.

NOTE!

Risk of damage!

If opening the packaging with a sharp knife or other pointed object, be careful to avoid damaging the products surface.

- Proceed carefully with opening the packaging.
- 1. Remove all packaging from the product.
- 2. Check that the delivery is complete (see Parts Guide).
- 3. Inspect the product and individual parts for damage. Do not operate a damaged product, contact Customer Service if damage has occurred.
- 4. Clean all parts as described in the "Cleaning" section.

Operation

WARNING!

Risk of electric shock and fire!

Abnormal noises or smells may indicate that the product is damaged.

- If the product makes a noticeable noise, disconnect it from the power supply immediately.
- If the product emits unpleasant odours, clean the product as described in the chapter "Cleaning". If the product still emits unpleasant odours after cleaning, contact Customer Service.

CAUTION!

Risk of damage!

If you use the product with an empty water tank, the product may be damaged.

Never use the product without water in the water tank.

NOTE:

Ensure that the area around the product does not become damp or wet. If dampness occurs, use the product intermittently. Do not allow absorbent materials such as carpets, curtains or tablecloths to become damp.

Setting up the product


1. Select a stable, level, water and heat proof surface.

NOTE: Ensure sufficient distance from sensitive products, furniture and surfaces.

2. Set up the product and check its stability.


Water Tank

1. Remove the cover (4) from the water tank (8).
2. Fill the water tank with water up to (but do not exceed) the MAX mark line (7).
Ensure that the MAX mark line is not exceeded.
3. Return the cover to the tank ensuring that it is securely closed.
4. Check the product for moisture droplets and wipe them dry before using the product.

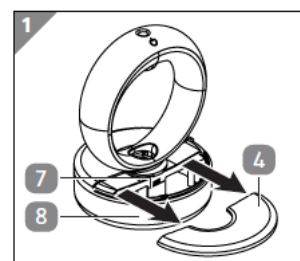

Usage

1. Connect the USB cable (5) to the USB connection port (6) on the product.
2. Connect the USB cable to a USB port of a mains adaptor (not included).
3. Press the Power button (1).
 - Each time the power button is pressed, a signal tone sounds.
 - The integrated LED lighting will illuminate.
 - Vapour is dispersed from the vapour outlet.
 - **First press** - It appears that the water droplets are flowing up away from the water outlet.
 - **Second press** - It appears that the water droplets are flowing up, steady and flowing down towards the water outlet.
 - **Third press** - It appears that the water droplets are flowing down towards the water outlet.
 - To turn the product off, press and hold the power button. The light will be distinguished, and the water will stop flowing.

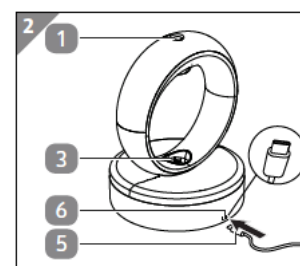

NOTE: If the tank runs out of water or does not have enough water remaining to operate the product will turn off automatically.

NOTE: The functions loop when power button is pressed.

CAUTION! Do not leave the product unattended.

CAUTION! Do not use the product near other items that may become damaged if they get wet.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
The product cannot be turned on.	There is not enough or no water in the water tank.	Fill the water tank with water as described in the section "Water Tank"
	The product is not connected to the power supply.	Connect the product to the power outlet.
Unusual or no water vapour being produced.	There is too much or too little water in the water tank.	Fill the water tank with water to below the "MAX" mark. Where the water tank has been overfilled, carefully remove the excess water so that the water is under the "MAX" fill line.
	The plate of the vapour outlet is dirty.	Clean the plate.

Cleaning and Maintenance

CAUTION! Risk of short circuit!

If water or other liquids enter the housing, they can cause a short circuit.

- Do not immerse the product, power cable or mains plug in water or other liquids.
- Do not let water or other liquids penetrate the product.

CAUTION! Risk of short damage!

Improper handling of the product can damage the product.

- Do not use any aggressive cleaners, sharp or metal cleaning utensils such as knives, hard scrapers or similar items. These could damage the surfaces.
- Never wash the product in the dishwasher. This would destroy it.

Cleaning the water tank

NOTE: It is important to not leave water in the tank when the product is not in use. Clean the water tank every three days.

1. Switch off the product and disconnect it from the power supply.
2. Allow the product to cool down.
3. Dispose of any remaining water from the water tank correctly.
4. Wipe off any limescale deposits, water and any oil residues with a moist (not wet) cloth.
5. Rinse the water tank with clean cold water.
6. Wipe the water tank dry with a soft, clean cloth.

Descale the water tank

NOTE: It is important to descale the water tank to avoid scale build-up, which will affect the product performance.

It is recommended to descale the water tank every four weeks.

1. Fill the water tank halfway with water.
2. Add a small quantity of descaler or 2 tablespoons of white vinegar.
3. Close the water tank.
4. Leave the descaling solution to work for 20 minutes.
5. Empty the water tank completely.
6. Rinse the water tank twice with clean, cold water.

Cleaning the vapour outlet

1. Moisten a cotton bud with a small amount of vinegar.
2. Gently wipe off any limescale deposits and any other residues with the cotton bud.

Clean the external housing

1. Wipe the outside of the product with a slightly damp cloth.
2. Then allow all ports to dry completely before using again or storing.

WARNING! The product and parts are **NOT** Dishwasher Safe.

Storage

All parts must be completely dry before being stored.

- Always store the product in a dry and clean area.
- Protect the product from direct sunlight.
- Store the product so that it is not accessible to children.

Technical Specifications

Model Number	AGH08
Power Supply	DC 5V 
Rated Current	2A
Rated Water Tank Capacity	680 ml

WARRANTY

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us