



Humidifier with Lamp
T2
User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:




READ ALL INSTRUCTIONS BEFORE USE.

- The appliance is intended for household use only.
- Keep the appliance out of reach of children.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not use the appliance if it has been dropped or any part of the appliance got damaged.
- Use only accessories supplied with the product. The use of accessories not intended for use with this appliance may cause injuries to the user or damage to the appliance.
- The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
- Turn off and unplug the appliance before filling, cleaning or any other operation.
- Turn off and unplug the appliance before moving. Move the unit slowly and carefully. Never let the water overflow.
- Any repairs to the product must be carried out by a qualified electrical person only or the product must be disposed of. There are no user-serviceable parts in this appliance.
- Be sure the appliance is placed on a stable surface before operating.
- Do not use the appliance in very hot or humid places, such as kitchens, bathrooms or under direct sunlight.
- Turn off, unplug and empty the water from the appliance if you are not going to use it for a long time.
- Use only the USB cable supplied.
- Do not allow the cable to hang over the edge of the work surface or to come into contact with stoves or other hot surfaces.
- This appliance must only be supplied by AS/NZS 61558.1 & AS/NZS 61558.2.16 certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
- For cleaning, please refer to CLEANING AND STORAGE section.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR HUMIDIFIER WITH LAMP

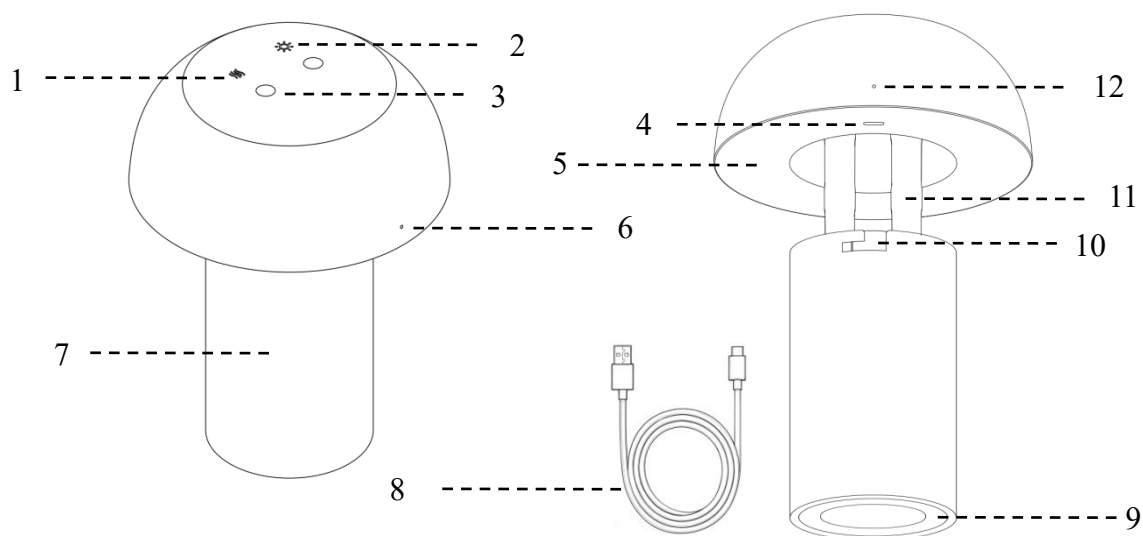

- | | |
|--------------------------------|--------------------------|
| 1. Humidify function switch | 2. Light function switch |
| 3. Mist outlet | 4. USB interface |
| 5. Light ring | 6. Green power indicator |
| 7. Water tank (max fill 500mL) | 8. USB cable |
| 9. Anti-skid ring | 10. Clamping slot |
| 11. Absorbent wick with tube | 12. Main unit |

IMPORTANT!

Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, return the product to the respective customer service centre.

HOW TO USE YOUR HUMIDIFIER WITH LAMP

1. Twist anti-clockwise and lift up the main unit.
 2. Fill the water tank with clean tap water.
- WARNING!** Do not fill water to exceed the MAX mark (500mL).
Notice: 500mL water provides up to approx. 8.5 hours of misting at high mist intensity setting.
3. Align the USB interface on the main unit with the clamping slot on the water tank, push in and twist clockwise to get the two parts assembled.
 4. Plug in the USB cable, the green power indicator light up.
 5. Touch the light button, the ambient lights illuminate brightly. Touch 2nd and 3rd times to get moderate and dim light. Touch the 4th time to turn off the light.

6. Touch the humidifier button, mist will start to spray out from both mist outlets. Touch again to adjust the mist intensity, the two mist outlets spray alternately. Touch the 3rd time to turn off the humidifier.

Notice: the appliance will turn off automatically after 6 hours.

7. Turn off and remove the USB cable after use.

CLEANING AND STORAGE

Clean the appliance regularly.


WARNING!

- **Never immerse the main unit or the USB cord in water or other liquids to clean.**
- **Never use abrasive cleaners on any part of the product.**
- **Do not place any parts into a dishwasher or extremely hot water.**

1. Remove the USB cord from power supply and the appliance before cleaning.
2. Pull off the tubes from the main unit, rinse the wick gently under running tap water until the water runs clear, squeeze out excess water gently.

WARNING! Do not use soap or detergents! Do not wring!

3. Clean the main unit with a damp cloth. Wipe dry with a soft dry cloth.
4. Wash water tank and tubes in warm, soapy water, rinse and dry thoroughly.
5. Make sure all components are clean and dry before storing.
6. Store the appliance upright in a clean and dry location. Do not place anything on top.

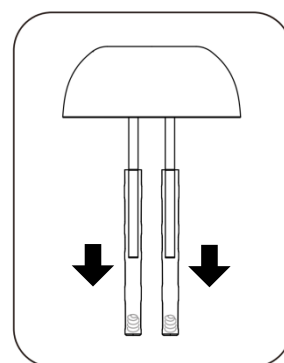

TECHNICAL SPECIFICATION

Input: 5Vd.c. 1A

Max mist output: Approx.60mL/hour

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us