 


HOW TO REPLACE THE HEPA FILTER

1. The filter indicator light will illuminate red when it is time to replace the filter.
2. Turn the air purifier OFF and unplug the unit from mains.
3. Place the unit upside down.
4. Rotate the bottom housing counter clockwise and lift the housing to access the filter.
5. Remove the old filter and dispose of it in accordance with local regulations.
6. Insert a new filter.
7. Re-align the bottom housing and turn the housing clockwise until it locks securely into the body.
8. Power the unit back on by plugging the power adapter into the mains.
9. To reset the filter status on the air purifier, PRESS and HOLD the Power and Fan Speed buttons for 5 seconds. The filter indicator will flash 3 times to indicate a successful reset.

WARNING: ONLY use the filter specifically for this appliance. Using any other filters may cause either poorer air filtration performance or restricted airflow which will inherently cause the fan motor to overheat and shorten the lifespan of the unit.

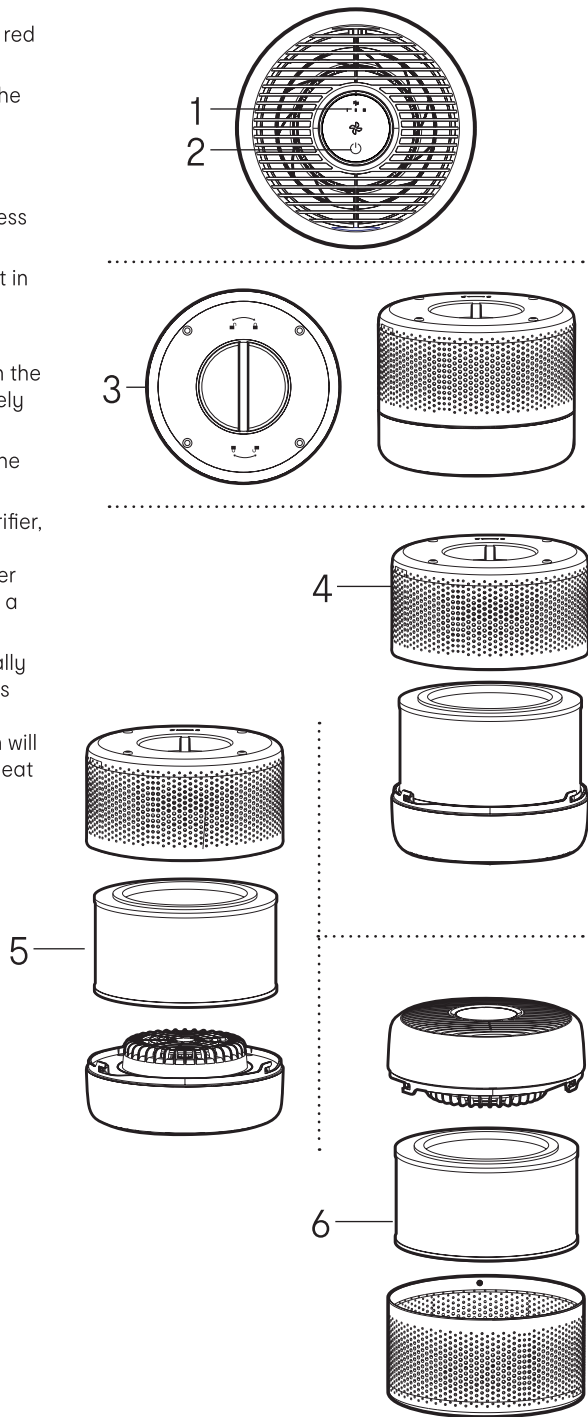

TROUBLESHOOTING

PROBLEM	SOLUTION
The unit is not working.	› Check if unit is properly plugged in and the power outlet is properly functioning. › Ensure power outlet is switched on. › Ensure unit is powered on. › Ensure filter and bottom housing are properly installed. › Ensure the power adapter used is the power adapter supplied with the product. DO NOT use any other power adapters.
There is a decrease in airflow	› Check the filter and remove any plastic wrapping/packaging if present. › Ensure the air intake grille and filtered air outlet is free from any blockage. › Check if filter is clogged or dirty. Clean the dust off the filter by referring to the CARE AND MAINTENANCE section. › Check the condition of the filter and replace if necessary. › Ensure the filter used is the filter specifically for this product.
The unit is making loud noises	› Ensure the unit housing is properly secured and correctly fitted. › Ensure that the air purifier is placed on a flat, level, and stable surface. An uneven surface may cause vibration and increased noise. › Check that the filter is correctly seated within the unit and fully installed according to the instructions. › Access the filter by removing the enclosure and verify that any plastic packaging was removed from the filter.

12 Month Warranty

Thank you for your purchase. Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation. We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect. Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases

Kmart Australia Ltd.
C/- Customer Service Centre
1 Middle Rd, Chadstone VIC 3148
Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au

Contact for Target purchases

Target Australia Pty Ltd
C/- Customer Service Centre
1 Middle Rd, Chadstone VIC 3148
Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

anko

AIR PURIFIER DESKTOP



INSTRUCTION MANUAL

APR002

WARNING!

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY, READ, UNDERSTAND AND FOLLOW INSTRUCTIONS BEFORE USING THIS PRODUCT.

Thank you for choosing one of our products. Listed below are precautions which are essential when using this appliance. Please take a few minutes to read these instructions. Keep these instructions handy for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. These precautions include:

READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT.

- To avoid fire or shock hazard, plug the appliance directly into a 220-240V AC electrical outlet ONLY with the provided power adapter.
- If the filter is packed in a plastic bag when shipped, remove the plastic bag before use. Always keep the plastic bag away from children.
- Do not place the appliance on a walkway or near someone. Misplacement of the appliance may cause a trip and fall.
- Keep the cord out of heavy traffic areas. To avoid fire hazard, never put the cord under rugs, near heat registers, radiators, stoves or heaters.
- To protect against electrical hazards, do not immerse the appliance or use near water or other liquids.
- This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children.
- Always turn the appliance off before unplugging it from the power outlet.
- Ensure the unit is turned off and unplugged from mains before moving, accessing the internals of the unit or performing maintenance to the unit. Disconnect the unit from mains when the unit will not in use for a long period.
- To disconnect the unit from power outlets, pull the plug and not the cord.
- Never drop or insert objects into the opening of the unit.
- Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Keep unit away from heated surfaces and open flames.
- DO NOT** operate any appliance with a damaged cord or plug. If the motor fan fails to operate or the unit has been dropped or damaged in any manner, return appliance to the manufacturer for examination and / or repair.
- DO NOT** use this device outdoors.
- DO NOT** place the unit on a soft or unstable surface, such as a bed or sofa. Doing so may cause the unit to tip over and obstruct the air inlet or outlet grilles.

- DO NOT** place anything on top of unit.
- DO NOT** use detergents, gasoline, glass cleaner, furniture polish, paint thinner or other household solvents to clean any part of the unit.


WARNING: To reduce the risk of fire, electric shock or injury to persons:

- DO NOT use this appliance with any solid-state speed control device.
- DO NOT use replacement parts that are not recommended by the manufacturer, including parts fabricated at home such as those produced using a 3D printer.


CAUTION: ONLY use the power adapter provided with the unit. DO NOT use any other power adapters.

CAUTION: ONLY use the filter specifically for this appliance. Using any other filters may cause either poorer air filtration performance or restricted airflow which will inherently cause the fan motor to overheat and shorten the lifespan of the unit.

IDENTIFICATION

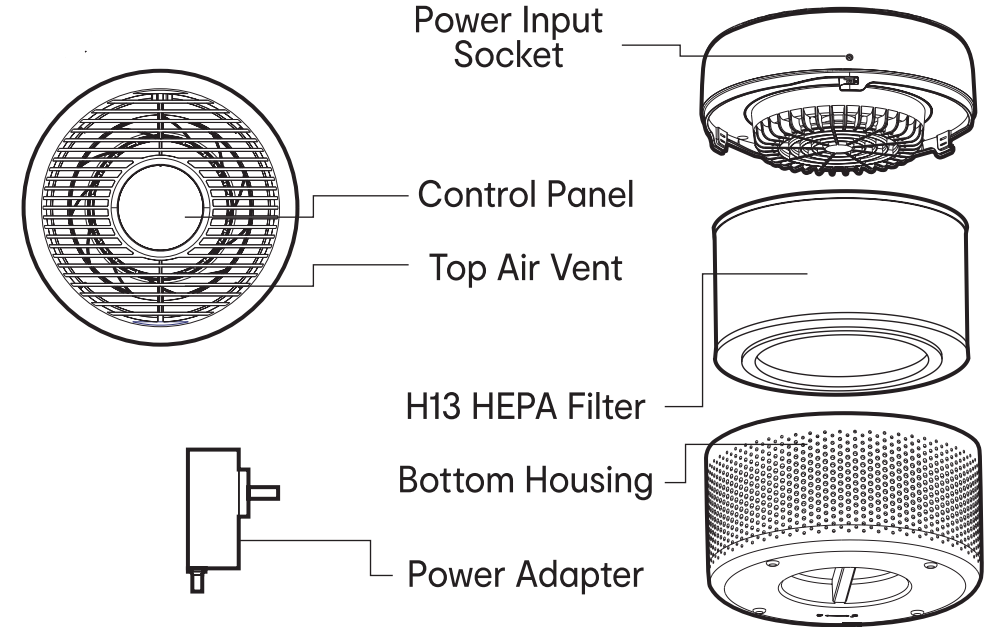

CONTROL PANEL

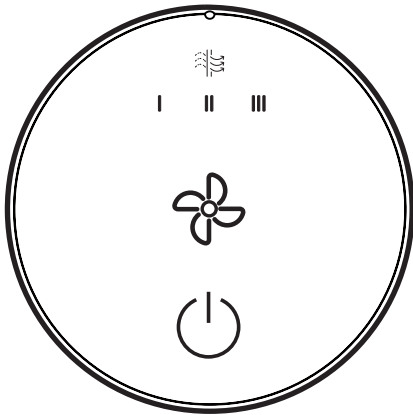

ON / OFF BUTTON

Turns unit on or off.



FAN SPEED BUTTON

Cycle through between 3 speed settings.



FILTER REPLACEMENT INDICATOR

Illuminates RED when it's time to replace the filter.



FAN SPEED INDICATOR

I (Low)

II (Medium)

III (High)

A5 148mm x 210mm

CPIN008760

BEFORE FIRST USE

CAUTION: Packaging materials can pose a suffocation hazard. Keep all packaging materials away from children.

- Place the unit upside down.
- Rotate the bottom housing counter clockwise and lift the housing to access the filter.
- Remove the plastic bag from the filter and re-insert the filter
- Re-align the bottom housing and turn the housing clockwise until it locks securely into the body.
- Power the unit on by plugging the power adapter into the mains.
- This unit is equipped with a 3-in-1 H13 HEPA filter that lasts up to 8-12 months, depending on usage.

OPERATING INSTRUCTIONS

- Place the unit on a dry, stable, and firm surface. Make sure not to block the top air outlet vent and air intake grill.
- Connect the power adapter to the power input socket (barrel jack) socket located on the top housing. Plug the adapter into a 220-240V~ AC electrical outlet.

CAUTION: Only use the power adapter that is provided with the unit.

Do not use other power adapters.

- Tap the power button () to turn the unit ON.
- When starting up, the appliance will operate in high speed (III) mode by default.
- To select a desired fan speed, tap the fan button () to cycle through the speeds, III (high), I (low), II, until the desired speed setting is illuminated.

IMPORTANT: Always turn OFF and unplug the unit when not in use.

CARE AND MAINTENANCE

- Before cleaning the air purifier, turn OFF and unplug the unit.
- Clean the exterior surface with a clean, damp (NOT WET) cloth.
- The top air vent can be cleaned of dust with a small, soft brush.
- If you would like to clean the inside of the filter compartment, ONLY use a dry, soft cloth to wipe it down.

WARNING: Do not allow moisture to come into contact with the main housing of the air purifier.

NEVER use detergents, gasoline, glass cleaner, furniture polish, paint thinner, or other household solvents to clean any part of the appliance.

TECHNICAL SPECIFICATION

CADR:	Smoke: 75 m³/h
Fan Speeds:	3
Consumption:	9.5W
AC Adapter Input:	100-240V~ 50-60Hz 0.5A
AC Adapter Output:	12V===1A
Power Adapter Insulation:	Class II
Air Purifier Insulation:	Class III