 


anko

Air Purifier

KAAP01499

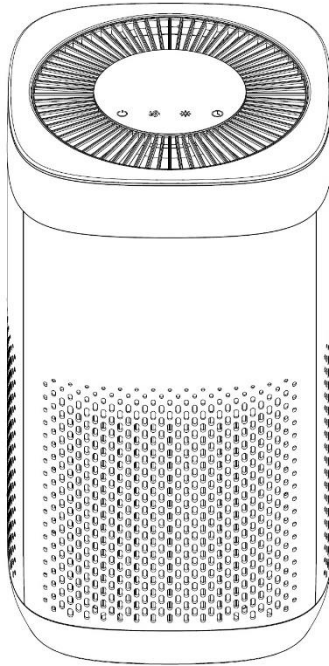

Instruction Manual

**READ AND SAVE THESE INSTRUCTIONS FOR FUTURE
REFERENCE**



SAFETY PRECAUTIONS

When using electrical appliances, to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including:

- Carefully read this manual in full before using this appliance. Keep this manual with the product. If it is to be used by a third party, this instruction manual must be supplied with it.
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.
- Dangerous high voltages are present inside this enclosure. To avoid electric shock, do not open the cabinet. Refer servicing to qualified personnel only.
- This appliance is intended for indoor use only and not for commercial, industrial or outdoor use. Do not use the appliance for anything other than its intended use.
- To protect against fire, electrical shock and injury to persons, do not immerse the unit, plug or cord in water or spray it with liquids.
- The apparatus shall not be exposed to dripping or splashing. Do not place the appliance close to an open window. Rain splashing on the appliance could cause an electric shock hazard.
- A damaged power cord can lead to a deadly electric shock. Do not use this product if it appears to be damaged.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug the appliance during thunder or lightning storms or when not in use for a long time.
- Do not operate the appliance with a damaged cord or plug, after a malfunction or if it is dropped or damaged in any manner. Return the appliance to an authorised service facility for examination.
- This appliance is not intended for use in bathrooms, laundry areas or similar moist indoor locations. Never locate the appliance where it may fall into a

bathtub or other water container.

- Do not run the power cord under carpeting or cover the power cord with throw rugs, runners or the like. Arrange the power cord away from traffic areas and where it will not be tripped over.
- This appliance is intended to be connected to a suitable 220-240V~50Hz power outlet. If using an extension cord or power board, ensure that the extension cord or power board is of a suitable 10-amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat.
- To disconnect the appliance, turn off the unit and then remove the plug from the outlet. Do not touch the power supply or appliance with wet hands.
- Do not operate the appliance in the presence of explosive and/ or flammable fumes. Do not place the appliance or any parts near an open flame, cooking or other heating appliance.
- Never install the appliance where it could be subject to mechanical vibration/shock or excessive dust.
- Unplug the appliance when cleaning, removing/ replacing the filter, or moving the appliance from one location to another.
- Clean regularly as per Maintenance instructions to avoid malfunction, refer to section "CARE AND CLEANING".
- .Keep the appliance away from direct sunshine, heat sources, air conditioners, and fans.
- Always place the appliance on a stable, flat surface. Do not place it on a carpet, duvet, or other unstable surfaces.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts. Repairs should only be performed by qualified personnel.

Warning! If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

 
Warning! Avoid contact with moving parts. Do not insert or allow foreign objects to enter any ventilation or exhaust openings, as this could result in an electric shock, a fire, or damage to the appliance.

Warning! If you detect any abnormal noise, odor or smoke, unplug the product immediately and contact Consumer Service Support.


Warning! DO NOT COVER the appliance in any way in order to avoid overheating and fire.

SAVE THESE INSTRUCTIONS

OVERVIEW OF AIR PURIFIER

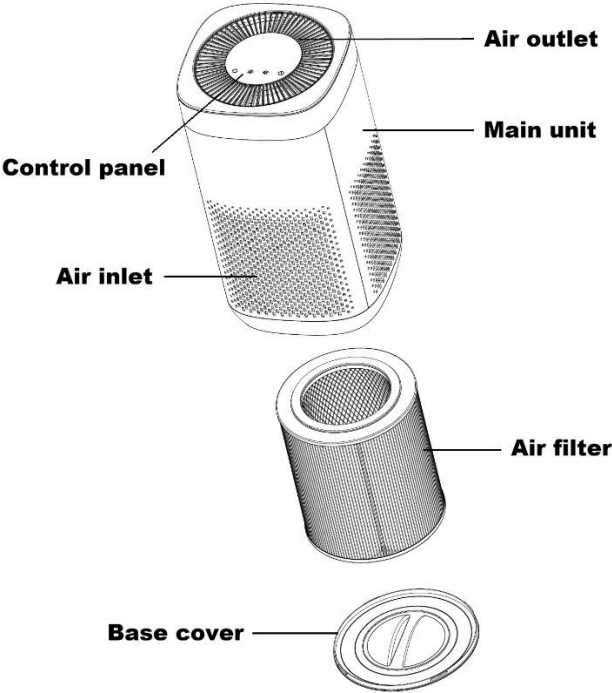

CONTROL PANEL

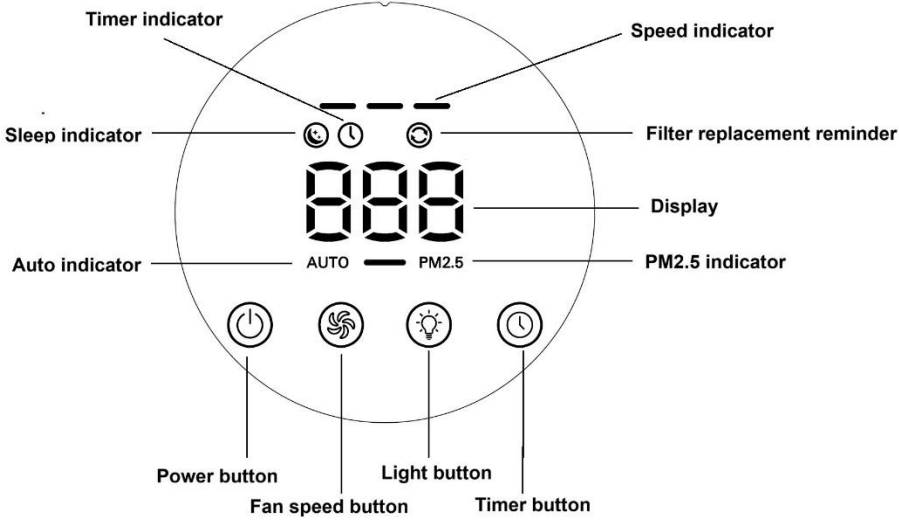 

1. Power button :

Press power button to turn the appliance on or off. The Air Purifier will be operated under AUTO mode once it is turned on.

2. Fan Speed button :

When the Air Purifier is turned on, press fan speed button repeatedly to select the desired operation mode. The corresponding speed indicator on control panel will illuminate.

- Low fan speed “-” : Press fan speed button the first time, the appliance will be operated with low airflow.
- Medium fan speed “--” : Press fan speed button the second time, the appliance will be operated with medium airflow.
- High fan speed “---” : Press fan speed button the third time, the appliance will be operated with high airflow.
- Sleep mode  : Press fan speed button the 4th time to activate Sleep mode, the air purifier will be operated at low speed and only Sleep indicator will illuminate on control panel, enabling you to enjoy the sweet and peaceful sleep .

Note: In sleep mode, pressing any button to wake up the unit firstly, indicator lights will be illuminated but the function will not be switched. Within 5s, press the button again to set the function or press speed button to deactivate sleep mode and enter into Auto mode. If you do not press any button within 5s, the appliance will enter into sleep mode again.

- Auto mode “AUTO”: In this mode, the Air Purifier automatically adjusts the fan speed in response to the current air quality. The following applies:

Light Colour	Air Quality state	Concentration of PM2.5($\mu\text{g}/\text{m}^3$)	Auto Fan Speed
Green	Good	$\text{PM}_{2.5} < 75$	Low
Orange	Moderate	$75 \leq \text{PM}_{2.5} < 150$	Medium
Red	Poor	$\text{PM}_{2.5} \geq 150$	High

Note: The PM2.5 indicator lights on the control panel communicate good, moderate or poor air quality as above chart.

3. Light button :

Press Light button repeatedly to turn on the night light with low, medium or high brightness. Press it the 4th time to turn off the night light.

4. Timer button :

Press Timer button to preset the appliance to switch off automatically with a delay of up to 12 hours. Press Timer button the first time to enter Timer setting mode, "00H" shown on display. Press Timer button repeatedly to set the time increasing 1 hour, timer will be set automatically without operation after 3s. Press Light button repeatedly to set the time decreasing 1 hour. When the set time has elapsed, the appliance will turn off automatically and enter Standby mode. During use, press Timer button to check the remaining time. Press and hold the Timer button for about 2s to cancel the timer function.

5. Display

Concentration value of PM2.5 "xxx" shows on display during operation. "xxH" shown on display during timer setting. Display will be turned off in sleep mode.

6. Filter replacement reminder :

 
The service life of filter is 3800 hours, when the countdown of filter is 0, the filter replacement indicator illuminates to remind you of replacing the filter.

After the filter is replaced, you need to press and hold both Power and Fan Speed buttons at the same time for 3s to reset the filter element. The filter replacement indicator will go out after flashing 3 times and the service life of filter will return to 3800 hours.

BEFORE FIRST USE

Before use, remove all packaging and inspect the appliance for any damage. Never use a damaged product.

1. Turn the unit upside down. Remove the base cover by unscrewing it anticlockwise (Fig.1).

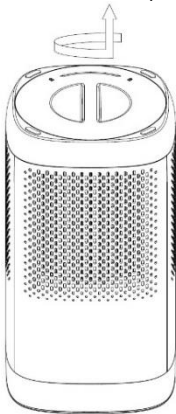


(Fig.1)



(Fig.2)

 2. Remove the base cover. Take the filter out of the filter compartment (Fig.2) and remove the plastic bag (Fig.3).

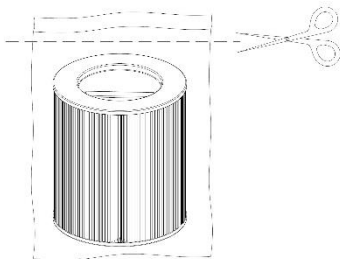


(Fig.3)




(Fig.4)

 3. Reposition the filter back into filter compartment (Fig.4).
4. Replace and secure the base cover into position by screwing it clockwise (Fig.5).

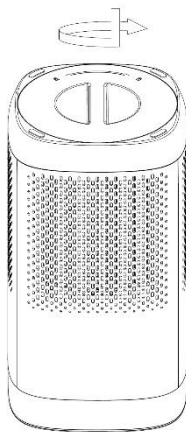

(Fig.5)

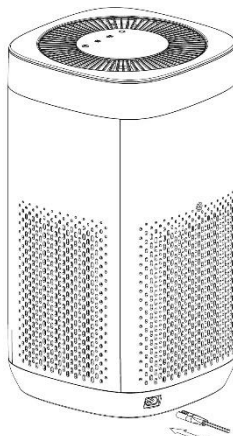 

(Fig.6)

5. Turn over the air purifier. Insert the small plug of detachable power cord into the AC input socket on the back of the unit (Fig.6). The appliance is now ready for use.

Note: In order to achieve optimum purification performance, ensure that the appliance is positioned away and clear of obstructions or walls at a minimum radius of 40cm.

OPERATION OF AIR PURIFIER

Remove cable tie and unravel the power cord before operation. Place your air purifier on a level and dry surface keeping in mind the safety precautions outlined. Ensure the plastic bag is removed from the filter before use.

1. Plug the Air Purifier into a suitable 220-240V~50Hz mains outlet.
2. Press Power button to turn on the air purifier. When the operation starts for the first time or after the power supply is cut off as a result of a power failure, the appliance operates in Auto mode.
3. Press Speed button repeatedly to select the desired fan speed: 1-2-3-Sleep-Auto.
4. Press Timer button repeatedly to preset the appliance to switch off automatically with a delay of up to 12 hours.
5. Press Power button to turn off the appliance and unplug it from mains outlet after each use.

Note:

- **In the working state, each time of pressing function button, the buzzer will give a prompt tone.**
- **Do not use the air purifier without filter. The unit cannot be turned on without the filter installed correctly in place.**
- **The air purifier can be used upright only.**

SPECIFICATION

Power supply: 220-240V~ 50Hz

Power consumption: 38W

Suitable room size: 40-45m²

CADR: 400m³/h

Noise Level: 30dB(sleep mode)-58dB (1m away)

Operating Temperature/Humidity: 5-40°C/20-85%

Filter: H13 & PET pre-filter & Active carbon

CARE AND CLEANING

Always turn off the appliance and unplug it from the power outlet before cleaning.

Always ensure the product has cooled completely before cleaning.

Clean the surface of air purifier with a dry, soft cloth as required; if there are stubborn stains, use a soft wet cloth to clean them.

Do not immerse the air purifier in water or any other liquid.

Do not use volatile liquids such as benzene, paint thinner or detergent as they may damage the surface of the air purifier. Please keep the air purifier dry.

Do not allow water to enter the inside of the appliance.

Do not wash the filter with water.

Be careful not to damage the ultra-fine filter when cleaning it with a vacuum cleaner.

If the product is no longer suitable for use, dispose of it in an environmentally friendly manner in accordance with your local council waste management requirements.

Filter Replacement

For your safety, always turn off and unplug your air purifier before replacing the filter.

Turn the unit upside down. Remove the base cover by unscrewing it anticlockwise.

Remove the base cover to access the filter. Remove the dirty filter and replace it with a new one. (Note: Please remove the protective plastic bag from the new filter).

Replace and secure the base cover into position by screwing it clockwise.

TROUBLESHOOTING

Please check the following before you contact the service center. If the problem persists, contact Consumer Service Support.

Problem/Trouble	Possible Reasons/Solutions
Can the filter be cleaned with water?	No, the filter can only be cleaned by a vacuum cleaner or brush to remove dust deposits. Once the filter becomes wet, it will no longer filter efficiently.
A strange odor comes out from the air outlet as well as the filter.	The appliance is new. It is not harmful if the odor comes from the new filter. The odor should dissipate after 1-2 weeks of use. Higher humidity levels may cause mildew to grow on the filter. Make sure the air purifier is used in a room with humidity is less than 85%RH. In areas with a lot of smoke or odors, the lifespan of the filter may be greatly decreased. Ventilate the room first or replace the filter if needed.
Can the appliance be used to purify areas exceeding the rated capacity?	The CADR (clean air volume) rating is measured in a specific test environment, and its performance will be affected if the environment changes.
Some airborne dust particles can still be seen in reflected light.	Although the appliance will absorb airborne dust particles in spaces, dust deposits moved as a result of opening doors/windows, switching on fans, ducted heating or air conditioners will be inevitable.
Fan is noisy even at the lowest speed.	The filter is clogged with dust. Clean the filter properly. Check and ensure the filter and base cover have been installed properly.
The appliance does not operate.	Check and ensure the appliance is plugged into a working power outlet. Check and ensure the filter and base cover have been installed properly.
The indoor air is not purified well enough.	The indoor air is very dirty. Ventilate the air before you use the product. The filter is clogged with dust. Clean the filter regularly and properly. The air inlet or outlet is blocked. Remove the obstacle.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us