

# anko

## 58cm Bladeless Desktop Fan User Manual



Model No.: YS-LF04-NL  
Rev 1

**Note:** This appliance's specifications and/or components are subject to change without prior notice.

145.00 mm

105.00 mm

|   |                                       |    |
|---|---------------------------------------|----|
| 1 | IMPORTANT INFORMATION.....            | 3  |
| 2 | OVERVIEW .....                        | 5  |
| 3 | DISPLAY & CONTROL PANEL OVERVIEW..... | 6  |
| 4 | REMOTE CONTROL OVERVIEW.....          | 6  |
| 5 | USING THE FAN.....                    | 8  |
| 6 | MAINTENANCE.....                      | 9  |
| 7 | TROUBLESHOOTING .....                 | 10 |
| 8 | SPECIFICATIONS .....                  | 11 |
| 9 | WARRANTY INFORMATION.....             | 12 |

# 1 Important Information



Before using this appliance, read and follow all warnings and instructions in this manual, even if you are familiar with this product.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Ensure children and babies do not play with plastic bags or packaging materials. Dispose of these materials safely.



## Safety & Warnings

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Keep the appliance out of reach of young children and pets.
- Do not disassemble the appliance. There are no user-serviceable parts inside.
- Ensure that the appliance does not get wet (water splashes, etc.).
- Do not use the appliance with wet hands.
- Do not immerse the appliance in water or other liquids or use it near sinks, baths, or showers.
- Always operate the appliance from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Position the power supply lead properly so that it will not be walked on or pinched by items placed on or against them.
- Use the appliance only for its intended use. This appliance is intended for household use only and not for commercial or industrial use.
- Do not use the appliance if it has been dropped or any part of the appliance (including cord or plug) has been damaged.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- The use of accessories not intended for use with this appliance may cause injuries to the user or damage to the appliance.
- Do not place the unit on other appliances, on uneven surfaces or where it could be subject to heat sources (e.g., radiators or stoves), direct sunlight, excessive dust, or mechanical vibrations.
- The appliance must not be used outdoors or exposed to weather.
- Do not place or leave near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not hang or wall-mount the appliance.
- Do not operate the appliance underneath or near flammable or combustible materials (e.g., curtains). Keep at least 300 mm clearance around sides, back, front, and top.
- Do not allow curtains, drapes, or any other items to drape across the appliance or openings.
- Unplug the appliance during lightning storms or when unused for long periods of time.
- Do not block any ventilation openings.
- Never insert fingers or any other objects through the air outlets and ventilation openings.
- Do not use the appliance in oily or dirty areas (i.e., the kitchen, smoky place, etc), as the air vents may become blocked.
- Unplug from the power socket by grasping the plug body. Do not pull on the cord.
- Do not misuse the cord. Never carry the appliance by the cord or pull it to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.

- If using an extension cord:
  - The technical specifications of the extension cord must match or exceed the technical specifications of this appliance.
  - Do not allow the cord to hang over the edge of the work surface or to come into contact with stoves or other hot surfaces.
  - If the cord or plug is worn or damaged, do not use.
- Turn off and unplug the appliance before cleaning or storing.
- For cleaning, refer to the Maintenance section in this instruction manual.
- Any type of servicing, apart from ordinary cleaning, must be carried out by a qualified electrical person only. There are no user-serviceable parts in the appliance.
- If the appliance is used by a third party, please supply the instruction manual with it.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or injury to the user.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of the appliance.

### Battery Safety Information

- Use only 2 × AAA 1.5V non-rechargeable batteries.
- Insert the batteries according to the polarity markings (+ and -).
- **WARNING:** Keep batteries out of reach of children. Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.
- Do not mix different types of batteries or new and used batteries.
- This remote control uses non-rechargeable batteries, these batteries are not to be recharged.
- Remove exhausted batteries from the remote control and dispose of them safely in accordance with local regulations. Do not dispose of batteries in household waste.
- If the remote control will not be used for an extended period, remove the batteries before storing.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If contact occurs, rinse immediately with plenty of clean water and seek medical attention.
- Do not expose the remote control or batteries to excessive heat such as direct sunlight, heaters, fire, or other high-temperature environments.
- Keep batteries away from metal objects to prevent the terminals from short-circuiting.
- Do not modify, pierce, damage, dismantle, short-circuit, overcharge, or reverse charge the batteries.
- When handling batteries, ensure that your hands, the remote control, and the batteries are dry.
- Ensure the battery compartment is securely closed after replacing the batteries.
- For safe disposal of the appliance, remove the batteries from the remote control before disposing of the product and dispose of them safely in accordance with local regulations.



At the end of the appliance's life, it must be disposed of correctly.

Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.



This symbol on the product or its packaging indicates:

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on collection, reuse, and recycling programmes.


### Read and Save These Instructions

## 2 Overview




|          |                                                                       |
|----------|-----------------------------------------------------------------------|
| <b>A</b> | Air Outlet                                                            |
| <b>B</b> | Display                                                               |
| <b>C</b> | Control Panel                                                         |
| <b>D</b> | Base                                                                  |
| <b>E</b> | Air Inlet Grille                                                      |
| <b>F</b> | Power Cord                                                            |
| <b>G</b> | Remote Control<br>Note: Requires 2 AAA 1.5V batteries (not included). |

### 3 Display & Control Panel Overview

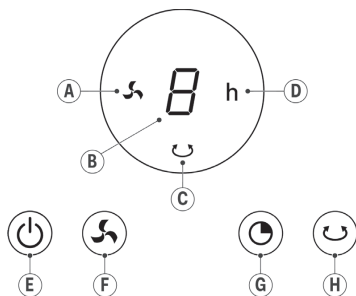

|   |                         |
|---|-------------------------|
| A | Fan On Indicator        |
| B | Fan Speed/Timer Setting |
| C | Oscillation Indicator   |
| D | Hour (Timer) Indicator  |
| E | Power On/Off button     |
| F | Fan Speed Button        |
| G | Timer Button            |
| H | Oscillation Button      |

### 4 Remote Control Overview

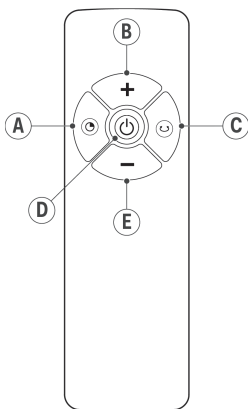

|   |                           |
|---|---------------------------|
| A | Timer Button              |
| B | Increase Fan Speed Button |
| C | Oscillation Button        |
| D | Power On/Off Button       |
| E | Decrease Fan Speed Button |

## Installing batteries in the remote control

1. Turn the remote control over and use a Phillips-head screwdriver to loosen and remove the screw securing the battery compartment cover.




2. Slide the battery compartment cover in the direction of the arrow to remove it.
3. Insert 2 AAA 1.5V batteries (not included) into the battery compartment according to the polarity markings (+ and -).
4. Refit the battery compartment cover by sliding it back into place.
5. Reinsert and tighten the screw to secure the battery compartment cover.

**Note:** Do not mix old and new batteries or different types of batteries. Remove the batteries if the remote control will not be used for an extended period.

## Using the remote control

Point the remote control towards the fan when pressing a button. Ensure there are no obstructions between the remote control and the fan for proper operation.

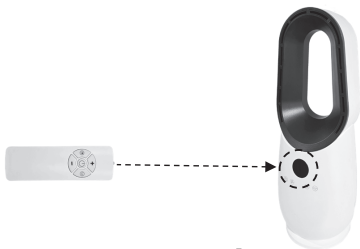

## 5 Using the Fan

**Note:** The fan will beep each time a button on the fan or remote control is pressed. This sound cannot be turned off.

### Turning the fan on and off

1. Plug the fan into a power outlet and switch on the power.
2. Press the  button on the fan or the remote control to turn the fan on.
3. Press the  button to turn the fan off.

### Changing the fan speed

Press the  button repeatedly on the fan to cycle through fan speeds 1 to 3, or press the **+** or **-** button on the remote control to increase or decrease the fan speed. The display shows the current speed setting.

### Using the oscillation function

Press the  button on the fan or the remote control to start side to side oscillation. The  indicator lights up on the display.

Press the  button again to stop oscillation.

### Using the timer function

When the fan is on, press the  button on the fan or the remote control repeatedly to set a timer from 1 to 9 hours. Stop pressing when the desired number of hours appears on the display. The fan will beep twice to confirm the selected timer setting.

While the timer is running, the display will alternate between the **h** timer and the current  fan speed.

When the timer ends, the fan will turn off automatically.

To cancel the timer, press the  button repeatedly until the **h** timer indicator disappears and only the  fan speed is shown on the display.

## 6 Maintenance

### Cleaning

- Ensure that the fan is turned off and unplugged from the power outlet before cleaning.
- Regularly clean the outside of the fan to prevent dust from collecting. Use a soft, dry cloth to clean both the exterior of the fan, the air outlet and the rear air inlet grille.
- Do not use water, flammable liquids, chemicals, harsh cleaners, abrasive creams, or scouring pads for cleaning.
- Never spray the fan with liquids or submerge it in water or any other liquid.

For a more thorough clean, the rear air inlet grille can be removed for washing:

1. Press the two tabs at the top of the rear air inlet grille, then pull out the grille.



2. Wash the grille in clean warm water with mild detergent and allow it to air-dry completely before refitting.
3. While the grille is removed, use a vacuum cleaner with a soft brush attachment to remove dust and fluff from the main air inlet grille.



4. Refit the grille by hooking the two tabs at the bottom of the grille into the main unit first, then push the top of the grille closed until it clips securely into place.

## Storage

- If the fan will not be used for an extended period, unplug it from the power outlet.
- Coil the power cord loosely and lay it at the base of the fan. Do not kink the cord or pull it tight.
- Remove the batteries from the remote control. Store the remote control in a safe, dry place where it will not be damaged or misplaced.
- Store the fan upright in a cool, dry location away from direct sunlight, moisture, and heat sources.

## 7 Troubleshooting

| Problem                             | Possible Solution                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The fan does not turn on            | Ensure the plug is fully inserted into the power outlet and the power is switched on.<br>Check that the Power button has been pressed on the fan or remote control.<br>Try a different power outlet if necessary.<br>If the fan still doesn't work, please contact Customer Service on 1300 105 888 (Australia) or 09 8870 447 (New Zealand). |
| The remote control does not work    | Ensure the batteries are inserted correctly according to the polarity markings (+ and -).<br>Replace the batteries if they are flat.<br>Make sure there are no obstructions between the remote control and the fan. Use the remote control closer to the fan and make sure it is pointing directly at the fan.                                |
| The fan stops during use            | Check whether the timer function has been set. If the timer is active, the fan will turn off automatically when the set time has elapsed.<br>Ensure the power supply is stable and the plug is securely connected.                                                                                                                            |
| Weak airflow or reduced performance | Ensure the fan is set to the highest speed for maximum air circulation. Allow a few minutes for the fan to fully circulate air throughout the room.<br>Check that the rear air inlet grille and air outlet are clean and unobstructed. Clean the rear air inlet grille if necessary.                                                          |
| Unusual noise during operation      | Ensure the fan is placed on a stable, flat surface. Check that no foreign objects have entered the air outlet.<br>Ensure the rear grille is fitted correctly and securely.                                                                                                                                                                    |

## 8 Specifications

|               |                  |
|---------------|------------------|
| Product Model | YS-LF04-NL       |
| Power Supply  | 230 – 240V~ 50Hz |
| Rated Power   | 70W              |

## 9 Warranty Information

### 12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

| Contact for Kmart purchases                                                                                                                                                                                                                                           | Contact for Target purchases                                                                                                                                                                                                                                   |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Kmart Australia Ltd.<br>C/- Customer Service Centre<br>L2/ 1 MIDDLE ROAD, CHADSTONE VIC<br>3148 AUSTRALIA<br>Customer Service: 1800 124 125<br>(Australia) or 0800 945 995<br>(New Zealand) or via<br>Customer Help at <a href="http://kmart.com.au">kmart.com.au</a> | Target Australia Pty Ltd<br>C/- Customer Service Centre<br>L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148<br>AUSTRALIA<br>Customer Service: 1300 753 567 or via<br>Customer Help at<br><a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a> |

**IMPORTANT! For all technical queries or difficulties in operating the product and for spare parts, contact H.E. Group customer service 1300 105 888 (Australia) and 09 8870 447 (New Zealand).**