 


# anko

DEHUMIDIFIER

Model: DH075GE-A1E2

## User Manual

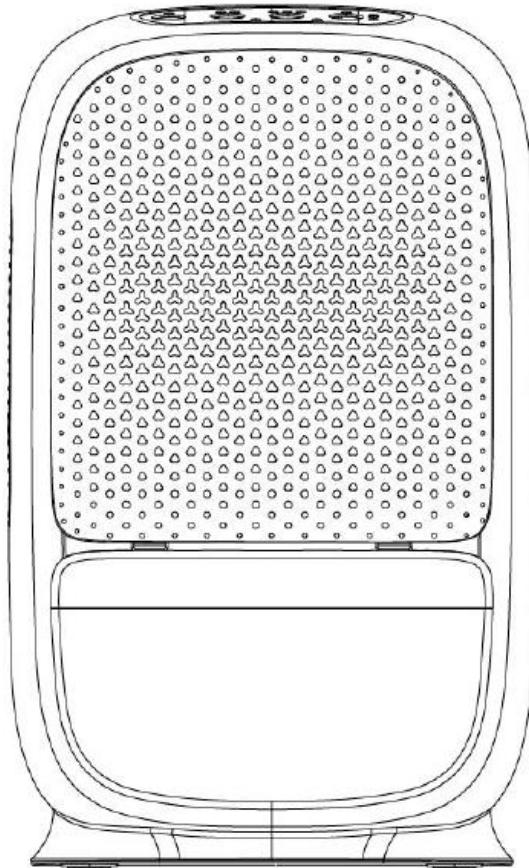


PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance. Basic safety precautions should always be followed including the following:

### READ ALL INSTRUCTIONS BEFORE USE

	<p>This appliance contains a <b>UV-C lamp</b>;</p> <p>Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains;</p> <ul style="list-style-type: none"><li>- for cleaning, please refer to <b>CARE AND CLEANING</b> section.</li><li>- unintended use of the appliance or damage to the housing may result in the escape of dangerous UV-C radiation. UV-C radiation may, even in small doses, cause harm to the eyes and skin;</li><li>- before opening doors and access panels bearing the ultraviolet radiation hazard symbol for the conducting user maintenance, it is recommended to disconnect the power;</li><li>- <b>UV-C barriers</b> bearing the <b>ultraviolet radiation</b> hazard symbol should not be removed;</li><li>- do not operate <b>UV-C lamps</b> outside of the appliance.</li></ul>
---	---

- Always operate the appliance from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Position the power supply lead properly so that they will not be walked on or pinched by items placed on or against them.
- DO NOT operate appliance underneath or near flammable or combustible materials (e.g. curtains). Keep at least 10cm clearance around sides, back, front and top.
- This appliance is not intended for use in bathrooms or laundry rooms, or any other areas where the appliance may get wet or splashed with water liquids.
- DO NOT block any ventilation openings.
- DO NOT insert or allow foreign objects to enter the vent openings as this may cause damage to the appliance and/or injury to the user.
- DO NOT use appliance if it has been dropped or any part of appliance (including cord or adaptor) has been damaged. Take appliance to your nearest authorised service centre or qualified dealer for inspection or repair.
- Use appliance only for its intended use. Appliance is intended for household use only and not for commercial or industrial use.
- Use accessories supplied with the product only. The use of accessories not intended for use with this appliance may cause injuries to the user or damage to the appliance.
- DO NOT use outdoors.
- Always place dehumidifier on a firm, flat, level surface. A waterproof mat or pad is recommended for under the dehumidifier. NEVER place it on a surface that may become damaged by exposure to water and moisture (i.e. finished floor).
- Unplug the appliance before filing or cleaning.
- Turn off and unplug the unit before moving. Move the unit slowly and carefully.
- DO NOT attempt to remove the water tank within 15 minutes after the dehumidifier is turned off and unplugged.
- This dehumidifier requires regular maintenance to operate appropriately. Refer to **CARE AND CLEANING** section.
- NEVER use detergents, petrol, glass cleaner, furniture polish, paint thinner, or other household solvents to clean any part of the dehumidifier.


- Any repairs to the product must be carried out by qualified electrical person only or the product must be disposed of. There are no user serviceable parts in this appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not install the unit on other appliances, on uneven surfaces or where it could be subject to heat sources (e.g., radiators or stoves), direct sunlight, excessive dust or mechanical vibrations.

### **VERY IMPORTANT**


- In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Ensure that the appliance does not get wet (water splashes etc.). Do not use the appliance with wet hands.
- Do not immerse the appliance in water or other liquids or use near sinks, baths or showers.
- This appliance is not intended for use in bathrooms, laundry rooms or any other areas where the appliance may get wet or splashed with water or liquids.



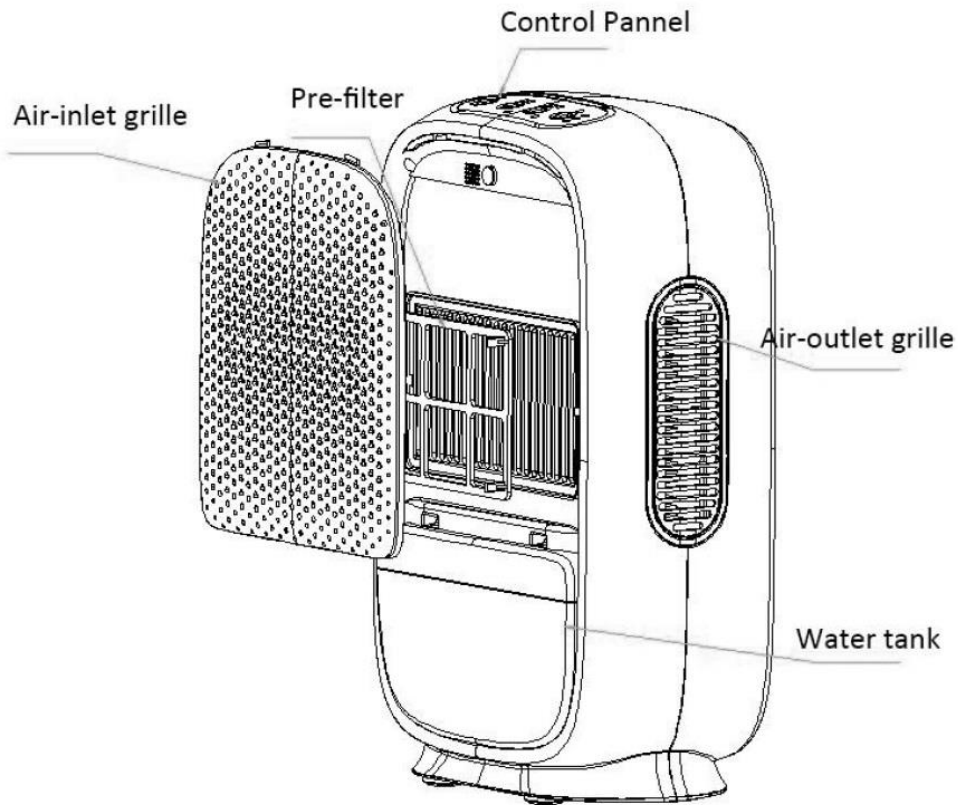

**READ AND SAVE THESE INSTRUCTIONS**

## PARTS

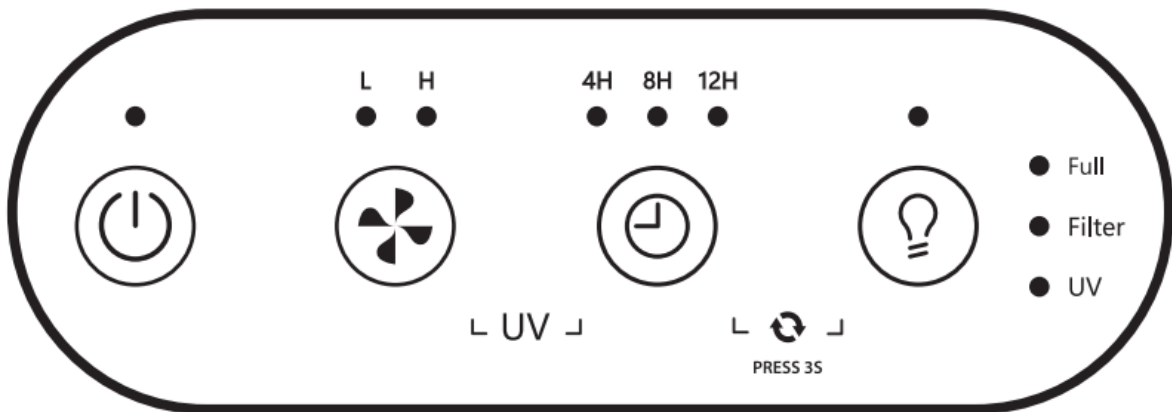

## Control Panel



	<b>Power On/Off button</b>
	<b>Speed button</b>
	<b>Timer button</b>
	<b>Light button</b>

## BEFORE FIRST USE

- Before using the Dehumidifier, please set up as follow:
- Fully unravel the power lead from unit.
- Fit the lid to the Water Tank and slide into the back of the unit.



**Note:** Unless the water tank lid is fitted and the water tank is fitted correctly to the unit, the appliance will not turn on.

## OPERATION

Important: Refer to the Section “BEFORE FIRST USE” prior to Operation.

- Plug the unit into a suitable electrical outlet and switch on.
- Press the Power On/Off button to turn ON the unit.
- Press the Speed button to select the desired dehumidifying speed, being either Low or High.

**Note:** the default speed is Low as indicated by the Low Indicator light illuminating. High speed with addition working module, enhances the machine to remove moisture more quickly.

- The unit will be auto-OFF when water tank is full. The **Full** indicator will illuminate RED, and it is time to empty the tank.
- To empty the water tank, first switch Off the unit by pressing the Power On/Off button, then unplug the unit.
- Pull out the water tank and pour out the content.
- Refit the water tank for continue operation.

### UV light function

The appliance is embedded with an UV light before the air-outlet, to help eliminating bacteria before air entering living space.

To activate this function, press both Speed and Timer button at the same time until the **UV** indicator is ON.

Press both buttons again to turn Off this function.

### Timer function

The appliance can be set to turn OFF automatically after a preset time was set. Press the timer button, the corresponding timer indicator will be ON, you can choose 4-8-12 hours. To turn OFF timer function, press button until timer indicator is OFF.

### Night light function

Press the Night light button to turn on the lamp at front, indicator lights at control panel will be off at the same time. Press the button again to turn off Night Light function.

### Filter cleaning indicator

The **Filter** indicator will illuminate RED to indicate the per-filter needs to be cleaned. To reset the indicator after the filter had been replaced, press both Timer and Night Light button together to clear the count.

## **CARE AND CLEANING**

**CAUTION:** Before cleaning, turn OFF and unplug the unit from mains power.

**IMPORTANT:** Never spray with liquids or submerge the unit in water or any other liquid.

### **Water Tank**

- Remove the Water Tank and lid, wash in clean lukewarm soapy water and rinse thoroughly.
- Allow to fully dry prior to reusing.
- Do Not place in a Dishwasher.

**IMPORTANT:** Never spray with liquids or submerge the unit in water or any other liquid.

### **Main Unit**

Do Not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

- Wipe the unit over with a damp (not wet) cloth with fresh clean lukewarm water and mild detergent.
- Wipe over again to remove any detergent residue and thoroughly dry prior to reusing.
- Do not let water or any liquid enter any of the vents.

**IMPORTANT:** Do not poke any objects into the vent holes.

### **Filter & Air-inlet Grille**

These 2 parts are used to filter fluff and dust from entering the inner workings of the unit, thus needs to be cleaned every week of use, or more often if necessary.

**Remove the parts:** Pull off the air-inlet grille by tipping either one side of the grille corner, then lift up the pre-filter by holding the top extensions.




- Use vacuum cleaner and lightly brush to clean them, or they can be washed in clean cold water.
- Allow the filter and grille to completely dry in the shade before reinstallation.
- DO NOT place in a Dishwasher.
- Refit the filters before storage.

### Refit the parts:

#### Pre-filter

Insert one side of the filter under the hook, then press to fit the other side.

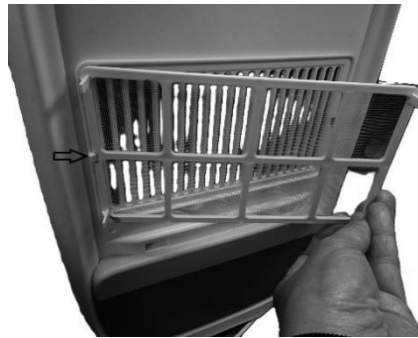

#### Air-inlet grille

Align the top 2 extrusions to the slots on main unit, then flip down the grill until it seat in place.



### UV Lamp

Please note that the UV Lamp is not replaceable. Should the UV Lamp be broken, or stops functioning, either dispose of the product as per your local council requirements, or if still in warranty, return to your local store.

## STORAGE

- Switch off and unplug the unit from mains power socket.
- Ensure all water is removed from the water tank and is perfectly dry.
- Coil the power cord loosely.
- Store in a dry well-ventilated area.

## SPECIFICATION

<b>Electric rating</b>	220-240V~ 50/60Hz 60W
<b>Dehumidifying Rate</b>	550ml/day +/-10% (@30°C; 80%RH)
<b>Tank Capacity</b>	1.2L

## 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**Contact for Kmart purchases**

**Contact for Target purchases**

Kmart Australia Ltd.  
C/- Customer Service Centre  
L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148  
AUSTRALIA  
Customer Service: 1800 124 125  
(Australia) or 0800 945 995  
(New Zealand) or via  
Customer Help at [kmart.com.au](http://kmart.com.au)

Target Australia Pty Ltd  
C/- Customer Service Centre  
L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148  
AUSTRALIA  
Customer Service: 1300 753 567 or via  
Customer Help at  
[target.com.au/help/contact-us](http://target.com.au/help/contact-us)