

# 14x13CM

## **Microwave & Fridge cleaner instructions**

### **Function 1: Microwave Cleaning**

#### **How to Use**

1. Remove the cap from the cleaner.
2. Fill the container with an equal amount of water and vinegar  
(e.g. 100 ml vinegar + 100 ml water).
3. Securely tighten the cap back onto the cleaner.
4. Place the cleaner upright in the center of the microwave.
5. Heat in the microwave for 5–7 minutes.
6. After heating, wait 2 minutes before opening the microwave door to allow steam to settle.
7. Carefully remove the cleaner (contents will be hot).
8. Wipe down the interior of the microwave with a clean cloth.

#### **Important Safety Notes**

- › Do not overfill the cleaner to prevent spillage.
- › Handle with care after heating; the cleaner and liquid will be extremely hot.
- › Do not exceed the recommended heating time.
- › Use only water and natural solutions such as vinegar or lemon juice.
- › Keep out of reach of children during and after use.

### **Function 2: Fridge Deodoriser**

#### **How to Use**

1. Add baking soda into the container.
2. Secure the cap tightly.
3. Place the cleaner in your refrigerator.
4. Allow it to naturally absorb odors.
5. Replace the baking soda regularly for best deodorising performance.

#### **Important Notes**

- › For deodorising use only baking soda.
- › Keep away from food contact.
- › Keep out of reach of children.

### **General Care & Storage**

- › Clean and dry the product thoroughly after each use.
- › Store in a cool, dry place when not in use.
- › Do not use harsh chemicals with this product.