

Double Water Rider 4.75m Instruction Manual

K: 43-732-111

1. WARNING:

CHOKING HAZARD - SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

ONLY FOR DOMESTIC AND OUTDOOR USE. USE ONLY UNDER ADULT SUPERVISION.

KEEP AWAY FROM FLAMES AND FIRES.

ADULT ASSEMBLY ONLY. ANY WRONG ASSEMBLY COULD CAUSE POSSIBLE DANGEROUS MALFUNCTIONS.

Use only on level lawns, do not install over concrete, asphalt or any other hard surface.

Place the product on a level surface at least 2m from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.

Misuse or abuse of this slide may cause serious, even fatal, injury.

Slide facing forward on your stomach only. Do not stand, kneel, or crouch.

Wet your body before playing on the slide.

To avoid accidents, check the slide carefully before playing.

2. ASSEMBLY

A. Find a solid, level lawn and clear the area of debris, insert the two included stakes into the pre-drilled holes to secure the entire water slide more firmly.

(NOTE: Remove all debris or other objects under the slide to avoid injury to the user.)

B. Inflate the surf rider using an air pump (not included).

(NOTE: Do not over inflate. Over inflation may cause damage.)

3. CLEANING AND MAINTENANCE

A. After use, use a damp cloth to gently clean all surfaces, never use solvents or other chemicals that may damage the product.

B. Store in a cool, dry place and out of children's reach.

C. Check the product for damage at the beginning of each season and at regular intervals when in use.

4. REPAIR

If a chamber is damaged use the provided repair patch.

A. Clean and dry the damaged area.

B. Apply the provided repair patch and smooth out any air bubbles.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU:1800 124 125

KMART NZ:0800 945 995

TARGET AU:1300 753 567

