



K:43-739-714 | T:72-612-729 Animated Mist Skull



IMPORTANT SAFETY INSTRUCTIONS:

The following safety precautions should always be followed to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future references or new users.

1. This mist maker is not intended for use by individuals (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the mist maker by a person responsible for their safety.
2. If the mist maker stops unexpectedly or appears to malfunction, switch off the power supply, unplug it from the mains, and stop using it immediately. Seek professional advice to rectify the fault or make repairs.
3. Unplug it from the mains socket when not in use, during cleaning, filling and changing accessories.
4. Avoid positioning the mist maker where the power cable might be accidentally trapped or damaged.
5. Keep the mist maker and cable away from sources of heat, sharp objects or anything that may cause damage.
6. Be aware that some surfaces may become hot. Do not touch hot surfaces, and supervise children or vulnerable individuals accordingly.
7. This product has not been designed for use by children.
8. Children should be supervised to ensure that they do not play with the mist maker.
9. The mist maker is only to be used with the power supply unit provided with the mist maker.
10. Never reach for any device that has fallen into water until you have unplugged it from the power supply.
11. Always ensure your hands are dry before touching the plug and mains supply connections.
12. Do not use it outdoors. This mist maker has been designed for domestic indoor use only.
13. For cleaning instructions, please refer to the "**CLEANING AND MAINTENANCE**" section.
14. For filling instructions, please refer to the "**INSTRUCTIONS**" section.
15. Water may spill during use. Place the mist maker on a protected surface and keep it a safe distance away from electrical outlets.

SAFETY HINTS:

- The mist maker is suitable for moderate climates only.
- The maximum ambient temperature during use of the mist maker must not exceed 35°C.
- The ventilation must not be impaired by covering the mist maker with items such as newspapers, tablecloths, or curtains.
- The mist maker and the mains socket must always be easily accessible.
- The mist maker requires minimal maintenance. When cleaning, use only a dry cloth or a brush.

CONTENTS




INSTRUCTIONS

1. Add clean, room temperature tap water into the skull. For best performance, fill the water up to the designated water level line (see Figure 1).




Figure 1

 2. Insert the mist maker into the PET box, then put it into the water (see the pictures below). Ensure the mist maker is fully submerged.

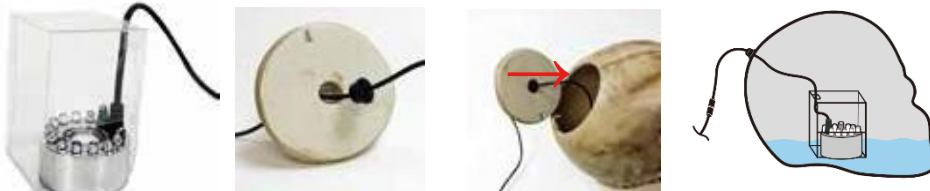


REMARKS:

 - The PET box prevents water from spilling during use. Please place the mist maker inside the PET box before operating.
- Please fold the box along the dotted line.

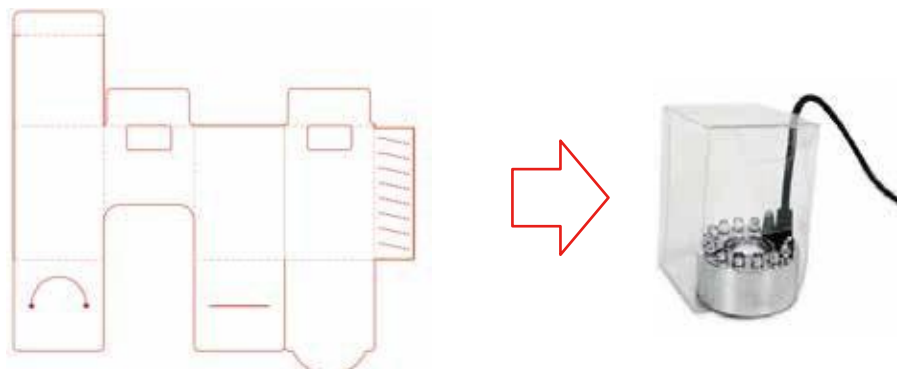

 3. Connect the power pack to the cable and plug it into a suitable wall socket. After plugging the adapter to the power, the fog generator will begin operating and producing mist. It is water mist, small and colorless, uses electro and ultrasonic technology, and features color changing LED lights, creating a unique Halloween atmosphere.

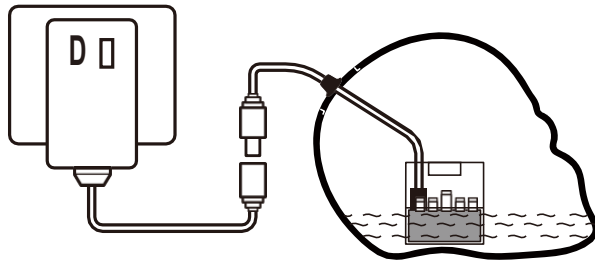

IMPORTANT: If the water level becomes too low, the mist maker will stop producing mist and flash red lights automatically. Please either add water or unplug the adapter.

1. Ensure the water is clean, room temperature tap water. Water quality deterioration may influence the lifetime. **DO NOT ADD ESSENTIAL OIL.**
2. Only operate this product with the provided power adapter (Model no.: RY12H240050VA)
3. Mist maker cannot work continuously over 8 hours.
4. Do not put your hands to cover or above the center mist while it is working.
5. Do not put the skull into microwave.
6. Do not freeze the skull.
7. The skull is not dishwasher safe.
8. Please unplug the adapter and remove the mist maker from water when the product is not in use.
9. This item is not to be used with food or drink.

CLEANING AND MAINTENANCE

To keep the mist maker working properly and extend its lifespan, clean it after every 3–5 days of continuous use.

1. Unplug the machine before cleaning.
2. Clean the mist maker with a brush and tap water. The skull can be cleaned with a soft cloth.
3. When the mist maker is not being used for a lengthy period, remove it from the skull, pour out any remaining water inside the skull, wipe it dry.
4. During use and storage, keep the product in a cool, dry environment and avoid exposure to direct sunlight.



 
Indoor use only



SMPS incorporating a short-circuit-proof safety isolating transformer (inherently or non-inherently)



Protection Class II appliance

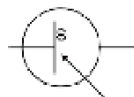

Switch mode power supply unit.



The appliance shall not be disposed of together with the normal waste. It must be recycled.

12 MONTH WARRANTY

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **Kmart.com.au** for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to our Customer Service Centre at **690 Springvale Rd, Mulgrave Vic 3170**.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.