



Heated Ice Cream Scoop
YQ-HICS001
User Manual



PLEASE READ AND SAVE THESE

INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

1. This appliance must only be supplied by certified power supply unit with an output voltage corresponding to the marking on the appliance.
2. After charging the appliance, please grab by the plug when pulling it out. Do not pull from the cable.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Cleaning and user maintenance shall not be done by children.
6. Use the product away from flammable and explosive substances.
7. To protect against a fire, electric shock or personal injury, do not immerse the main unit or the USB cable in water or other liquids. Keep the product away from sinks, basins or similar locations.
8. Do not touch the charger, USB cable or the appliance with wet hands.
9. Use the appliance only on a dry, level, stable surface only, away from any edges.
10. Do not leave the appliance unattended when in use.
11. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed of.
12. This appliance is for household use only, not for commercial use.
13. This appliance must always be used in accordance with the user instructions supplied with the product and must not be used for other purposes.
14. Misuse may cause serious injury.
15. This appliance contains batteries that are non-replaceable.
16. For charging and operation time, please refer to BEFORE FIRST USE section.
17. For cleaning, please refer to CLEANING AND STORAGE section.

CAUTION!

18. The product has a built-in lithium-ion batteries. Pay attention to the following:
 - a) Only use and store the product in an environment where the temperature is between -5°C and +35°C.
 - b) If not used for a long time, recharge every three months to prevent battery damage.
 - c) Charging time may be longer when the room temperature is below 10°C.

d) Charge the battery when the battery power goes low, avoid allowing the battery to go completely flat.

19. DO NOT squeeze, puncture, or short circuit the product or put it into fire.
20. Do not expose the product to high temperatures (above +35°C), strong magnetic fields, near flammable and explosive gasses (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation or fire.
21. Battery disposal:



At the end of the appliance's life, it must be disposed of correctly.

This appliance contains a battery that is non-replaceable, and as the battery is non-replaceable, the complete appliance must be recycled as this is where the battery is located.


Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on collection, reuse, and recycling programmes.

SAVE THESE INSTRUCTIONS

FOR FUTURE REFERENCE

KNOW YOUR HEATED ICE CREAM SCOOP

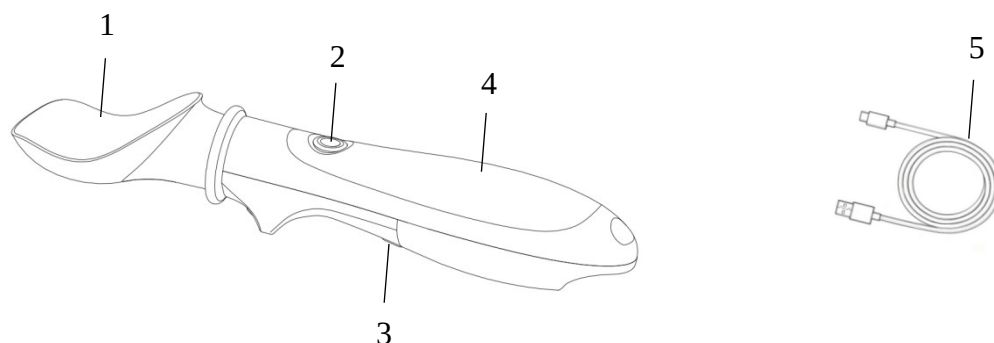

1. Scoop
2. On/Off/Temperature button
3. Charging port with cover
4. Handle
5. USB cable

IMPORTANT!

Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, return the product to the place of purchase for replacement.

When using the appliance for the first time, carefully remove all internal and external packaging and dispose them responsibly.

BEFORE FIRST USE

- Fully charge the appliance before first use.
- The supplied USB charging cable should be inserted into a standard USB power source rated at 5Vd.c. 1A specification.

WARNING! Use only the supplied USB charging cable to charge the appliance.

- Green indicator flashes when charging and illuminate when fully charged.

Note: The appliance can't be used when charging. Always cover the charging port after charging.

- The charging time is approx. 3.5 hours.
- When fully charged, the appliance can work up to approx. 1 hour.

USING YOUR HEATED ICE CREAM SCOOP

1. Clean the appliance as stated in CLEANING AND STORAGE section.
2. Press and hold the On/Off/Temperature button to turn ON the appliance. The green indicator light will illuminate. The appliance is at low temperature setting (approx. 45°C) and starts to

heat up. The scoop should reach the set temperature within 2 minutes.

3. To deal with hard frozen ice cream, press the On/Off/Temperature button again to select a higher temperature setting (approx. 55°C). The red indicator light will illuminate.

To switch OFF the appliance, press and hold the On/Off/Temperature button.

Notes:

- If the battery is low, the indicator flashes green at low temperature setting, and flashes red and yellow alternatively at high temperature setting.
- The appliance will turn OFF automatically after 10 minutes.

CLEANING AND STORAGE

Clean the appliance after every use.

1. Turn off the appliance and make sure the USB cable is disconnected.
2. Make sure the charging port is securely covered and the appliance is completely cooled down.
3. Rinse the scoop under tap water. Wipe dry with soft cloth.

WARNING! Do not use harsh abrasives, sharp objects, caustic cleaners or oven cleaners when cleaning this appliance.

4. Make sure the appliance is clean and dry thoroughly before storing or using it again.
5. This product contains a Li-ion battery. It should be stored in a clean, dry, ventilated room with an ambient temperature range of -5°C to + 35°C and a relative humidity of 25% to 75%.

TECHNICAL SPECIFICATION

Input: 5Vd.c. 1A

Battery: Li-ion 3.7V 2000mAh

IPX4

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product.

Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us