

# anko

**Blender  
DZ-1703A  
User Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

# IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



## READ ALL INSTRUCTIONS BEFORE USE.



**WARNING-- To reduce the risk of fire, electric shock, or serious personal injury:**

- Always ensure the product is unplugged from the electrical outlet before relocating, assembling, disassembling, or cleaning it. Always unplug the product from the electrical outlet when it is not in use.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the products by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- Keep the product out of reach of children and pets. This product is not intended for use by children. Close supervision is necessary when using this product near children.
- Do not leave the product unattended while it is in use, especially when children are present.
- Do not let cord hang over edge of table or counter or touch hot surface including stove.
- Do not immerse power cord, plug, or product in water or other liquids. If the product falls into water, immediately unplug it from the electrical outlet. **Do not touch or reach into the water.**
- Keep the Power Cord and product away from heated surfaces.
- The use of attachments, including canning jars, not recommended or sold by the product manufacturer, may cause a risk of injury to persons or property damage.
- **Handle the blades with care as they are extremely sharp. Use caution when attaching or detaching the Blades.**
- Care is needed when handling cutting blades, especially when removing the blade and emptying the jug, and during cleaning.
- Do not touch moving parts (e.g., the blades) while the product is in use.  
**Warning: Do not touch the cutting blades or insert any object, such as knives, forks, spoon etc. into the jug while the blender is in operation.**
- Keep hands and utensils away from the moving blades while operating the product. A scraper may be used but only when the product is not operating.
- Do not plug/unplug the product into/from the electrical power outlet with wet hands.
- To disconnect the product from an electrical outlet, pull directly from the plug; do not pull on the power cord.
- Always operate the product with the cover in place.
- **DO NOT process boiling liquids or hot ingredients. Allow hot ingredients to cool before placing them in the glass jar.**
- Never place the blade assembly on the base unless attached to the Jar.
- Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break.

- Never operate the blender when the jug is empty and DO NOT remove the jug lid before the blades come to a complete stop.
- Switch OFF the product and disconnect from mains power supply before changing accessories or approaching parts that move in use.
- If the supply cord is damaged, it must be replaced by qualified electrical person to avoid a hazard or the product must be disposed of.
- Misuse may cause injury.
- **CAUTION:** To avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- This product is intended to be used in household only, not for commercial use.  
**WARNING:** Do not use hot liquids in the blender. Hot liquids can cause pressure buildup and may spray from the blender, resulting in burns.  
For cleaning, please refer to section “Care and Maintenance”.

**Warning! The maximum operating time is 1 minute. Allow it to rest for at least 2 minutes before using it again. After 5 cycles of operation, allow the blender (electric motor) to cool down to room temperature. Allow it to cool down for approx. 30 minutes before using it again.**

**Note: The appliance incorporated with a non-self resetting thermal motor protection circuit to protect the motor from overheating. If the motor shuts OFF while in use, unplug the unit from main power outlet. Remove the blending jug from motor unit and free the blade of any obstructions. Allow the unit to cool down for 10 minutes. After then, plug the unit back into mains power for normal operation.**



**CAUTION-- To reduce the risk of personal injury or product/property damage:**

- This product is intended for indoor, non-commercial, non-industrial use in processing foods for human consumption. Do not use the product outdoors or for any other purpose.
- Always operate the product on a flat, stable surface.
- Do not attempt to open any part of the Motor Housing.
- Do not let cord hang over edge of table or counter where it may be tripped over or pulled.

## **SPECIAL INSTRUCTIONS:**


A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in their use:

- The marked electrical rating must be at least as great as that of the product.
- If the product is of the grounding type, the extension cord must be a grounding-type 3-wire cord;
- Arrange the longer cord so that it will not drape over a countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## Parts

1. Measuring cup (30ml)
2. Lid
3. Glass Jug
4. Blending Blade Assembly
5. Motor Housing
6. Dial Switch
7. Power Plug & Cord
8. Grinding cup
9. Grinding Blade Assembly

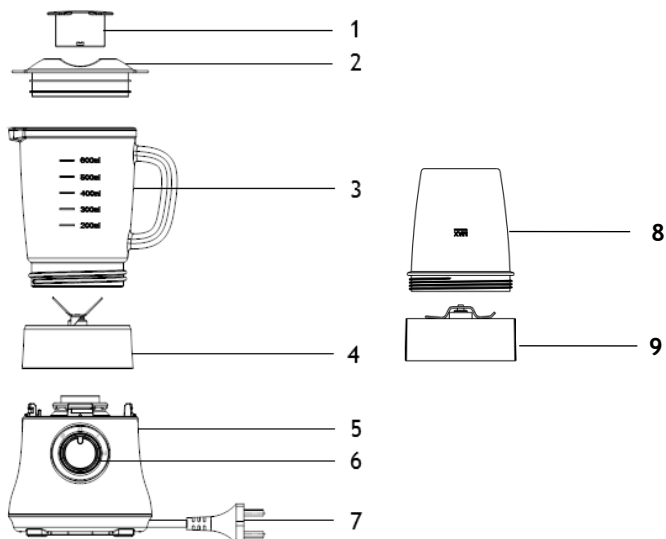

**NOTE:** *Parts 3-4 are initially assembled.*

## Electrical Specifications

Voltage	Frequency	Power	Function	Operating Time	Rest period	Max. Capacity
220-240V	50-60Hz	300 W	Pulse/blend	1 min.	Min. 2 min	600 ml
			Ice crush	3 sec.	Min. 3 sec.	100g
			Grind	30 sec.	Min. 2 min	90g

## To Assemble

**WARNING!** Handle the blades with care as they are extremely sharp. Use caution when attaching or detaching the Blades.

1. Before using the product for the first time, wash all the parts except the motor housing in warm, soapy water, and then rinse and dry thoroughly.

**CAUTION:** Never immerse the motor housing in water or other liquids. Never use abrasive cleaners on any part of the product. Do not place any parts into a dishwasher or boiling hot water.

2. Place the blending blade assembly (4) onto the bottom of the jug (3) and then screw it on tightly. Place the grinding blade assembly (9) onto the bottom of the grinding cup (8) and then screw it on tightly.

**IMPORTANT!** Do not forget to check the gasket in the blade assembly.

3. Place the motor housing on a flat, stable surface, and then place the assembled glass jug or the assembled grinding cup onto the top of the motor housing. Turn it clockwise until it locks in place.
4. Place the lid (2) with measuring cup (1) onto the glass jug.

## **To Use the blender/grinder**

**WARNING! DO NOT process boiling liquids or hot ingredients. Allow hot ingredients to cool down before placing them in the glass jar.**

**IMPORTANT! DO NOT fill the glass jar above the maximum level as indicated on the jar. Some mixtures increase in volume during blending and create pressure in the jar.**

**CAUTION:** Do not operate the product until it is properly assembled.

1. Ensure the product is unplugged from the electrical outlet.
2. Pour liquid ingredients into the glass jug. Wash all solid ingredients and cut them into pieces small enough to fit into the measuring cup. After filling, place the lid with measuring cup securely onto the glass jar. If grinding, simply put the coffee beans, nuts or dried fruit into the cup and assemble the grinding blade assembly.

**CAUTION:** The glass jug has two and half cups (19.2 oz /0.6 liter) capacity. Put maximum 90g of coffee beans into the grinding cup. Do not over-fill it.

**CAUTION:** Do not use the product for mashing or grinding heavy foods (e.g., potatoes or meats) or to stir thick mixtures (e.g., dough).

3. Plug the product into a standard 220-240volt AC electrical outlet.
4. Turn the Dial to “1” or “2” setting or hold the dial switch in “P” position.

**CAUTION: Never operate the product empty.**

**Warning! The maximum operating time is 1 minute when blending and 30sec when grinding. Allow it to rest for at least 2 minutes before using it again. After 5 cycles of operation, cool down the motor to room temperature. Allow to cool down for approx. 30 minutes before using it again.**

**NOTE:** If the blades are not operating smoothly, stop the product and add some liquid, or reduce the contents in the glass jar.

5. To blend food for a short time, pulse operation can be selected by turning the dial switch to “P” setting. Hold the dial switch at “P” setting for this function. To stop blending, release the dial switch.
6. To use the ice crush function, hold the dial switch at “P” setting. Release the dial switch to stop crushing.

**IMPORTANT! Do not use large ice cubes. Use ice cubes only approximately 2cm<sup>3</sup> in size.**

7. Turn off the product by turning the dial to “0” position and then unplug the product from the mains power outlet.

**WARNING: Always unplug the product when it is not in use or when left unattended.**

8. When the Blades have stopped turning, the glass jar/grinding cup can be removed from the motor housing.

## **Care and Maintenance**

**WARNING:** Always ensure the product is unplugged from the electrical outlet before relocating, assembling, disassembling, or cleaning it.

**CAUTION:** Before disassembling the product for cleaning, ensure the blades have completely stopped and use caution when attaching or detaching them, as they are extremely sharp.

- Always clean the product immediately after each use. Wash all parts except the Motor Housing in warm, soapy water and then rinse and dry thoroughly. Never immerse the motor housing in water or other liquids. Never use abrasive cleaners on any part of the product. Do not place any parts into a dishwasher or boiling hot water.
- To disassemble the glass jug for thorough cleaning, turn the blade base counterclockwise and remove it, take out the gasket from the blade assembly carefully. Use a small brush (not included) to remove particles of food lodged underneath the blades. To reassemble, replace the gasket in the blade assembly put on the glass jug and then turn the blade base clockwise until tighten onto the glass jug (refer to the Parts illustration).

## **Storage**

1. Unplug and clean unit.
2. Ensure all parts are thoroughly dried.
3. Store in original box or in a clean, dry place.
4. Never store the blender while it is hot or while connected to mains power.
5. Never wrap the cord tightly around the product. Never place any stress on the cord, especially where the cord enters the unit, as this could cause the cord to fray and break.

## **12 Month Warranty**

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>