

**SET OF 3 GREEN PRELIT POTTED
CHRISTMAS TREES – P TREE
KEYCODE K: 43750702 T: 72785966**



3FT



4FT



5FT

Contents:

A. Tree Top

B. Metal Pot Included

A1. Tree Top


B1. Tree Body

C. Metal Pot Included

A2. Tree Top

B2. Tree Body

C. Metal Pot Included

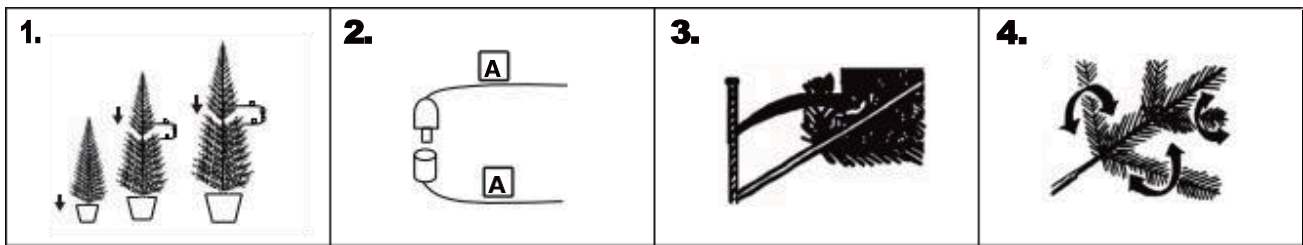

These instructions are for your safety. Please read through them thoroughly before use and retain for future reference.

How to assemble:


1. Before starting, remove the tree from the package and save the box for future storage.
2. Choose an area where the ground is solid enough to support the trees in a vertical position.
3. Place the pot on a flat surface.
4. For 3ft tree, insert the tree into the corresponding pot (labelled inside pot). For 4ft and 5ft tree, insert the tree bottom into the corresponding pots (labelled inside pot), then insert the tree top into the bottom section, make sure it is tightly secured.
5. To connect the light chain, locate the power cord in each section A male plug connecting to A female plug, B male plug connecting to B female plug (see diagram shown).
6. To shape the tree, all articulated branches must fall horizontally. Branches that remain upright should be gently lowered by hand. After shaping the tree, take a step back and take a look. Place the branch space to be filled. Sweep all ends.

Conditions of use:

1. This product is for indoor use only.
2. Keep product away from fire and other heat sources.

Packaging up and storage Tips:

1. Remove all ornament.
2. Press branches against stem before placing in carton.
3. Pack carton and store in a dry and damp free area.
4. DO NOT place product in direct sunlight or in an area where temperatures exceed 40 degrees.

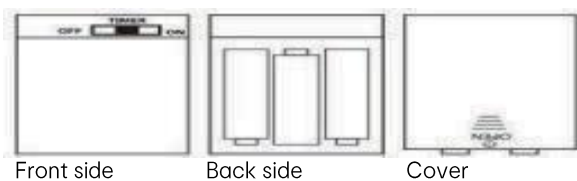

- EACH TREE REQUIRES 3 x 1.5AA BATTERIES (NOT INCLUDED).
- BATTERY INSTALLATION BY AN ADULT IS REQUIRED.
- OPERATING AND CARE = INSTRUCTIONS.
- NEVER MIX DIFFERENT TYPES OR OLD AND NEW BATTERIES.
- DO NOT SHORT CIRCUIT SUPPLY TERMINALS OR DISPOSE OF BATTERIES IN FIRE REMOVE BATTERIES DURING LONG PERIOD OF NON-USE.
- FOR DECORATION ONLY. THIS IS NOT A TOY. KEEP AWAY FROM CHILDREN AND PETS.

Timer will start once the switch is set to the "timer" position. Lights will stay on for 6 hours and then turn off for 18 hours.

Cycle will repeat automatically unless switched to "off" position or batteries are exhausted.