


60W Party Box Speaker

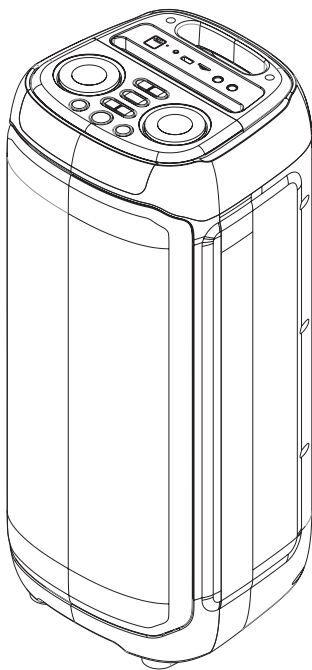

Operating instructions




Includes:

- › Bluetooth® speaker
- › two wired microphones
- › charging cable
- › AUX cable
- › user manual

K: 43-753-239 | T: 72-794-777

Model: CRAUD04

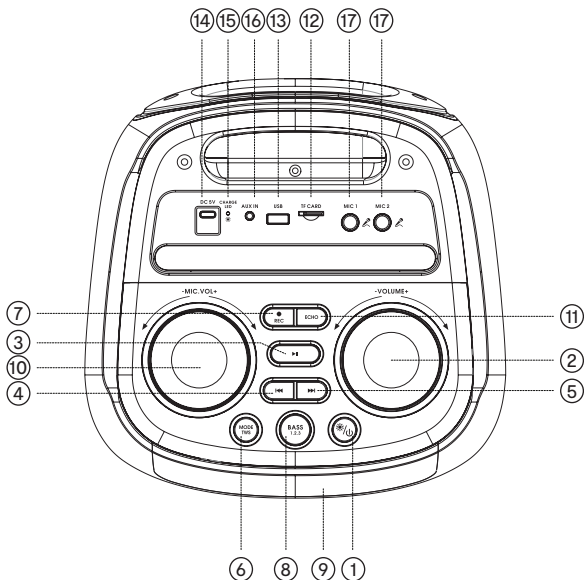

- ① Press and hold to turn ON/OFF the speaker; press to turn LED light ON/Change/OFF
- ② Master Volume Knob: In the USB/TF/AUX/Bluetooth mode, turn knob to adjust volume.
- ③ Press to Play/Pause, in the USB/TF card reading status, press and hold to select one of four playback sequencing modes (All - play all tracks in sequence; RAND - play in random; ONE - repeat one track; FOL - repeat all tracks in a folder).
- ④ Press to select the previous song.
- ⑤ Press to go to the next song.
- ⑥ MODE/TWS: Press to toggle between USB/TF/AUX/Bluetooth receiving modes. Press and hold to toggle between recording folder and MP3 folder.
- ⑦ Recording/DEL: Press to enable recording. Press and hold to delete a recorded file.
- ⑧ BASS 1.2.3: Press to switch between indoor (IN) and bass boost and outdoor (OUT) modes.

- ⑨ LED Display Screen
- ⑩ Microphone volume: turn knob to adjust volume.
- ⑪ ECHO: Press to adjust the microphone echo reverberation, from E-00 (turn off) to E-08.
- ⑫ TF Port.
- ⑬ USB Port.
- ⑭ DC 5V Charging port.
- ⑮ Charging indicator light.
- ⑯ AUX-IN.
- ⑰ Microphone input jack.

Bluetooth Pairing

1. Speaker enters Bluetooth pairing mode by default when switched on, ⑨ display screen light flashes "bLUE" indicating it is ready to pair with a Bluetooth device.
2. In the Bluetooth menu on the media device, search for anko43753239 and connect.
3. You will hear a prompt sound once the speaker is connected successfully and "bLUE" will appear on ⑨ display screen.
4. You can now play music through the speaker.

TF Card Mode

Insert TF card (up to 32GB) into the ⑫ TF card slot. It will play an audio track automatically and show  on display screen (TF card not included).

USB Mode

Plug USB drive (up to 64GB) into the ⑬ USB port. It will play an audio track automatically and show  on display screen (USB driver not included).

AUX-IN Function

Use a 3.5mm audio cable to connect your device through the ⑯ AUX-IN port, display screen will show AUX. Choose the music from your media device and play.

TWS Mode

1. Turn two speakers of the same model ON then select BT mode. Pair one of them with a Bluetooth device.
2. Press and hold the TWS button on either speaker to enter into TWS pairing. You will hear a voice prompt when TWS pairing is successful.
3. Press and hold the ⑥ TWS button on either machine to cancel TWS pairing.

Recording via External Microphone

1. Insert USB drive or TF card (not included) to respective port and plug in wired microphone to ⑦ Microphone Jack.
2. Press ⑦ Rec button, music or soundtrack from your USB drive or TF card will stop then REC flashes on display screen, you can start recording via the microphone.
3. Press ⑦ Rec button to end the last recording and enter into recording play back automatically, REC on display screen keeps steady.
4. Press and hold ⑦ Rec button to delete a recording file.
5. Press Mode button to exit from recording mode.

Note:

1. During recording, turn the "ECHO" off.
2. Recorded soundtrack will be saved to USB drive or TF card as MP3 file in a folder named "RECORD".
3. This product starts recording from the time as displayed on the LED screen.
4. It is noticeable that the microphone should be located a proper distance away from the speaker to prevent any howl-round or noise.

Charging

This speaker is powered by a rechargeable battery. Please use the USB-C cable provided for charging. Plug the USB-C cable into the charging port of the unit and other USB-A end into a wall charger or other 5V/3A charging device. The ⑧ charging indicator light changes to red when charging and will turn off when fully charged.

LED Light

Press  to turn ON/OFF, or change LED light, there are 6 light effects.

Specifications

Model no.:	CRAUD04
Input voltage:	5V/3A
Speaker power output:	60W
Bluetooth version:	6.0
Working distance:	10m in open area
Battery:	7.4V/4000mAh
Charging time:	Approx. 4 Hours
Charging by USB-C cable (cable included)	

Safety instructions

Please read manual before use and retain for future use.

1. Do not disassemble this product.
2. The product must not be exposed to dripping or splashing and objects filled with liquids, it may result in permanent damage to the product or power source.
3. Keep the product away from direct sunlight, fire, flames or other heat sources and high voltage equipment.
4. Working temperature range: - 10°C to 40°C.
5. To prolong battery lifespan, fully charge the unit at least once every 3 months. Battery life will vary due to usage patterns and environmental conditions.
6. Disposal of this product, and the battery should be in accordance with local government requirements.
7. Battery cannot be subjected to extreme high or low temperatures during use, storage or transportation. Extreme temperatures can reduce the charging capacity and life of the device.
8. The battery is non-replaceable. Replacement of a battery with an incorrect type can result in an explosion or leakage of flammable liquid or gas.
9. Dispose the product or battery into fire or a hot oven, or mechanically crushing or cutting of a battery can result in an explosion. Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or leakage of flammable liquid or gas.
10. Battery subjected to extremely low air pressure at high altitude may result in an explosion or leakage of flammable liquid or gas.
11. The product must not be connected to power supply source exceeding PS1 (5V DC 3A).
12. The included charging cable is for use with this product only, not designed for other electrical devices.

12 Month Warranty

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567

