




30W Home Speaker Disc



Operating instructions

Includes:

- › Bluetooth speaker
- › charging cable
- › AUX cable
- › user manual

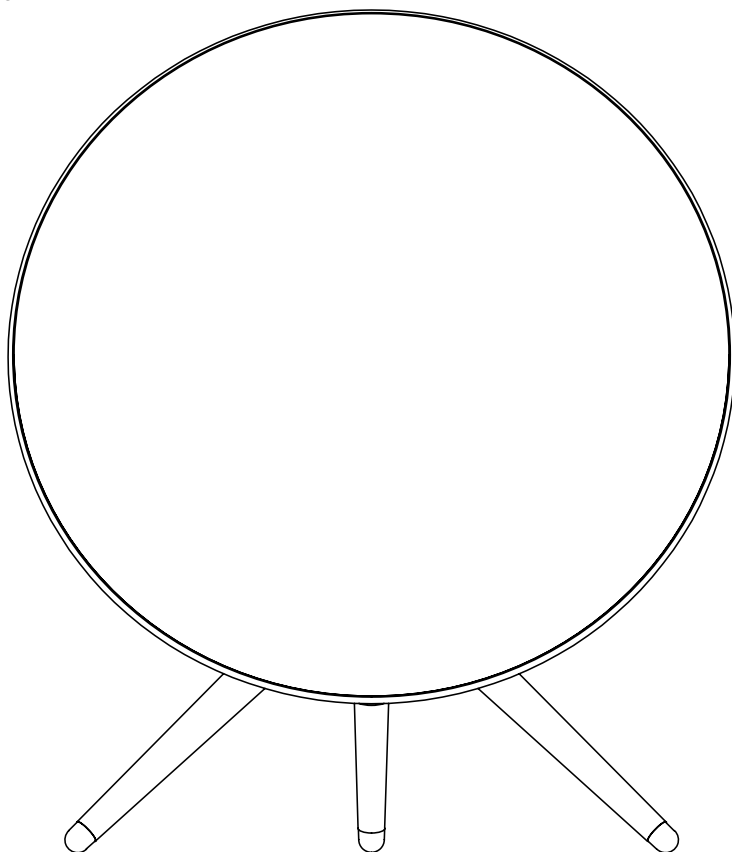


K: 43-753-703 | T: 72-797-396

Model: CRP18

Safety instructions

1. Do not disassemble this product.
2. Do not expose this product to dripping or splashing water and objects filled with liquids. It may result in permanent damage to this product or power source.
3. Keep the product away from direct sunlight, fire, flames or other heat sources and high voltage equipment.
4. Working temperature range: -10°C to 40°C .
5. To prolong battery lifespan, fully charge it at least once every 3 months. Battery life will vary due to usage patterns and environmental conditions.
6. Disposal of this product, and the battery should be in accordance with local government requirements.
7. Battery cannot be subjected to extreme high or low temperatures during use, storage or transportation. Extreme temperatures can reduce the charging capacity and life of the device.
8. The battery is non-replaceable. Replacement of a battery with an incorrect type can result in an explosion or leakage of flammable liquid or gas.
9. Dispose the product or battery into fire or a hot oven, or mechanically crushing or cutting of a battery can result in an explosion. Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or leakage of flammable liquid or gas.
10. A battery subjected to extremely low air pressure at high altitude may result in an explosion or leakage of flammable liquid or gas.
11. The product must not be connected to power supply source exceeding PS1 (5V DC 3A).
12. The included charging cable is for use with this product only, not designed for other electrical devices. Charging the device by using the USB charging cable supplied, other than the one could cause electrical hazards such as overheating, short-circuiting, or even damage to your device.

Overview

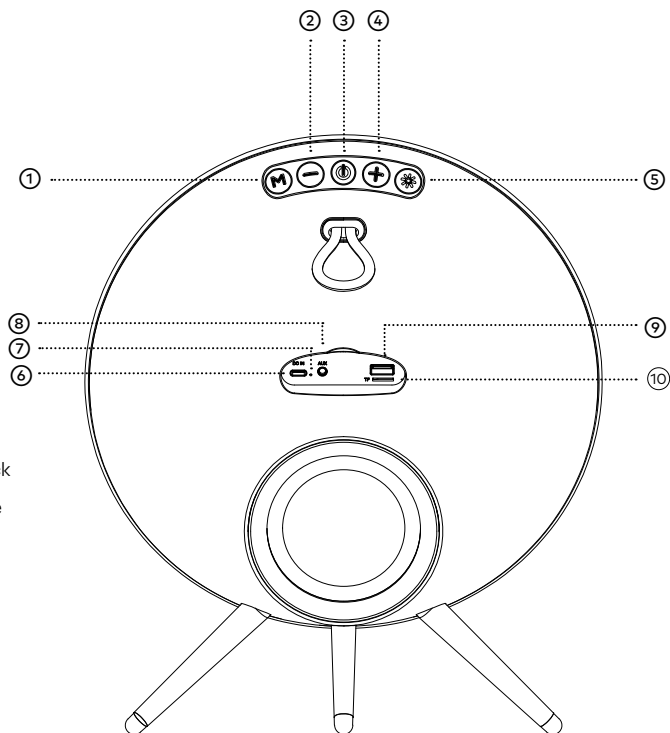

- ① Mode change
- ② Volume down/Previous track
- ③ Power ON/OFF, Play/Pause
- ④ Volume up/Next track
- ⑤ Light mode
- ⑥ USB-C Charging port
- ⑦ Indicator light
- ⑧ AUX-IN Port
- ⑨ USB Port
- ⑩ TF Card port

Function operation

Power ON/OFF: Press and hold ③

Play: Press ③

Pause: Press ③

Volume Up: Press ④

Volume Down: Press ②

Next Song: Press and hold ④

Previous Song: Press and hold ②

Mode Change: Press button ① to switch between Bluetooth® / USB / TF card / AUX mode

Bluetooth pairing

Press and hold the Power button ③ until you hear a prompt sound indicating it is ready to pair with a Bluetooth device.

In the Bluetooth menu on the media device, search for **anko43753703** and connect.

Once the speaker is successfully connected, there will be a prompt sound and you can now play music through the speaker.

TF Card mode

Insert TF card (up to 32GB) into the ⑩ TF card slot. It will play an audio track automatically. (TF Card NOT Included)

USB Mode

Plug in USB drive (up to 64GB) into the ⑨ USB port. It will play an audio track automatically.

AUX-IN Function

Use a 3.5mm audio cable to connect your device through the ⑧ AUX-IN port. Choose the music from your media device and play.

Charging

This speaker is powered by a rechargeable battery. Please use the USB-C cable provided for charging. Plug the USB-C cable end into the ⑥ charging port of the unit and other USB-A end into a wall charger or other 5V/3A charging device. The ⑦ indicator light changes to red when charging and will turn off when fully charged.

Light mode

Press and hold button ⑤ to turn on/off the light.

Press button ⑤ to switch to lighting mode effects.

Specifications

Model no.: CRP18

Input voltage: 5V==3A

Speaker power output: 30W

Bluetooth version: 6.0

Working distance: 10m in open area

Battery: 7.4V/4000mAh

Charging time: Approx. 4 Hours

USB-C Charging (cable included)

12 Month Warranty

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567



R-NZ v1