

正面排一排



1. Safety instructions

- 1) Recommended age: 3 years and above.
- 2) This device is not waterproof and is only suitable for indoor use.
- 3) Do not open the product casing. Prevent small screws and parts from falling into children's nasal and throat areas.
- 4) Do not mechanically strike, roll or throw the product, and do not place heavy objects on the product.
- 5) Keep the appliance away from all hot surfaces and naked flames.
- 6) Do not immerse the electrical appliance in water or other liquids.

Battery and power warnings

- 1) Do not expose the battery to extremely high or low temperatures during use, storage, or transportation, nor to low air pressure at high altitudes.
- 2) Do not replace the battery with an incorrect type, as this may compromise the device's safety protection.
- 3) Never dispose of the battery in fire or a hot oven, or mechanically crush or cut the battery, as this may cause an explosion.
- 4) Do not leave the battery in extremely high-temperature environments, which may cause explosion or leakage of flammable liquid or gas.
- 5) A battery exposed to extremely low air pressure may cause explosion or leakage of flammable liquid or gas.
- 6) Do not cover this product when it is plugged into a power source and keep it in a well-ventilated environment.
- 7) This product is only compatible with a 5V  1A power adapter for power supply when powering this device.

2. Package contents

- Rainbow keyboard x1
- USB-A to USB-C charging cable x1
- Piano key sticker x1
- Instruction manual x1
- Guided practice card x20

3. Product specifications

Wireless Connection: Anko43754083
37 piano acrylic keys
Speaker: 1x3W, 4Ω
Product size: 48 x 17 x 5.5cm
Product weight: 957g
Power supply: 4 x 1.5V AA batteries (not included) or 5V  1A USB-C interface
Built-in 3.5mm Audio Jack

4. Product overview

KEY FUNCTION



Note:

- 1) Lighting Modes: Bright / Ripple
 - 2) Auto Off: After 3min inactivity (FREE TO PLAY Mode Only)
 - 3) Volume Adjustment: Rotate the knob to adjust sound volume from low to high.
- Note that the minimum volume level is not mute mode.

Note that the minimum volume level is not mute mode.

5. Major mode for practice or playing

Six different modes can be selected by rotating the knob on the piano.

01) FREE TO PLAY

- > In Free Play Mode, jam freely and press the Light key to changelighting effects.
- > You can record your keyboard play and play it back anytime easily.

- ① Press  once to start the recording function.
The recording function can only store up to 125 musical notes; recording will stop automatically once the note limit is reached.
- ② Press  to listen to your recording.

02) APPRECIATE THE SONG

In "Music Play" mode, choose from 37 classic songs via the Previous/Next buttons or by pressing the keys, which map to individual songs (1-37 from left to right).

- | | |
|------------------------------|-----------------------------------|
| 1. For Elise | 20. Swan Lake |
| 2. Red River Valley | 21. Walking in the Rain |
| 3. Träumerei | 22. Waltz |
| 4. Beautiful Dreamer | 23. Serenade in G Major |
| 5. Schubert's Lullaby | 24. Jingle Bells |
| 6. Home, Sweet Home | 25. Pop Goes the Weasel |
| 7. Whisper of Love | 26. Love's Dreams |
| 8. Moonlight | 27. Spring Song |
| 9. Nocturne | 28. Jasmine Flower |
| 10. Rock a bye | 29. Silent Night |
| 11. Greensleeves | 30. Moments Musicaux |
| 12. Raindrop | 31. Auld Lang Syne |
| 13. Farmer | 32. Fantaisie-Improptu |
| 14. Sonata in C Major | 33. The Girl with the Flaxen Hair |
| 15. Canon | 34. Hungarian Rhapsody No. 2 |
| 16. Minuet | 35. Minute Waltz |
| 17. The Cuckoo | 36. Military Polonaise |
| 18. Ode to Joy | 37. Réverie |
| 19. The More We Get Together | |

反面排一排

03) PRACTICE PLAYING ALONG

The 40 songs are sorted from easiest to hardest. Insert a song card to hear a demo, then press any key to start the light-guided practice mode. Press Play after your session to repeat the lesson.



04) MEMORY CHALLENGE

There are 10 songs. The system demonstrates a melody, then you replay it from memory by pressing the lit keys. Correct plays extend the sequence; mistakes reset it. Use "Prev/Next" to switch songs.

1. Waltz
2. To Elise
3. Canon in D Major
4. Greensleeves
5. Schubert's Lullaby
6. The Happy Farmer
7. Minuet
8. Swan Lake
9. Old Folks at Home
10. Passacaglia

05) IMPROVISATIONAL ACCOMPANIMENT

There are 37 auto-accompaniment styles. Press any key to preview a style, and hold for 2 seconds to confirm. After confirmed, you can switch styles only with the Previous/Next buttons. And the piano enters free play mode for you to create your own music.

06) INSTRUMENT SWITCHING

The 22 white keys represent 22 instruments. Tap to preview a sound, press and hold for 2 seconds to select.
Use the "Prev/Next" buttons to browse.
Switch to another mode via the rotary knob to exit the current function.

1. Acoustic Grand Piano
2. Acoustic Guitar(nylon)
3. Violin
4. Cello
5. Flute
6. Tenor Sax
7. Accordion
8. Harmonica
9. Electric Grand Piano
10. Drum Kit Sound Pack
11. Music Box
12. Vibraphone
13. Overdriven Guitar
14. Fretless Bass
15. Orchestral Harp
16. Trumpet
17. Banjo
18. Lead 1(square)
19. String Ensemble1
- 20.Tuba
21. Pizzicato Strings
- 22.Piccolo

7. How to use wireless connection

- 1) Briefly press the Bluetooth button on the piano; a "Bluetooth on" tone will be emitted.
- 2) Turn on Bluetooth on your mobile phone.
- 3) Search for and select "Anko43754083" in the list of found devices.
- 4) After successful pairing, a "Bluetooth connected" tone will be emitted.
- 5) Briefly press the Bluetooth button on the piano again; a "Bluetooth off" tone will be emitted.
- 6) When switched on again, it will automatically search for and attempt to connect with the last paired device, "Anko43754083".

12 Month Warranty:

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567