



Harry Potter




ALARM CLOCK



BATTERY INSTALLATION

- 1 - Open the battery compartment.
- 2 - Insert batteries into correct + and - polarities.
- 3 - Close the cover.

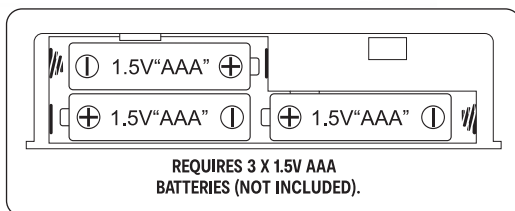

BUTTON FUNCTION DESCRIPTION

- ① Alarm Off switch
- ② Alarm On switch
- ③ Alarm activates Monday to Saturday
- ④ Alarm activates Monday to Friday
- ⑤ Lock switch
- ⑥ Time setting
- ⑦ Date setting
- ⑧ Alarm setting
- ⑨ Light sensor On/Off switch
- ⑩ Min/Date/°F/°C button
- ⑪ Hour/Month button
- ⑫ Years/ "12/24" hour button
- ⑬ Light/Snooze button



HOW TO USE

Time setting:

- Slide the switch to "TIME-SET" (6) position,
- Press "HOUR", "MIN" to set the time,
- Once time is set, please slide the switch to "LOCK" (5) position.

Alarm setting:

- Slide the switch to "ALARM-SET" (8) position,
- Press "HOUR", "MIN" to set the alarm,
- Once alarm is set, please slide the switch to "LOCK" (5) position.

Light and Snooze function:

When the alarm sound is ringing, press the "LIGHT/SNOOZE" button (13), the alarm sound will stop and ring again every 5 minutes until you slide the alarm switch to "AL-OFF" (1) position.

Date setting:

- Slide the switch to "DATE-SET" (7) position,
- Press "YEAR", "MONTH" and "DATE" to set the date,
- Once date is set, please slide the switch to "LOCK" (5) position.

12/24 hour display setting:

Switch between "12/24" hour format by pressing the "12/24" button (12).

Once the display is set in 12 hour mode, AM and PM will show up on the display.

Light sensor function:

Slide the "SENSOR" switch (9) to the ON position, the LCD display will automatically adjust screen brightness according to the light in the surrounding area.

To turn this function off, please slide the "SENSOR" switch (9) to the OFF position.

 **WARNING: CHOKING HAZARD**
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

CAUTION: THE BATTERIES IN PRODUCT ARE 3PCS 1.5VDC AAA SIZE ALKALINE BATTERIES. PLEASE USE CERTIFIED ALKALINE BATTERIES (E.G. BRAND OF DURACELL, ENERGIZER, GP ETC.) IN THIS PRODUCT. REPLACEMENT OF A BATTERY WITH AN INCORRECT TYPE THAT CAN RESULT IN AN EXPLOSION OR THE LEAKAGE OF FLAMMABLE LIQUID OR GAS. BATTERY CANNOT BE SUBJECTED TO HIGH OR LOW EXTREME TEMPERATURES, LOW AIR PRESSURE AT HIGH ALTITUDE DURING USE, STORAGE OR TRANSPORTATION. THE AMBIENT TEMPERATURE FOR NORMAL OPERATING IS 25°C. DISPOSAL OF A BATTERY INTO FIRE OR A HOT OVEN, OR MECHANICALLY CRUSHING OR CUTTING OF A BATTERY, THAT CAN RESULT IN AN EXPLOSION. LEAVING A BATTERY IN AN EXTREMELY HIGH TEMPERATURE SURROUNDING ENVIRONMENT THAT CAN RESULT IN AN EXPLOSION OR THE LEAKAGE OF FLAMMABLE LIQUID OR GAS.

MADE IN CHINA

CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567



All characters and elements © & ™ Warner Bros. Entertainment Inc.
WB SHIELD: © & ™ WBEI. Publishing Rights © JKR. (s26)



K: 43-755-479 | T: 72-821-534