

110 mm

78 mm



Operating Instructions DIGITAL CAMERA



K: 43-756-117 | T: 72-824-849
Model: JLR-82336

- Includes:**
- 1 x Camera
 - 1 x Strap
 - 1 x USB A-C Cable
 - 1 x Instruction Manual

Please read this manual carefully before using this product and retain it for future reference.

Product Specifications:


Screen: 2 inches TFT screen
Front/Rear Camera: 0.3MP
Video file format: .AVI
Photo file format: .jpg
Music file format: .mp3
Input Rating: 5V – 1A
Maximum interpolated resolution: 1080P video / 48M photo
Storage: Supports microSD card up to 32GB (not included)
Battery: 3.7V,400mAh rechargeable lithium-ion battery (non-replaceable)

Important Safety Information

- › This product contains a **rechargeable lithium-ion battery** (non-replaceable).
- › **Small parts may present a choking hazard.**
- › **Adult supervision required at all times.**
- › Do not disassemble, crush, puncture, or modify the product or battery.
- › Do not expose the product to high temperatures, direct sunlight, or fire.
- › Do not charge the device unattended or near flammable materials.
- › Do not leave the device connected to power after it is fully charged.
- › Avoid **allowing** the battery to remain at a very low charge level for extended periods.
- › Avoid dropping or subjecting the product to strong impact.
- › Do not use the product if it is damaged or malfunctioning.
- › Dispose of the product in accordance with local regulations.
- › Use a certified 5V/1A USB power adapter (not included) that complies with local safety standards.
- › The power supply (not included) used with the camera shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.

⚠ WARNING: STRANGULATION HAZARD.
NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.
LONG CORD.


Product Diagram

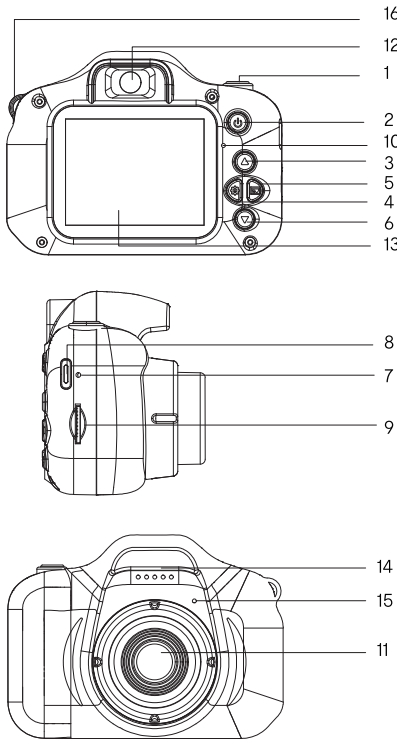

No	Button/Part	Function
1	Shutter Button	Capture photo, Start/ stop recording, Settings confirmation
2	Power Button	Long press: Power on/off Short press: Return to previous menu
3-6	Navigation Keys	Navigate menus, adjust settings, zoom in/out, and control playback.
7	Reset Button	Push with a pin if device is unresponsive
8	USB Type-C Port	Charging with provided cable. Use certified 5V/1A (or higher) adapter (not included).
9	Memory Card Slot	Up to 32GB microSD (Not included)
10	Indicator Light	Blue: power on Red: charging
11	Front Lens	For capturing scenery and friends
12	Rear Lens	For taking selfies
13	Display Screen	2.0" TFT
14	Speaker	Audio output
15	Microphone	Records audio for videos.
16	Lanyard Hole	Attach wrist strap

Operation Instructions

Insert microSD Memory Card (Not Included)

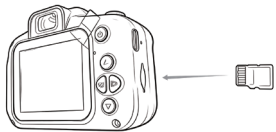

WARNING!

MEMORY CARD IS SMALL PART WHICH MAY BE A CHOKING HAZARD. DONOT PUT INTO THE MOUTH.

Usage tips:

- Please plug the TF card as picture showing and insert the TF card in incorrect direction could damage the TF card slot.
- › Power rule: Card must be inserted before powering on to capture media.
 - › Supports 32GB microSD (TF) cards (Class 10 or higher, purchased separately).
 - › Format the card in the camera before first use.
 - › Do not remove the card while the device is on, to prevent damage or data loss.
 - › Video recording: Maximum 3 minutes per clip (or until card is full).

Troubleshooting:

- › If card isn't detected:
Power off device.
- › Reinsert card, ensuring correct orientation.
- › Use only compatible cards (exFAT/FAT32 formatted).

Charge the Product

- › Charge fully before first use.
- › Use a certified 5V/1A USB (or higher), power adaptor (not included). Only use the supplied charging cable.
- › The indicator light is red during charging and turns off when fully charged
- › Charging time is approximately 2 hours
- › Charge the device at least once every month to maintain battery performance. Prolonged storage at low charge may reduce battery performance.

Power on/off

- › Insert a memory card before using the camera.
- › Long press the power button to turn the device on or off.

How to take photos

- › On the home screen, press the Navigation buttons to select Photo mode.
- › Press the Shutter button to take a photo.
- › Press the Left button to activate the 5-second self-timer.
- › Press the Right button to switch between the front and rear cameras.
- › Press the Up/Down buttons to select filters & special effects
- › Long press the Up/Down buttons to zoom in or out.

How to record a video

- › On the home screen, press the Navigation buttons to select Video mode.
- › Press the Shutter button to start recording.
- › Press the Shutter button again to stop recording.
- › Press the Left button to switch recording speed (Slow/ Fast).
- › Press the Right button to switch between the front and rear cameras.
- › Press the Up/Down buttons to select filters.
- › Long press and hold the Up/Down buttons to zoom in or out.

How to view or delete files

- › On the home screen, press the Navigation buttons to select Photo Album.
- › Use the Left/Right buttons to browse files.
- › For videos, press the Shutter button to play or pause.
- › To delete a file, press the Up (Delete Current) /Down (Delete All) button and confirm with OK.

Note: Deleted files cannot be restored. Please back up important files.

How to Enter the Settings Menu/Save Settings

- › On the home screen, press the Navigation buttons to select System Settings.
- › Select a function and press the Shutter button to confirm.
- › Press the Power button to exit the settings menu.

Menu – [System Settings]

Function	More
Image Quality	Default: 24m Option: 1M/ 2M/ 3M/ 5M/ 8M/ 10M/ 12M/ 16M/ 18M/ 20M/ 24M / 40M/ 48M. Set as you need.
Self-Timer	Default: Off Option: Off/ 3S/ 5S/ 10S. Set as you need.
Video Size	Default: 1080P Option: VGA/ 720P/ 1080P. Set as you need.
Cyclic Record	Default: 3min Option: 3Min/ 5Min/ 10Min. Set as you need. Note: Recording will stop once the memory card is full.
Date Stamp	Default: On Option: On/Off. Set as you need.
Language	Default: English Total is 14 Languages. Set as you need.
Brightness	Default: 8 Range: 1-8. Set as you need.
Auto Power Off	Default: 5Min Option: Off/1 Min/ 3 Min/ 5 Min. Set as you need.
Screen Savers	Default: 3Min Option: Off/1 Min/ 3 Min. Set as you need.

Volume	Default: 8 Range: 0-8. Set as you need.
Format	Option: OK/ Cancel Browse the submenus down, select and enter [Format], short press [OK] to confirm. Note: Formatting will delete all files and cannot be recovered, please back up and use with caution.
Date/Time	Allows you to set the system date and time. Date format: YY/MM/DD Time format: HH/MM/SS
Default settings	Option: OK/ Cancel If the camera is working abnormally due to incorrect settings, use this feature to restore the camera to its default settings.
Version	Version: YWT-30-26/03 The date will update if software is updated.

MUSIC mode

- › On the home screen, press the Navigation buttons to select Music mode.
- › Press the Shutter button to play or pause music.
- › Press the Left/Right buttons to switch songs.
- › Press the Up/Down buttons to adjust volume.
- › Press the Power button to exit.

Note:

- › After inserting the card for the first time, the system will automatically create an MP3 folder on the MicroSD card.
- › MP3 files must be copied into the MP3 folder on the MicroSD card before use

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided.

This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

THE POWERPUFF GIRLS and all related characters and elements © & ™ Cartoon Network. WB SHIELD: ©& ™ WBEL. (s26)



MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567