

78 mm

110 mm

anko

2 in 1 Thermal Printer & Digital Camera

Operating Instructions

Please read this manual carefully before using this product and retain it for future reference.

Includes:

- 1 x Camera
- 1 x Wrist Strap
- 1 x USB A-C Cable
- 1 x Instruction Manual
- 3 x Rolls of Thermal Print Paper



K: 43756223 | T: 72824740
Model: JLR-80786


Product Specifications:

Screen: 2.4 inches
Front Camera: 0.3MP
Rear Camera: 0.3MP
Video format: AVI
Photo format: JPG
Music format: MP3
Input Rating: 5V=1A
Photo resolution: 640*480
Battery: 3.7V, 1500mAh rechargeable lithium-ion battery (non-replaceable)
App Support: Compatible with WalkPrint app
Compatible with Android 5.0 or later, iOS 13.0 or later
Storage: Supports microSD card up to 32GB (not included)
Works well with anko:
K: 43478002 | T: 70226676 (sold separately)
K: 43423804 | T: 69607653 (sold separately)

- Avoid allowing the battery to remain at a very low charge level for extended periods.
- Avoid dropping or subjecting the product to strong impact.
- Do not use the product if it is damaged or malfunctioning.
- Dispose of the product in accordance with local regulations.
- Use a certified 5V/1A USB power adapter (not included) that complies with local safety standards.
- The power supply (not included) used with the camera shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it should not be used until the damage has been repaired.




Product Diagram

1. Power button	6. Back button
2. Setting button/ left button	7. Photo/OK/Play/Pause button
3. Up button	8. Rear Camera
4. Down button	9. Display screen
5. Instant Print button/ Right button	

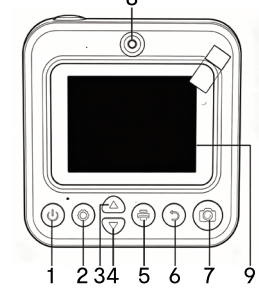


Important Safety Information

- This product contains a rechargeable lithium-ion battery (non-replaceable).
- Small parts may present a choking hazard.
- Adult supervision required at all times.
- Do not disassemble, crush, puncture, or modify the product or battery.
- Do not expose the product to high temperatures, direct sunlight, or fire.
- Do not charge the device unattended or near flammable materials.
- Do not leave the device connected to power after it is fully charged.

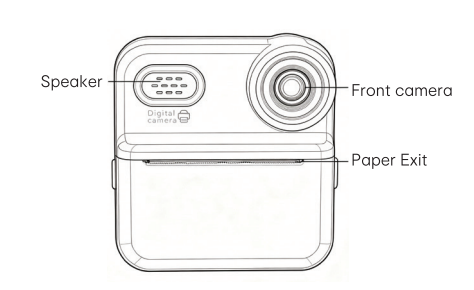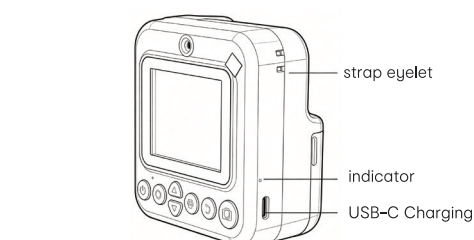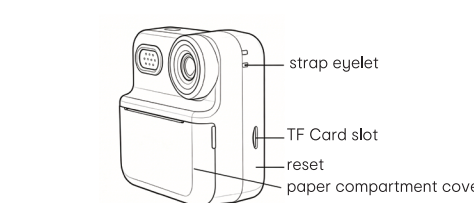

Icons & Buttons Introduction:

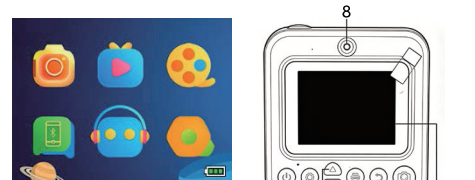

Tablets of buttons:


1. Power button	Short press: toggle screen on/off Long press: power device on/off
2. Setting button/ left button	Short press: Playback/Delete current/all files Photo/Video: Enter settings MP3: Open file browser Games: Move left
3. Up button	Photo: Short press: Select shooting mode(burst/timer) or effect (filter/ frame/ sticker) Long press: Zoom in MP3: Short press: Previous song Long press: Increase volume Playback: Scroll up Settings: Scroll up submenus Games: Move up
4. Down button	Photo: Short press: Select shooting mode or effect (same as Up button) Long press: Zoom out MP3: Short press: Next song Long press: Decrease volume Playback: Scroll down Settings: Scroll down submenus Games: Move down

Operation Instructions

Insert microSD Memory Card

WARNING!
MEMORY CARD IS SMALL PART WHICH MAY BE A CHOKING HAZARD DO NOT PUT INTO THE MOUTH.
ADULT SUPERVISION REQUIRED AT ALL TIMES.

Please plug the microSD card as picture showing and insert the microSD card in incorrect direction could damage the microSD card slot

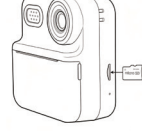

Usage tips:


- Please plug the TF card as picture showing and insert the MicroSD card in incorrect direction could damage the TF card slot.
- Power rule: Card must be inserted before powering on to capture media.
- Supports up to 32GB microSD cards (Class 10 or higher, purchased separately).
- Video recording: Maximum 3 minutes per clip (or until card is full).

Troubleshooting:

- If card isn't detected: Power off device.
- Reinsert card, ensuring correct orientation.
- Use only compatible cards (exFAT/FAT32 formatted).

Install paper

- Secure the paper compartment buckles on both sides and open the cover.
- Insert the print paper roll as shown in the picture, pull out some of the paper, and close the cover.
- Long press power button to turn on the device to use.

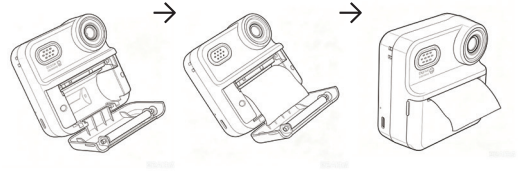


Usage tips:

- Please charge the device before use. It takes approx. 3 hours to fully charge. Only use the provided cable to charge the device.
- When opening the paper compartment, please open it in the direction indicated. Do not use brute force to avoid damaging the machine.
- When experiencing blank prints or paper jam, please check whether the paper roll is installed backwards.
- For correct installation of printing paper, please refer to picture above.
- You need to open the paper compartment and leave the roll paper extending about 1 inch (around 2.54cm) outside before first printing as shown in the picture above. Then it will print automatically.
- If the device fails to power on/off or becomes unresponsive, insert a toothpick or pin into the reset hole for several seconds. The printer will automatically restart (power off and on). After rebooting, it will restore to factory settings.

Power on/off

- Long press the power button to turn the device on or off.
- After powering on, the screen will display the main page as shown below.
- Press the left / right /up/down buttons to select the desired mode.

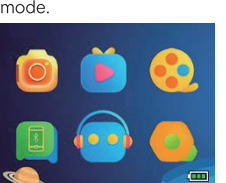

If the device is inactive:

- The screen will automatically turn off after a period of inactivity. You can go to [Settings]-[Screen Saver] to set the screen-off time.
- By default, the device will automatically shut down after 5 minutes. You can go to [Settings]-[Auto Power Off] to set the shutdown timer.

Accessing the settings menu

After powering on
Select setting icon to enter setting menu.
Alternatively, short-press the [] button to directly access the settings menu in Photo/Video mode.




Within the settings menu:

- Press [] to navigate up/down.
- Press [] to confirm selections or enter submenus.
- Press [] to return to the previous menu.
- Note: The [] button cannot open the settings menu directly in File Browsing or MP3 mode.

Language Setting




Date & Time Setting

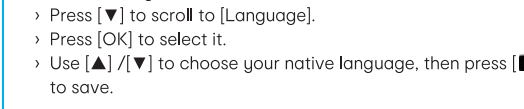

- Navigate to [Date/Time] using [], then press [].
- Press [] to switch between fields [Year/ Month/ Day/ Hour/ Minute/ Second].
- Use []/[] to adjust values and press [] to confirm.


Formatting Memory card

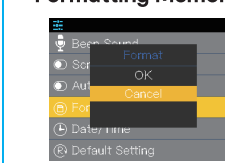

Warning:

- Formatting erases all files. Back up your data first.
- All photos and videos will be deleted. Proceed with caution.
- Always format a new memory card in the device before initial use. (Otherwise, it may not function properly.)

Print Settings

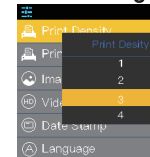


- Print Modes: Gray Print/ Dot Print
- Density Levels: 7 levels (1-7)
- Defaults:
- Mode: Gray Print
- Adjust settings based on your printing requirements.

Settings Menu Specifications

Print Density	Range: 1 to 7 (7 levels total) Level 1: Weakest contrast Level 7: Strongest contrast Lower values reduce image contrast; higher values increase it. Adjust according to your needs.
Print Modes	Gray Print Dot Print
Image Quality	Set photo resolution(megapixels): 1M, 3M, 5M, 8M, 12M, 20M, 48M
Video Resolution	1080P (displays FHD on screen) 720P (displays HD on screen) Note: Maximum recording time per video: 3 minutes. Recording continues until the memory card is full.

Date Stamp	On: Displays timestamp on photos Off: Hides timestamp
Language	Multiple languages options available
Beep Sound	On: Enables button tone Off: Disables button tone
Screen Savers	Set screen auto-off timer (during inactivity): Off: Screen always on 3mins/5mins/10mins: Turns off after specified idle time.
Auto Power Off	Set device auto-shutdown timer (during inactivity): Off: No automatic shutdown 3mins/5mins: Shuts down after specified idle time.
Format	OK: Erases all data (Back up files first) Cancel: Exits without formatting WARNING: This will permanently delete all data.
Date/Time	Set system time
Default Setting	OK: Reset all settings Cancel: Exits without resetting
Version	Display device firmware version

Enter photo mode

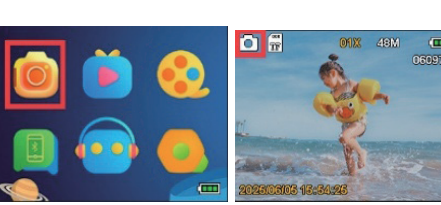

After switching on, the device displays the main page. Select camera icon and press [] to enter photo mode. Press [] to return to the main menu.

Taking Photos & Printing

After entering the photo mode, short press [] button to take a photo or print after taking the photo

After entering photo mode:

Frames/stickers/filters/picture effects / Time-lapse/Burst shooting: short press the []/[] buttons to switch.

In Photo mode:

- Press [] to take a photo.
- Press [] to toggle instant printing (icon appears on screen)
- Press [] to access print density/mode settings
- Press [] = File Browser to view saved photos/videos.

Additional Controls:

- Switch front and rear camera: long press the [] button.
- Zoom (1x-16x): Long press [] (zoom in) or [] (zoom out).
- Note: Zoom unavailable in video mode.

Frames/stickers/filters/picture effects

After entering the Photo mode, short press the []/[] buttons to select frames/ stickers/ filters/ pictures effects.

Effects & Modes:

- Press []/[] to cycle through:
- 22 Frames/Stickers
- 5 Filters
- 4 Picture Effects
- Time-Lapse/Burst Mode
- Note: Effects unavailable in video mode

Timer & Burst Shooting

Select mode via []/[].


Icons appear:

- Timer: Press the [] to set delay (3s / 5s / 10s / 15s).
- Burst Shooting: Press [] to set shots.
- Standard Burst: (3 shots / 5 shots / 10 shots / 15 shots)
- Delayed Burst: 5s → 3shots / 5shots / 10shots / 15shots
- Note: Unavailable in video mode.

Video Recording

Enter video mode

Main menu → Video icon → Press []

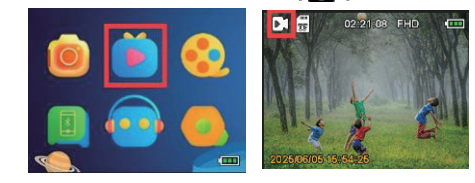

Recording

- Press [] to start/stop and save recording.
- Switch cameras: Long press [] (when not recording).


Warning:

- Insert memory card before use.
- Max 3 minutes per video (records until card full).
- No zoom/effects during recording.
- Accidental press: Short Pressing [] or [] will also save the video and exit recording.

File Management

Access playback

Main menu → Playback icon → Press []

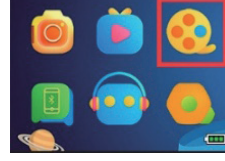


Operations:

- Browse files: Press [] or []
- Play/pause video: Press []
- Print photo: Press []
- Delete: Press [] to Select [Delete Current] or [Delete All]
- Supported formats: Photos (JPG)

MP3 Playback

Main menu → Music icon → Press []

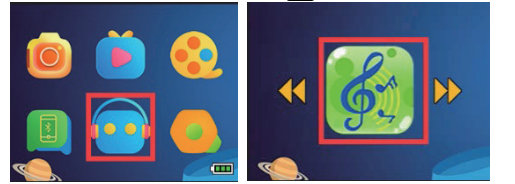

Controls:

- Play/pause: Press []
- Previous/next track: Short Press []/[]
- Adjust volume: long press [] ([]/[]) (+/-)
- Supported format: MP3 only.

Import Songs:


- Remove memory card → Insert into card reader (sold separately).
- Copy MP3 files to card's/MP3 folder.
- Reinsert card into device.

Tips:

- Use card recorder or USB cable to transfers.
- Do not disconnect during transfers.
- Device has no internal storage (card required).

Puzzle Games


Main menu → Game icon → Press []

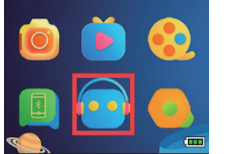

Controls:

- Select game: Press []/[]
- Start game: Press []
- Directional controls: []/[]/[]/[]
- Exit game: Press []

Educational game

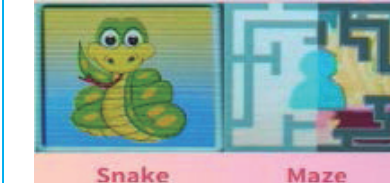

Printing Methods

Instant print

- Enter photo mode.
- Press [] (print icon appears).
- Press [] → Photo prints automatically.


Playback Print

- Enter File Browser → Select photo with []/[].
- Press [] to print.

How to print via WalkPrint app

Download WalkPrint:


Option 1: Search WalkPrint on "Google play" or "App Store" to download the App.

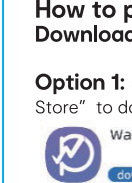

Option 2: Scan the code to download the App
Turn on the device and select the App icon and short press [] to enter in, you will also find the QR code.

Usage tips:

- When opening the app for the first time, you may be prompted to allow location access. Please select "Allow once" or "Allow while using the app". This is required for Wi-Fi connection and proper app operation. If "Don't allow" is selected, the app may not be able to connect to the camera.
- Once permission is granted, it is ok to control the camera from your smartphone. Keep Bluetooth and location turned on when using the app or print docs/images.

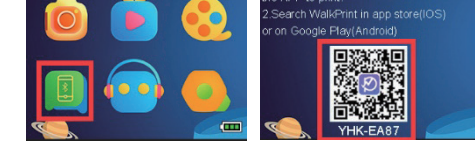

Connecting to the Camera

- Enable Bluetooth connection on your mobile and switch on the camera printer.

- Open the Walk Print App to log in to enter "Equipment selection" / "Printer Choose" page. Select the "Photographer Printing Camera" / "Photo Printer" option to enter main page. You can also click the up right corner printer icon to go back to "Equipment selection" / "Printer Choose" page to choose the device you need.

- Select "Profile" / "Mine" on bottom to enter next page and click "My Printer" option to enter "Bluetooth list".
- In the "Bluetooth list", select the Bluetooth device named "YHK-XXXX", where XXXX can be combination of digits and letters (e.g.: YHK-EA87). Click to connect and the device can be used after successfully connected.

Note:

- Bluetooth must be used, otherwise the printer will not work.
- XXXX contains a combination of letters and numbers
- If your phone shows "No Internet Connection", select "Keep Connection" or "Cancel".
- When opening the app for the first time, you may be prompted to allow location access. Please select "Allow once" or "Allow while using the app". This is required for Wi-Fi connection and proper app operation. If "Don't allow" is selected, the app may not be able to connect to the camera.
- Once permission is granted, it is ok to control the camera from your smartphone. Keep Bluetooth and location turned on when using the app or print docs/images.

Operating the WalkPrint App

Print picture/ Picture print:

- On the Homepage of the APP, select "Print picture" / "Picture print" to enter the printing process
- After entering "Print picture" / "Picture print", you can click "Take a photo" / "Taking pictures" directly print or click "Photos" / "Photo albums" to select from your phone's photo albums to print.
- After entering "Picture processing" / "Picture" to select "Insert" (top right corner) to next step
- After importing the image, you can adjust the size according as you need, and then select [] in the upper right corner to proceed next step.
- After entering the print preview, you can adjust the image density according to your needs, and select [] to print (upper right corner)

The printer will automatically print out images after receiving printing instructions

- On the Homepage, you can click [] to scan QR and print the content you scanned.
- Please stay on this page while you use the App to print and turn on the Bluetooth.

Print New Note:

- Select to enter the New Note interface to print text messages
- Edit and input the text or select more content (e.g.: picture/ sticker/ more) that needs to be printed, click [] to next step (upper right corner)
- After entering the printing interface, you can adjust the font density as needed.
- The printer will automatically print out content after receiving printing instructions
- Please stay on this page while you use the App to print and turn on the Bluetooth.

AI Drawing/ AI Painting

- On the Homepage, you can also select "AI Drawing" / "AI Painting" to print.
- Input the content you want, click "immediately generate", it will output the content you want, and then you can click "print" to enter the "Print preview" page.
- In the Print Preview, you can adjust density according to your needs. Once done, click [] on the up right corner to print.
- Please stay on this page while you use the App to print and turn on the Bluetooth.

Print Templates/Charge list

- Enter the "Templates"/"Charge list" option
- Select frame from Festive/To do list/Fun/Frame to print as you need.
- Please stay on this page while you use the App to print and turn on the Bluetooth.

Print Labels/Label printing

- Open Homepage and enter "Labels/ Label printing" interface.
- Select "Labels/ Label printing" from Home/Life style/ Decoration/ Mon& Kids/ Medicine to print as you need.
- Please stay on this page while you use the App to print and turn on the Bluetooth.

Types of labels:

- Home: Storage Labeling/ Medication Labeling/ Folder Labeling/ Container Labeling/ Electronics Labeling/ Kitchen Material Labeling
- Life style: Dried Goods Labeling/ Ingredients Labeling/ Plant Labeling/ Skin Care Labeling
- Decoration: Diary/Scrapbook Labeling/ Present Labeling/ Photo Album Labeling
- Mon & Kids: Storage Labeling/ Item Labeling
- Medicine: Medication Labeling

Other functions:

Images factory	Click Image option to select Emoji/ LineArt/ Transportation/ Anime/ Lovely/ Kinglist/ Stickers options to print
Sketch/ The sketch	Take a photo to print by sketch effect Choose from Photo album to print by sketch effect

Banners	Select from Image library to print by sketch effect Click Banners option, input and edit content to print as you need
Horizontal lock/ Horizontal orientation	Click Horizontal lock option, input and edit content to print as you need
OCR	Take photo directly or select photo from photo album to scan and convert to words/numbers to print
Voice note	Click Voice note Record audio up to as you want and it can up to 60 seconds Convert it into a QR code and print it out. Use [] in the App to scan it to play.
Web	Click web option, input the website to print current page or whole page as you need

Print other documents (All/word/pdf/txt) by this app

- Open the file (word/pdf/txt/others) which you want to print
- Select "Open in other app"
- Select "WalkPrint" to print as you need
- Note: The file will be saved in All after you printed by this App and you can select the file to open/delete as you need.
- Click experience to select the picture you want to print.

Experience/ Experience pavilion

Search images(image)

Drafts/ Historical note

Power supply

Before first use, please fully charge the device

- Use a certified 5V/1A USB power adaptor (not included). Only use the supplied charging cable.
- The indicator light is red during charging and turns off when fully charged
- Charging time is approximately 3 hours
- Charge the device at least once every month to maintain battery performance. Prolonged storage at low charge may reduce battery performance.
- It can't print during charging.
- It can't print with low battery.

Trouble shooting

Problem	Possible cause	Solution
Cannot turn on the camera	Battery low	Charging the product
Suddenly black screen	Power saving enabled / Battery low	Restart/ Charge the product
Can't record video or take pictures	Memory card not formatted	Format the memory card
	Memory card speed is too slow	Replace the memory card with a speed of Class 10 or higher
	Memory card write protected	Remove write protection
Prompt memory card error	Memory card protection	Release memory card protection
	The memory card format is wrong/The memory card is damaged	Format the memory card or replace it with a qualified memory card

Photos/ videos are out of color	Wrong settings of camera parameters such as Effect/ Exposure	Set parameters correctly. If you don't know the settings, please restore the Factory settings.
Connection to the computer is abnormal	Wrong connection or damaged USB cable	Reconnect or replace the USB cable
Can't connect Bluetooth	Don't turn on Bluetooth	Enable Bluetooth connection on your mobile and click WalkPrint APP to connect the Bluetooth
Can't print by App	Didn't stay on the APP page.	Always stay on the print page of the printer during usage.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided.

This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you have any cybersecurity-related concerns or queries, please contact us online via our Contact Us page at <https://www.kmart.com.au/contact-us/> or reach us by phone using the numbers listed below.



MADE IN CHINA
CUSTOMER SERVICE:
KMAAT AU: 1800 124 125
KMAAT NZ: 0800 945 995
TARGET AU: 1800 755 567

It is declared that this statement of compliance has been prepared by, or on behalf of, the manufacturer of the product listed in the table above and is accurate at the date of issue of 17 June 2025.

Prepared by or on behalf of Knorr Australia Limited

17 June 2025

(Name, function and signature of the signatory of the manufacturer)

(Place and date of issue of the statement of compliance)