 


Instruction Manual

Hammock Chair

Keycode: 43756919

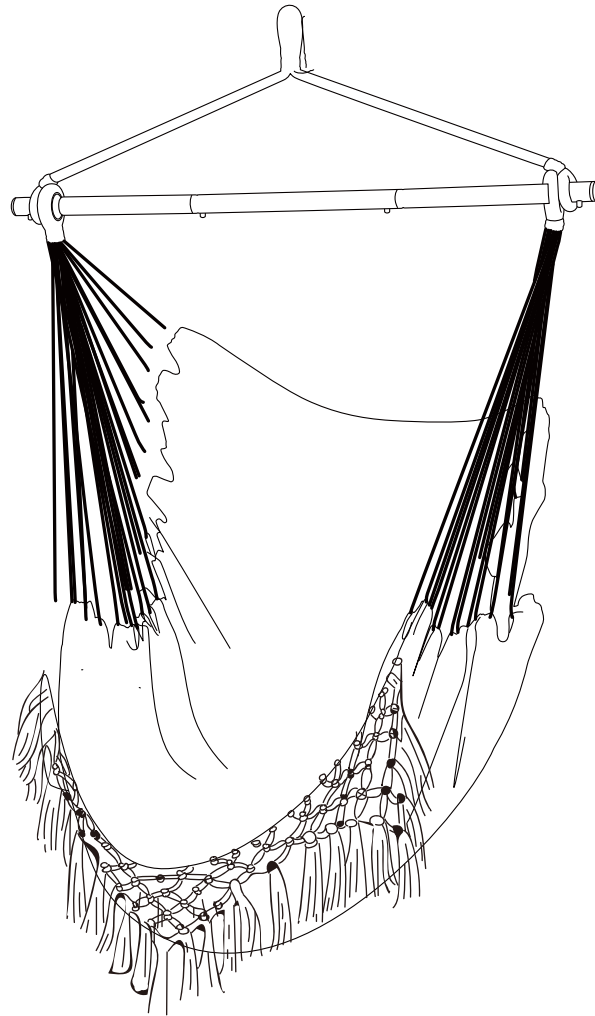


IMPORTANT: This instruction manual contains important safety, installation, and care information. Please read carefully before use and keep for future reference.


PARTS LIST:




A. Hammock Chair
Fabric x 1

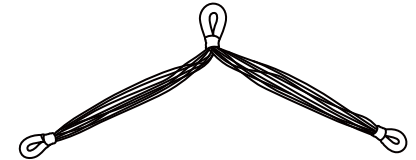

 B. Support
Ropes x 1



 C. Side Pole x 2




D. Middle Connect
Pole x 1

Installation Instructions


△ Fixing hardware is not included. Appropriate installation hardware must be selected based on the installation surface. This hammock chair must only be installed onto a solid structural support such as a concrete ceiling, solid timber beam, or steel frame. Do not install into plasterboard, hollow ceilings, weak beams, or temporary structures.

Assembly Steps:

Step 1: Connect both side poles (C) to the middle connecting pole (D) until the clip buttons lock securely into place.

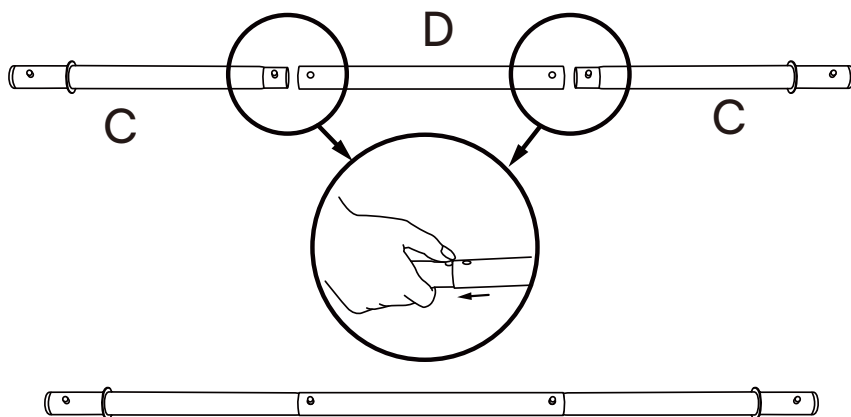

Step 2: Attach the hammock chair fabric (A) evenly to both sides of the pole assembly.

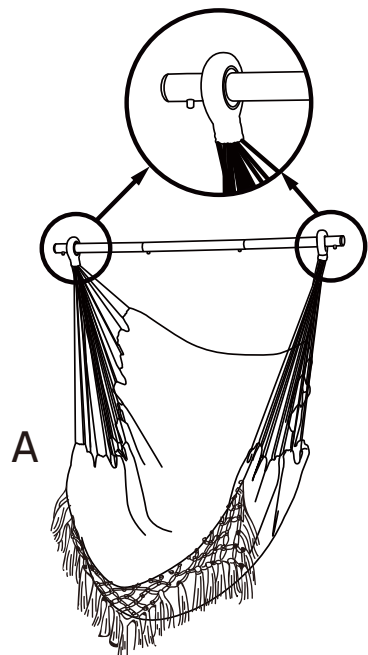

Step 3: Secure the support ropes (B) to both sides of the pole to support and stabilise the fabric.



Step 4: Attach the fully assembled hammock chair to a suitable ceiling fixing point using appropriately rated hardware. Ensure the installation point can support at least 100 kg, plus additional load caused by movement. Maintain sufficient clearance around and below the chair to avoid contact with walls or objects during use. If you are unsure about installation, consult a qualified tradesperson.

Warning/Caution:

- ⚠ Maximum weight capacity: 100 kg. Do not exceed this limit.
- ⚠ This product is designed for seated use only. Do not stand, climb, jump, or use as a swing.
- ⚠ Do not use the chair if any part is damaged, loose, or shows signs of wear.
- ⚠ Always ensure all connections, ropes, and fixing points are securely installed before each use.
- ⚠ Do not allow children, infants, or pets to use the chair unsupervised.
- ⚠ This product is not a toy.
- ⚠ Sudden movement or excessive swinging may cause loss of balance or structural failure.
- ⚠ Install only onto a solid structural support capable of safely supporting the load.
- ⚠ For indoor or covered outdoor use only. Prolonged exposure to rain, moisture, or direct sunlight may reduce product lifespan.
- ⚠ Do not install above hard surfaces without adequate clearance. Risk of injury from falling.
- ⚠ Keep away from fire and heat sources.

Washing Label:



- › HAND WASH 30°
- › DO NOT BLEACH
- › DO NOT TUMBLE DRY
- › DO NOT IRON
- › DO NOT DRYCLEAN
- KEEP AWAY FROM FIRE

CARE & MAINTENANCE:

REMOVE THE FABRIC FROM THE POLE ASSEMBLY BEFORE WASHING. HAND WASH ONLY AT 30°C. DO NOT BLEACH, TUMBLE DRY, IRON, OR DRY CLEAN. ALLOW FABRIC TO AIR DRY COMPLETELY BEFORE RE-INSTALLATION. REGULARLY INSPECT FABRIC, ROPES, AND POLES FOR SIGNS OF WEAR OR DAMAGE. STORE INDOORS WHEN NOT IN USE TO EXTEND PRODUCT LIFESPAN.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567